




OPERATORS MANUAL

D-NET DIESEL GENERATORS

7.6 EDT 60Hz | 6.5 EDT 60Hz
5.7 EDT 50Hz | 5.0 EDT 50Hz

Single Phase

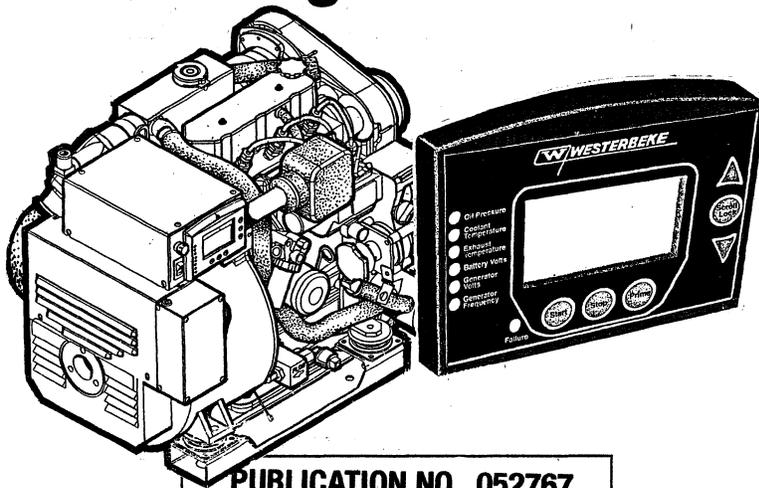

PUBLICATION NO. 052767
REVISION 4
APRIL 2015



WESTERBEKE CORPORATION • 150 JOHN HANCOCK ROAD
MYLES STANDISH INDUSTRIAL PARK • TAUNTON MA 02780
WEBSITE: WWW.WESTERBEKE.COM



Member National Marine Manufacturers Association

**CALIFORNIA
PROPOSITION 65 WARNING**

Marine diesel and gasoline engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

⚠ WARNING

Exhaust gasses contain Carbon Monoxide, an odorless and colorless gas. Carbon Monoxide is poisonous and can cause unconsciousness and death. Symptoms of Carbon Monoxide exposure can include:

- **Dizziness**
- **Throbbing in Temples**
- **Nausea**
- **Muscular Twitching**
- **Headache**
- **Vomiting**
- **Weakness and Sleepiness**
- **Inability to Think Coherently**

IF YOU OR ANYONE ELSE EXPERIENCE ANY OF THESE SYMPTOMS, GET OUT INTO THE FRESH AIR IMMEDIATELY. If symptoms persist, seek medical attention. Shut down the unit and do not restart until it has been inspected and repaired.



A WARNING DECAL is provided by WESTERBEKE and should be fixed to a bulkhead near your engine or generator.

WESTERBEKE also recommends installing CARBON MONOXIDE DETECTORS near the engine room. They are inexpensive and easily obtainable at your local hardware store.

SAFETY INSTRUCTIONS

INTRODUCTION

Read this safety manual carefully. Most accidents are caused by failure to follow fundamental rules and precautions. Know when dangerous conditions exist and take the necessary precautions to protect yourself, your personnel, and your machinery.

The following safety instructions are in compliance with the American Boat and Yacht Council (ABYC) standards.

PREVENT ELECTRIC SHOCK

⚠ WARNING: Do not touch AC electrical connections while engine is running. Lethal voltage is present at these connections!

- Do not operate this machinery without electrical enclosures and covers in place.
- Shut off electrical power before accessing electrical equipment.
- Use insulated mats whenever working on electrical equipment.
- Make sure your clothing and skin are dry, not damp (particularly shoes) when handling electrical equipment.
- Remove wristwatch and all jewelry when working on electrical equipment.

PREVENT BURNS — HOT ENGINE

⚠ WARNING: Do not touch hot engine parts or exhaust system components. A running engine gets very hot!

- Monitor engine antifreeze coolant level at the plastic coolant recovery tank and periodically at the filler cap location on the water jacketed exhaust manifold, but only when the engine is COLD.

⚠ WARNING: Steam can cause injury or death!

- In case of an engine overheat, allow the engine to cool before touching the engine or checking the coolant.

PREVENT BURNS — FIRE

⚠ WARNING: Fire can cause injury or death!

- Prevent flash fires. Do not smoke or permit flames or sparks to occur near the fuel injector, fuel line, filter, fuel pump; or other potential sources of spilled fuel or fuel vapors. Use a suitable container to catch all fuel when removing the fuel lines or fuel filters.
- Do not operate with the air cleaner/silencer removed. Backfire can cause severe injury or death.
- Do not smoke or permit flames or sparks to occur near the fuel system. Keep the compartment and the engine clean and free of debris to minimize the chances of fire. Wipe up all spilled fuel and engine oil.
- Be aware — diesel fuel will burn.

PREVENT BURNS — EXPLOSION

⚠ WARNING: Explosions from fuel vapors can cause injury or death!

- Follow re-fueling safety instructions. Keep the vessel's hatches closed when fueling. Open and ventilate the cabin after fueling. Check below for fumes/vapor before running the blower. Run the blower per four minutes before starting your engine.
- All fuel vapors are highly explosive. Use extreme care when handling and storing fuels. Store fuel in a well-ventilated area away from spark-producing equipment and out of the reach of children.
- Do not fill the fuel tank(s) while the engine while it is running.
- Shut off the fuel service valve at the engine when servicing the fuel system. Take care in catching any fuel that might spill. DO NOT allow any smoking, open flames, or other sources of fire near the fuel system or engine when servicing. Ensure proper ventilation exists when servicing the fuel system.
- Do not alter or modify the fuel system.
- Be sure all fuel supplies have a positive shutoff valve.
- Be certain fuel line fittings are adequately tightened and free of leaks.
- Make sure a fire extinguisher is installed nearby and is properly maintained. Be familiar with its proper use. Extinguishers rated ABC by the NFPA are appropriate for all applications encountered in this environment.

SAFETY INSTRUCTIONS

ACCIDENTAL STARTING

⚠ WARNING: Accidental starting can cause injury or death!

- Disconnect the battery cables before servicing the engine/generator. Remove the negative lead first and reconnect it last.
- Make certain all personnel are clear of the engine before starting.
- Make certain all covers, guards, and hatches are re-installed before starting the engine.

BATTERY EXPLOSION

⚠ WARNING: Battery explosion can cause injury or death!

- Do not smoke or allow an open flame near the battery being serviced. Lead acid batteries emit hydrogen, a highly explosive gas, which can be ignited by electrical arcing or by lit tobacco products. Shut off all electrical equipment in the vicinity to prevent electrical arcing during servicing.
- Never connect the negative (-) battery cable to the positive (+) connection terminal of the starter solenoid. Do not test the battery condition by shorting the terminals together. Sparks could ignite battery gases or fuel vapors. Ventilate any compartment containing batteries to prevent accumulation of explosive gases. To avoid sparks, do not disturb the battery charger connections while the battery is being charged.
- Avoid contacting the terminals with tools, etc., to prevent burns or sparks that could cause an explosion. Remove wristwatch, rings, and any other jewelry before handling the battery.
- Always turn the battery charger off before disconnecting the battery connections. Remove the negative lead first and reconnect it last when disconnecting the battery.

BATTERY ACID

⚠ WARNING: Sulfuric acid in batteries can cause severe injury or death!

- When servicing the battery or checking the electrolyte level, wear rubber gloves, a rubber apron, and eye protection. Batteries contain sulfuric acid which is destructive. If it comes in contact with your skin, wash it off at once with water. Acid may splash on the skin or into the eyes inadvertently when removing electrolyte caps.

TOXIC EXHAUST GASES

⚠ WARNING: Carbon monoxide (CO) is a deadly gas!

- Ensure that the exhaust system is adequate to expel gases discharged from the engine. Check the exhaust system regularly for leaks and make sure the exhaust manifolds/water-injected elbow is securely attached.
- Be sure the unit and its surroundings are well ventilated. Run blowers when running the generator set or engine.
- Do not run the generator set or engine unless the boat is equipped with a functioning marine carbon monoxide detector that complies with ABYCA-24. Consult your boat builder or dealer for installation of approved detectors.
- For additional information refer to ABYC T-22 (educational information on Carbon Monoxide).

⚠ WARNING: Carbon monoxide (CO) is an invisible odorless gas. Inhalation produces flu-like symptoms, nausea or death!

- Do not use copper tubing in diesel exhaust systems. Diesel fumes can rapidly destroy copper tubing in exhaust systems. Exhaust sulfur causes rapid deterioration of copper tubing resulting in exhaust/water leakage.
- Do not install exhaust outlet where exhaust can be drawn through portholes, vents, or air conditioners. If the engine exhaust discharge outlet is near the waterline, water could enter the exhaust discharge outlet and close or restrict the flow of exhaust. Avoid overloading the craft.
- Although diesel engine exhaust gases are not as toxic as exhaust fumes from gasoline engines, carbon monoxide gas is present in diesel exhaust fumes. Some of the symptoms or signs of carbon monoxide inhalation or poisoning are:
 - Vomiting Inability to think coherently
 - Dizziness Throbbing in temples
 - Headache Muscular twitching
 - Nausea Weakness and sleepiness

AVOID MOVING PARTS

⚠ WARNING: Rotating parts can cause injury or death!

- Do not service the engine while it is running. If a situation arises in which it is absolutely necessary to make operating adjustments, use extreme care to avoid touching moving parts and hot exhaust system components.

SAFETY INSTRUCTIONS

- Do not wear loose clothing or jewelry when servicing equipment; avoid wearing loose jackets, shirts, sleeves, rings, necklaces or bracelets that could be caught in moving parts.
- Make sure all attaching hardware is properly tightened. Keep protective shields and guards in their respective places at all times.
- Do not check fluid levels or the drive belt's tension while the engine is operating.
- Stay clear of the drive shaft and the transmission coupling when the engine is running; hair and clothing can easily be caught in these rotating parts.

HAZARDOUS NOISE

 **WARNING: High noise levels can cause hearing loss!**

- Never operate an engine without its muffler installed.
- Do not run an engine with the air intake (silencer) removed.

 **WARNING: Do not work on machinery when you are mentally or physically incapacitated by fatigue!**

OPERATORS MANUAL

Many of the preceding safety tips and warnings are repeated in your Operators Manual along with other cautions and notes to highlight critical information. Read your manual carefully, maintain your equipment, and follow all safety procedures.

GASOLINE ENGINE AND GENERATOR INSTALLATIONS

Preparations to install an engine should begin with a thorough examination of the American Boat and Yacht Council's (ABYC) standards. These standards are a combination of sources including the USCG and the NFPA.

Sections of the ABYC standards of particular interest are:

- H-32 Ventilation for boats using diesel fuel
- H-33 Diesel Fuel Systems
- P-1 Installation of Exhaust Systems for Propulsion and Auxilliary Engines
- P-4 Marine Inboard Engines and Transmissions
- E-11 AC & DC Electrical Systems on Boats
- TA Batteries and Battery Chargers

All installations must comply with the Federal Code of Regulations (FCR).

ABYC, NFPA AND USCG PUBLICATIONS FOR INSTALLING MARINE ENGINES AND GENERATORS

Read the following ABYC, NFPA and USCG publications for safety codes and standards. Follow their recommendations when installing your engine,

ABYC (American Boat and Yacht Council)
"Safety Standards for Small Craft"

Order From:

ABYC
613 Third Dstreet, Suite 10
Annapolis, MD 21403
(410) 990-4460
www.abycinc.org

NFPA (National Fire Protection Association)
"Fire Protection Standard for Motor Craft"

Order From:

NFPA
1 Batterymarch Park
P.O. Box 9101
Quincy, MA 02269-9101

USCG (United States Coast Guard)
"CFR 33 AND CFR46"
Code of Federal Regulations

Order From:

U.S. Government Printing Office
Washington, D.C. 20404

INSTALLATION

When installing WESTERBEKE engines and generators it is important that strict attention be paid to the following information:

CODES AND REGULATIONS


Strict federal regulations, ABYC guidelines, and safety codes must be complied with when installing engines and generators in a marine environment.

SIPHON-BREAK

For installations where the exhaust manifold/water injected exhaust elbow is close to or will be below the vessel's waterline, provisions must be made to install a siphon-break in the raw water supply hose to the exhaust elbow. This hose must be looped a minimum of 20" above the vessel's waterline. *Failure to use a siphon-break when the exhaust manifold injection port is at or below the load waterline will result in raw water damage to the engine and possible flooding of the boat.*

If you have any doubt about the position of the water-injected exhaust elbow relative to the vessel's waterline under the vessel's various operating conditions, *install a siphon-break.*

NOTE: *A siphon-break requires periodic inspection and cleaning to ensure proper operation. Failure to properly maintain a siphon-break can result in catastrophic engine damage. Consult the siphon-break manufacturer for proper maintenance.*

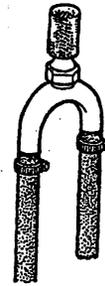

AVAILABLE FROM
YOUR WESTERBEKE
DEALER

SIPHON-BREAK WITH STAINLESS
LOOP

EXHAUST SYSTEM



The exhaust system's hose **MUST** be certified for marine use. Corrugated Marine Exhaust Hose is recommended. The use of this type of hose allows for extreme bends and turns without the need of additional fitting and clamps to accomplish these bends and turns. In this regard, a single length of corrugated exhaust hose can be used. The system **MUST** be designed to prevent the entry of water into the exhaust system under any sea conditions and at any angle of vessels heel.

A detailed Marine Installation Manual covering gasoline and diesel, engines and generators, is supplied with each unit. A pdf is available to download from our website at www.westerbeke.com.

TABLE OF CONTENTS

| | | | |
|--|----|--|----|
| Parts Identification | 2 | Generator Information | 32 |
| Introduction | 3 | BT Generator Single Phase | 33 |
| Fuel, Engine Oil and Engine Coolant | 5 | Circuit Breaker | 33 |
| Preparations for Initial Start-Up | 6 | Wiring Schematic | 33 |
| Digital Control Panel | 7 | Resistance in Ohms | 33 |
| LCD Sequence | 8 | Troubleshooting (Chart) | 34 |
| Digital Control Box | 9 | No Load Voltage | 35 |
| Generator Break-In Procedure | 10 | 12V Excitation | 35 |
| Daily Routine | 10 | Full Load Adjustment | 36 |
| Maintenance Schedule (Chart) | 11 | No-Load Voltage Adjustment | 36 |
| Fuel System | 13 | Generator Components | 36 |
| Cooling System | 14 | BT Troubleshooting | 37 |
| Fresh Water Cooling Circuit | 15 | Testing Windings | 37 |
| Changing the Coolant | 15 | Testing The Bridge Rectifier | 37 |
| Air Intake | 15 | Compound Transformer | 38 |
| Thermostat | 15 | Testing Exciter Rotor | 39 |
| Raw Water Intake Strainer | 16 | Testing Diodes/Thermister | 40 |
| Raw Water Cooling System | 17 | Charging Frequency (50/60Hz) | 41 |
| Heat Exchanger | 17 | Terminal Block Connections (Windings) | 41 |
| Raw Water Pump | 17 | AC Terminal Block Connections | 42 |
| Engine Lubricating Oil | 18 | Shore Power Connections | 43 |
| Engine Oil Change | 18 | 7.6/5.7 Specifications | 44 |
| Starter Motor | 19 | 6.5/5.0 Specifications | 45 |
| Troubleshooting | 20 | Wiring Diagrams | 46 |
| Engine Adjustments | 21 | D-NET 12V #52414 | 46 |
| Drive Belt Adjustment | 21 | D-NET 12V #52793 | 47 |
| Torquing the Cylinder Head Bolts | 21 | D-NET 24V #53477 | 48 |
| Fuel Injectors | 21 | Lay-up and Recommissioning | 49 |
| Generator Frequency | 22 | Domestic Hot Water Heater Connections | 51 |
| Electronic Governor | 22 | Power Take-Off Systems | 53 |
| Valve Clearance Adjustment | 23 | Remote Stop/Start Panel | 54 |
| Spill Timing | 24 | Remote Oil Filter | 55 |
| Oil Pressure | 25 | Metric Conversion Chart | 56 |
| Glow Plugs | 25 | Suggested Spares | 57 |
| Fuel Injectors | 26 | | |
| Engine Troubleshooting (Chart) | 27 | | |
| LCD Troubleshooting (Chart) | 28 | | |
| Alternator Testing | 29 | | |
| Battery Care | 31 | | |

PARTS IDENTIFICATION

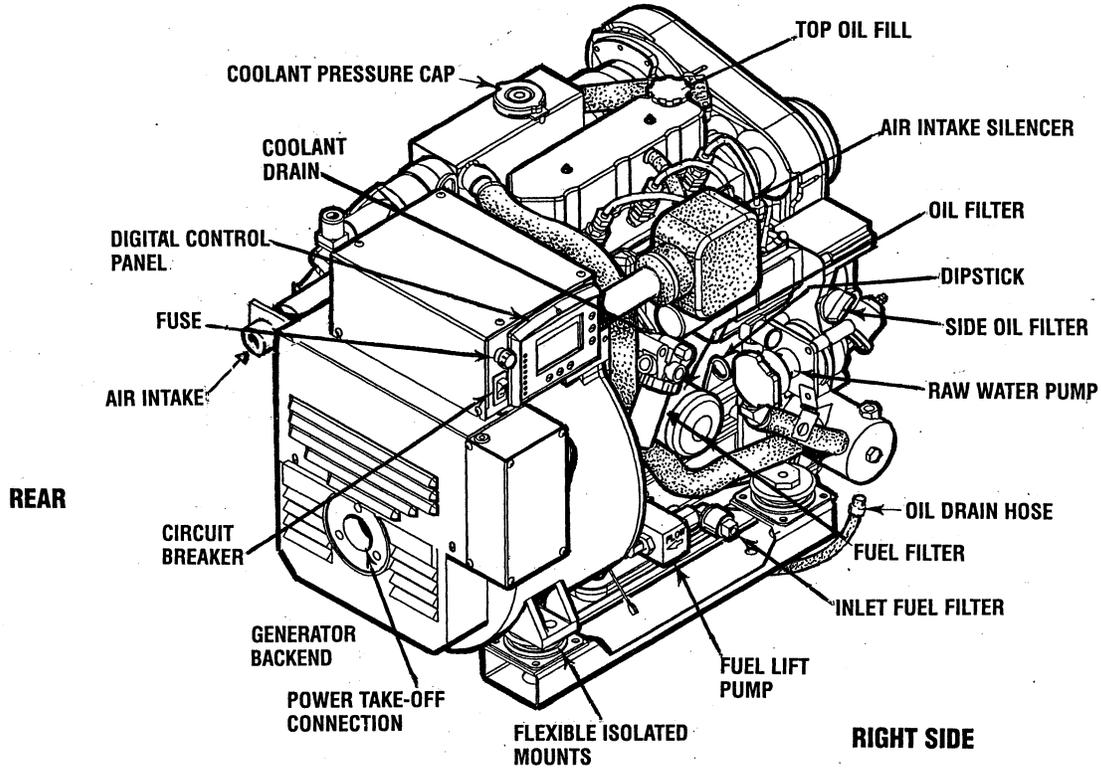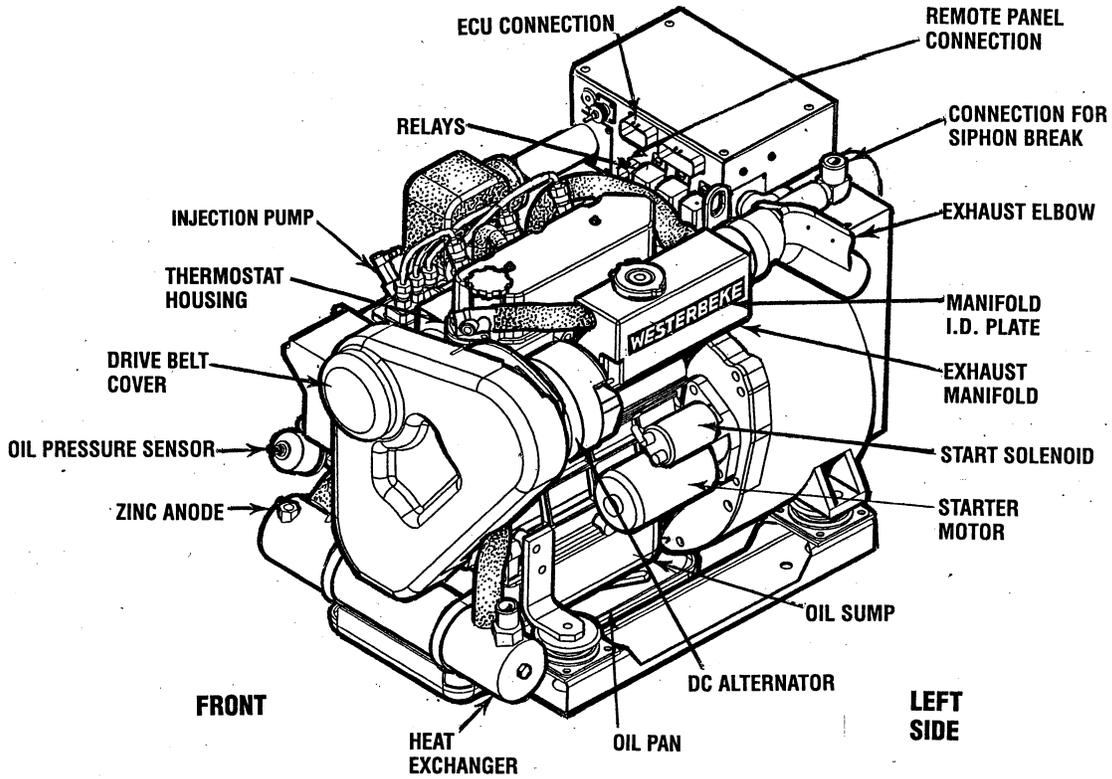

INTRODUCTION

This WESTERBEKE Engine is a product of WESTERBEKE'S long years of experience and advanced technology. We take great pride in the superior durability and dependable performance of our engines and generators. Thank you for selecting WESTERBEKE.

In order to get the full use and benefit from your engine, it is important that you operate and maintain it correctly. This manual is designed to help you do this. Please read this manual carefully and observe all the safety precautions throughout. Should your engine require servicing, contact your nearest WESTERBEKE dealer for assistance.

This is your Operators Manual. A Service Manual is also available in hard copy thru a dealer or in pdf form off our website. If you are planning to install this equipment yourself, review the Installation Manual supplied with this product.

Customer Identification Card



Customer Identification

WESTERBEKE OWNER _____

MAIN STREET _____

HOMETOWN, USA _____

Model _____ Ser. # _____

Expires _____

WARRANTY PROCEDURES

Your WESTERBEKE Warranty Policy Statement is included in the product documentation package. There is a mail in warranty registration card that you can fill out and mail in to register your warranty or go to our website www.westerbeke.com and register your product's warranty online. You should receive a Customer Warranty Registration Card in the mail within 60 days of registering. If you do not, please contact the factory via help@westerbeke.com advising of this and providing your name, unit model, serial number and date unit was put into service.

PRODUCT SOFTWARE

Product software, (tech data, parts lists, manuals, brochures and catalogs), provided from sources other than WESTERBEKE are not within WESTERBEKE's control.

WESTERBEKE customers should also keep in mind the time span between printings of WESTERBEKE product software and the unavoidable existence of earlier WESTERBEKE manuals. In summation, product software provided with WESTERBEKE products, whether from WESTERBEKE or other suppliers, must not and cannot be relied upon exclusively as the definitive authority on the respective product. It not only makes good sense but is imperative that appropriate representatives of WESTERBEKE or the supplier in question be consulted to determine the accuracy and currentness of the product software being consulted by the customer.

NOTES, CAUTIONS AND WARNINGS

As this manual takes you through the operating procedures, maintenance schedules, and troubleshooting of your marine engine, critical information will be highlighted by NOTES, CAUTIONS, and WARNINGS. An explanation follows:

NOTE: *An operating procedure essential to note.*

CAUTION: *Procedures, which if not strictly observed, can result in the damage or destruction of your engine.*

WARNING: *Procedures, which if not properly followed, can result in personal injury or loss of life.*

PROTECTING YOUR INVESTMENT

Care at the factory during assembly and thorough testing have resulted in a WESTERBEKE engine capable of many thousands of hours of dependable service. However, the manufacturer cannot control how or where the engine is installed in the vessel or the manner in which the unit is operated and serviced in the field. This is up to the buyer/owner-operator.

NOTE: *Six important steps to ensure a long engine/generator life.*


- Proper engine installation.
- An efficient, well-designed exhaust system that includes an anti-syphon break to prevent water from entering the engine.
- Changing the engine oil every 250 operating hours.
- Proper maintenance of all engine components according to the maintenance schedule in this manual.
- Use clean, filtered diesel fuel.
- Winterize your engine according to the *LAY-UP AND RECOMMISSIONING* section in this manual.

INTRODUCTION

SERIAL NUMBER LOCATION

The engine's model number and serial number are located on an I.D. plate that is mounted on the side of the water jacketed exhaust manifold. The engine serial number is also stamped into the engine block on the flat surface just outboard of the fuel injection pump. Take time to enter this information on the illustration below. It will provide a quick reference when seeking technical information and/or ordering needed parts.

| SPECIFICATION | 50 HZ. | 60 HZ. |
|--------------------|--------|--------|
| MODEL | | |
| RPM | | |
| KW | | |
| KVA | | |
| VOLTS | | |
| AMPS | | |
| ENG. HP | | |
| ENG. SER. NO. | | |
| GEN. SER. NO. | | |
| PF/PHASE | / | |
| WIRES | | |
| RATING | | |
| INSUL. CLASS | | |
| TEMP. RISE | | |
| BATTERY | | |
| C.I.D. | | |

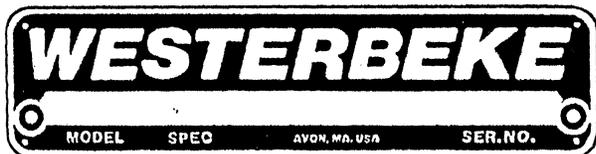

An identification plate on the engine manifold also displays the engine model and serial number.

CARBON MONOXIDE DETECTOR

WESTERBEKE recommends mounting a carbon monoxide detector in the vessels living quarters. Carbon monoxide, even in small amounts, is deadly.

The presence of carbon monoxide indicated an exhaust leak from the engine or generator or from the exhaust elbow/exhaust hose, or the fumes from a nearby vessel are entering your boat.

If carbon monoxide is present, ventilate the area with clean air and correct the problem immediately!

NOTE: A carbon monoxide warning decal has been provided by WESTERBEKE. Affix this decal in a visible position in the engine room.

UNDERSTANDING THE DIESEL ENGINE

The diesel engine closely resembles the gasoline engine, since the mechanism is essentially the same. The cylinders are arranged above a closed crankcase; the crankshaft is of the same general type as that of a gasoline engine; and the diesel engine has the same type of valves, camshaft, pistons, connecting rods and lubricating system.

Therefore, to a great extent, a diesel engine requires the same preventive maintenance as a gasoline engine. The most important factors are proper ventilation and proper maintenance of the fuel, lubricating and cooling systems. Replacement of fuel and lubricating filter elements at the time periods specified is a must, and frequent checking for contamination (that is, water, sediment, etc.) in the fuel system is also essential. Another important factor is the use of the same brand of high detergent diesel lubrication oil designed specifically for diesel engines.

The diesel engine does differ from the gasoline engine, however, in its method of handling and firing of fuel. The carburetor and ignition systems are done away with and in their place is a single component – the fuel injection pump which performs the function of both.

ORDERING PARTS

Whenever replacement/service parts are needed, always provide the generator model number, engine serial number, and generator serial number as they appear on the silver and black name plate located on the generator end. You must provide us with this information so we may properly identify your generator set. In addition, include a complete part description and part number for each part needed (see the separately furnished Parts List). Also insist upon WESTERBEKE packaged parts because *will fit* or generic parts are frequently not made to the same specifications as original equipment.

SPARES AND ACCESSORIES

Certain spares will be needed to support and maintain your WESTERBEKE generator. Your local WESTERBEKE dealer will assist you in preparing an inventory of spare parts. See the *SPARE PARTS* page in this manual. For Engine and Generator Accessories, see the *ACCESSORIES* brochure.

INSTALLATION MANUAL

Publication #43400 provides detailed information for installing generators.

DIESEL FUEL, ENGINE OIL AND ENGINE COOLANT

DIESEL FUEL

USE A DIESEL FUEL WITH A CETANE RATING OF #45 OR HIGHER.
(No. 2-D (SAE J313) diesel fuel according to ASTM D975).

Care Of The Fuel Supply

Use only clean diesel fuel! The clearance of the components in your fuel injection pump is very critical; invisible dirt particles which might pass through the filter can damage these finely finished parts. It is important to buy clean fuel, and keep it clean. The best fuel can be rendered unsatisfactory by careless handling or improper storage facilities. To assure that the fuel going into the tank for your engine's daily use is clean and pure, the following practice is advisable:

Purchase a well-known brand of fuel. Install and regularly service a good, visual-type fuel filter/water separator between the fuel tank and the engine. The Raycor 500 MA or 230 RMAM are good examples of such filters. **10 MICRON FILTER ELEMENT RECOMMENDED**

ENGINE OIL

Use a heavy duty engine oil with an API classification of CF, CG-4, CH-4 or CI-4. Change the engine oil and filter after an initial 50 hours of break-in operation. Then follow the oil and filter change intervals as specified in the **MAINTENANCE SCHEDULE** in this manual. Westerbeke Corporation does not approve or disapprove of the use of synthetic oils. If synthetic oils are used, engine break-in must be performed using conventional oil. Oil change intervals must be as in the **MAINTENANCE SCHEDULE**, not extended because synthetic oils are used.

SAE OIL VISCOSITY GRADES

For all temperatures use SAE 10W-40 or 15W-40.

OIL PRESSURE

The engine's oil pressure, during operation, is indicated by the oil pressure gauge on the instrument panel. During normal operation, the oil pressure will range between 35 and 65 psi 2.5 and 3.9 kg/cm².

NOTE: A newly started, cold engine can have an oil pressure reading upwards of 60 psi (4.2 kg/cm²). A warmed engine can have an oil pressure reading as low as 25 psi (1.8 kg/cm²). These readings will vary depending upon the temperature of the engine, the load placed on the engine, and the RPM's.

ENGINE COOLANT

WESTERBEKE recommends a mixture of 50% antifreeze and 50% distilled water. Distilled water is free from the chemicals that can corrode internal engine surfaces.

The antifreeze performs double duty. It allows the engine to run at proper temperatures by transferring heat away from the engine to the coolant, and lubricates and protects the cooling circuit from rust and corrosion. Look for a good quality antifreeze that contains Supplemental Cooling Additives (SCAs) that keep the antifreeze chemically balanced, crucial to long term protection.

The distilled water and antifreeze should be premixed before being poured into the cooling circuit.

PURCHASING ANTIFREEZE

Select a brand of antifreeze specified for diesel engines. Antifreeze specified for diesel engines contain a special additive to protect against cavitation erosion of the engine's cylinder walls. Prestone and Zerex are two nationally known brands that offer antifreeze specifically for use in diesel engines. Select the pre-mix variety so that the correct mixture will always be added to the cooling system when needed. Change the antifreeze mixture according to the **MAINTENANCE SCHEDULE** in this manual.


MAINTENANCE

Change the engine coolant every five years regardless of the number of operating hours as the chemical additives that protect and lubricate the engine have a limited life.

COOLANT RECOVERY TANK

A coolant recovery tank kit is supplied with each engine or generator. The purpose of this recovery tank is to allow for engine coolant expansion and contraction during engine operation, without the loss of coolant and without introducing air into the cooling system. This kit is provided and must be installed before operating the engine.

NOTE: This tank, with its short run of plastic hose, is best located at or above the level of the engine's manifold, but it can be located below the level of the engine's manifold if the particular installation makes this necessary.

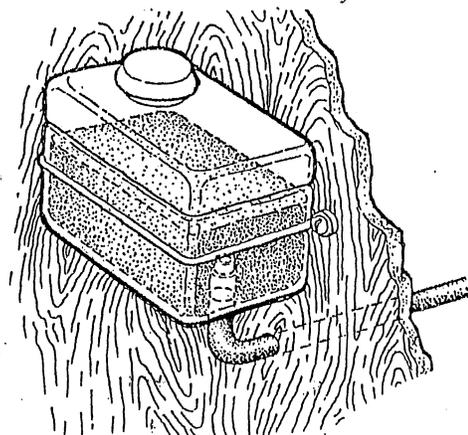

PREPARATIONS FOR INITIAL START-UP

PRESTART INSPECTION

Before starting your generator set for the first time or after a prolonged layoff, check the following items:




- Make certain the cooling water thru-hull petcock is open.
- Check the engine oil level: add oil to maintain the level at the full mark on the dipstick.
- Check the fuel supply and examine the fuel filter/separator bowls for contaminant's.
- Check the DC electrical system. Inspect wire connections and battery cable connections.
- Check load leads for correct connection as specified in the wiring diagrams.
- Examine air inlet and outlet for air flow obstructions.
- Be sure no other generator or utility power is connected to load lines.
- Be sure that in power systems with a neutral line that the neutral is properly grounded (or ungrounded) as the system requires, and that the generator neutral is properly connected to the load neutral. In single phase systems an incomplete or open neutral can supply the wrong line-to-neutral voltage on unbalanced loads.
- Visually examine the unit. Look for loose or missing parts, disconnected wires, unattached hoses, and check threaded connections. Search for any gasoline leaks.

CAUTION: When starting the generator, it is recommended that all AC loads, especially large motors, be switched OFF until the engine has come up to speed and, in cold climates, starts to warm up. This precaution will prevent damage caused by unanticipated operation of the AC machinery and will prevent a cold engine from stalling.

- Check the coolant level in both the plastic recovery tank and at the manifold.

NOTE: After the initial running of the generator, the air in the engine's cooling system will be purged to the coolant recovery tank. Open the air bleed petcock to ensure that the cooling system is purged of air. After shutdown and after the engine has cooled, the coolant from the recovery tank will be drawn into the engine's cooling system to replace the purged air.

Before subsequent operation of the generator, the engine's manifold should be topped off, and the coolant recovery tank may need to be filled to the MAX level.

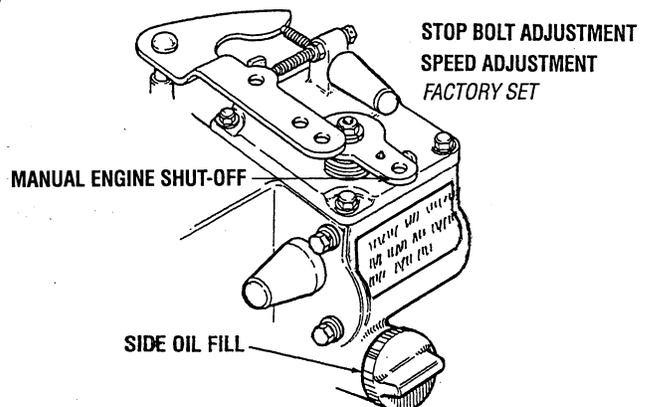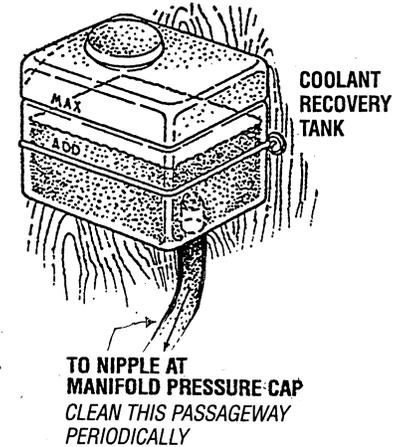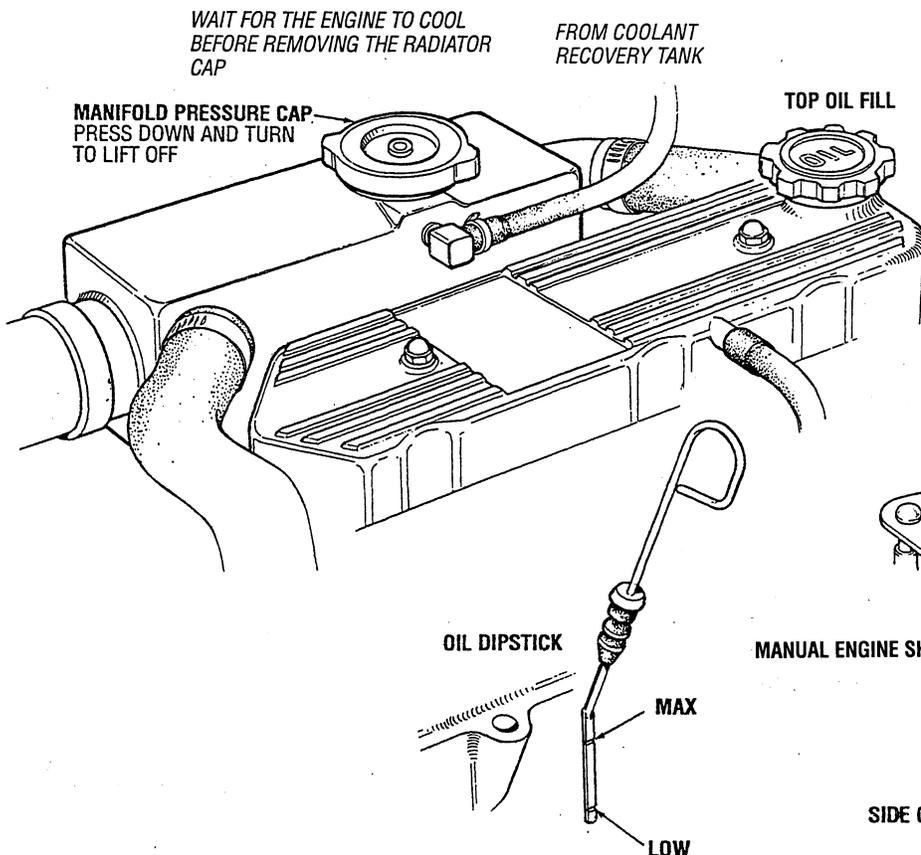

DIGITAL CONTROL PANEL

DESCRIPTION

WESTERBEKE'S Digital Control Panel provides the operator with an LCD display that continuously monitors all the operations of the generator in easy to understand text messages.

CONTROL BOX

Note that the design and size of the control box will vary depending on the model generator.

LCD DISPLAY

Operating temperatures may cause the LCD display to vary in color. This is normal and a change in color will not affect the operation on the control panel.

Periodically clean the control panel LCD screen using a soft cloth.

UP AND DOWN ARROWS
WHEN THE LCD DISPLAY IS IN ITS SCROLL MODE, THE UP AND DOWN ARROWS CAN BE USED TO ADJUST THE DARK AND LIGHT CONTRAST

UP-ARROW
WHEN IN SCROLL LOCK MODE INDIVIDUAL FUNCTIONS CAN BE MONITORED BY PRESSING THE UP-ARROW.

SCROLL LOCK
STOPS RUN SEQUENCE SO THAT A SINGLE FUNCTION CAN BE MONITORED

DOWN-ARROW
WHEN IN SCROLL LOCK MODE INDIVIDUAL FUNCTIONS CAN BE MONITORED BY PRESSING THE DOWN-ARROW.

PRIME BUTTON

THIS BUTTON ENERGIZES THE FUEL PUMP. AFTER REPAIRING A FAILURE OR PERFORMING MAINTENANCE, PRESSING THIS BUTTON WILL PURGE AIR OUT AND BRING FUEL IN TO THE LINES.

STOP BUTTON ☆

STOPS THE ENGINE

START BUTTON

STARTS THE ENGINE

FAILURE LIGHT

A RED LIGHT WILL APPEAR IF THE RUN SEQUENCE IS INTERRUPTED BY A FAILURE.

8A FUSE


PROTECTS THE CONTROL PANEL ELECTRONICS FROM A HIGH AMPERAGE OVERLOAD.

INDICATOR LIGHTS

SIX LIGHTS THAT INDICATE WHERE A FAULT HAS OCCURED.


20A BREAKER SWITCH

SHUT-OFF WHEN PERFORMING MAINTENANCE OR WHEN REPAIRING A FAULT. RESET TO RESTART THE ENGINE.

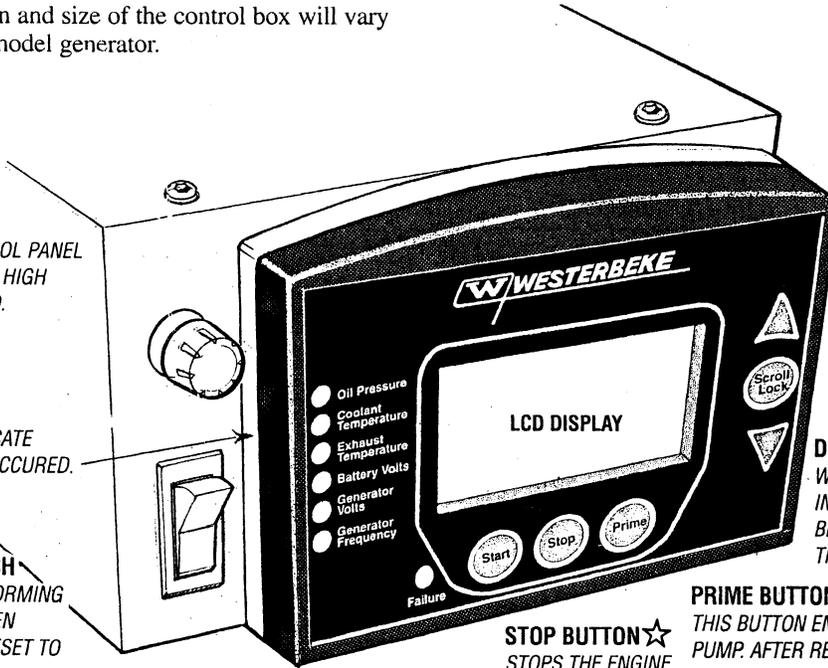

LCD DISPLAY SEQUENCE

IS SHOWN ON THE FOLLOWING PAGE

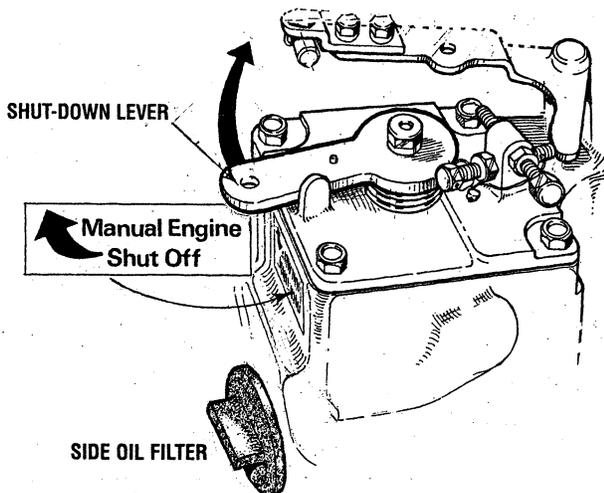

MANUAL ENGINE SHUT-OFF ☆

Should the stop button on the panel fail in its normal function to stop the engine. The engine is equipped with a manual shut-off lever located on the engine block just the side oil fill. Simply move the lever to the left and hold it there until the engine comes to a complete stop.

DIGITAL CONTROL BOX

FREQUENCY FAULT

Frequency is displayed on the LCD display screen while the engine is running in RPM and frequency (hertz).

The ECU is receiving a low AC voltage signal and hertz signal from the MPU which is positioned on the bellhousing over the flywheel ring gear teeth. The ECU interprets this signal as both RPM and hertz.


Should this signal vary approximately 2% either up or down, a frequency fault shut down will occur, initiated by the ECU. The red failure LED on the display panel will illuminate, the frequency LED will turn from green to amber and the LCD display screen will show the fault text "overspeed"

NOTE: If the unit shuts down for an underspeed condition, the same fault "overspeed" will show on the screen but the frequency LED will BLINK.

GENERATOR FREQUENCY ADJUSTMENT (HERTZ)

CAUTION: When changing the generator frequency setting on the ECU, turn off the 20 amp DC circuit breaker on the control box. Turn it back on after the setting has been changed

1. Turn the DC breaker on the control panel to the OFF position.
2. Open the cover of the control box and view the ECU (Electronic Control Unit).
3. Locate the #1 dipswitch on the ECU and move it to the position that corresponds to the Hertz operation desired). See the illustration below showing the ECU in the control box.
4. Replace the control box cover, turn the DC breaker ON and start the unit. Monitor the frequency that the engine/generator is operating at the correct frequency.

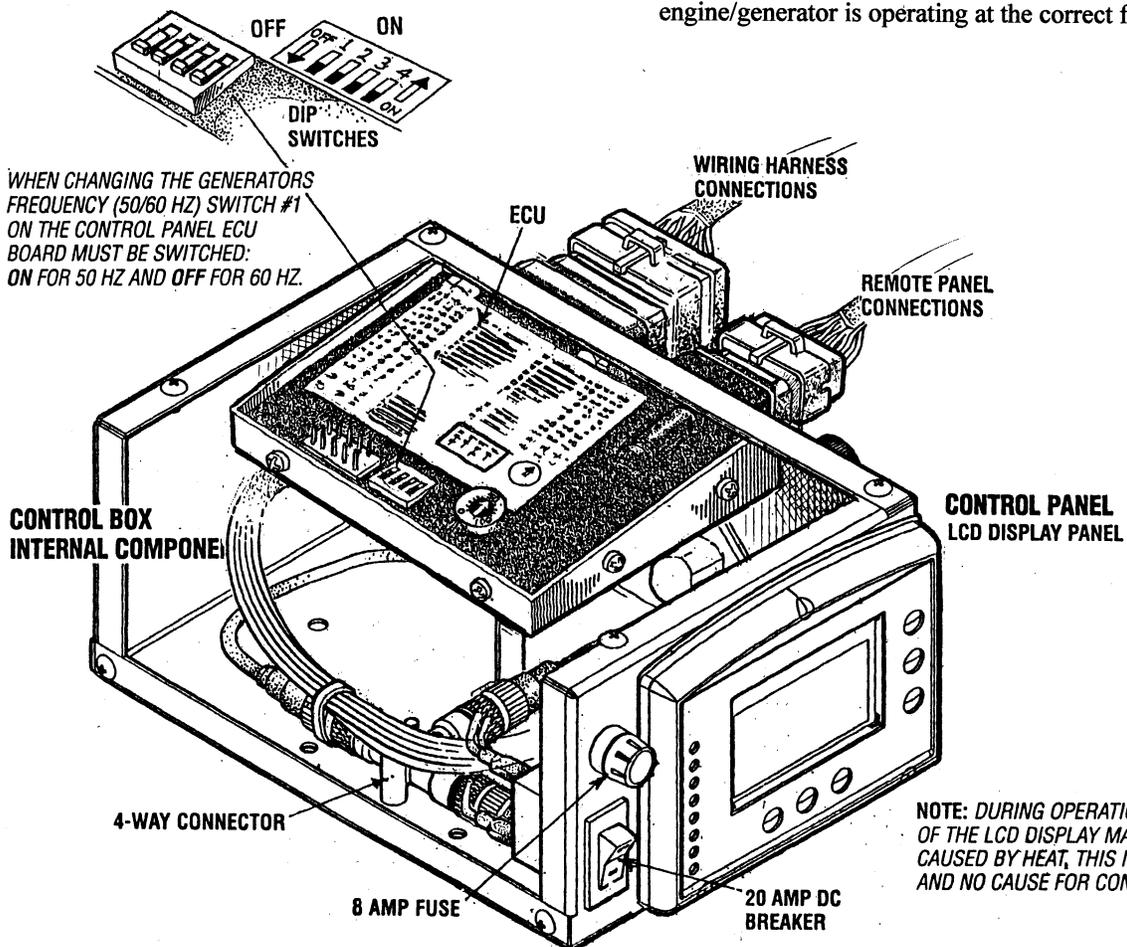

CAUTION (WESTERLINK or NMEA-2000): The electronic components in the Digital Diesels draw a very small amount of amperage (milli-amps) from the generator's starting battery when the unit is in a static state. This may be as much as 50 milli-amps for the system ECU and 50 milli-amps for each display. This can be as much as 72 amp-hours in a months time with no generator use. It is not necessary to be concerned with this slight amperage draw during normal seasonal use. However, if the generator set is not to be used for a number of months, such as winter storage, it is best to disconnect the DC power to the generator with a NMEA-2000 system or shut off the DC breaker on the generator's control box for a WESTERLINK system.

NOTE: Keep in mind that the Westerbeke generator maybe the DC power supply for the vessel's NMEA-2000 network.

GENERATOR BREAK-IN PROCEDURE

DESCRIPTION

Although your engine has experienced a minimum of one hour of test operations at the factory to make sure accurate assembly procedures were followed and that the engine operated properly, a break-in time is required. The service life of your engine is dependent upon how the engine is operated and serviced during its initial hours of use.

Breaking-in a new engine basically involves seating the piston rings to the cylinder walls. Excessive oil consumption and smoky operation indicate that the cylinder walls are glazed or scored, which is caused by overloading the engine during the break-in period.

Your new engine requires approximately 50 hours of initial conditioning operation to break in each moving part in order to maximize the performance and service life of the engine. Perform this conditioning carefully, keeping in mind the following:

Start the engine according to the *STARTING PROCEDURE* section. Run the engine while checking that all systems (raw water pump, oil pressure, battery charging) are functioning.

AFTER START-UP

Once the generator has been started, check for proper operation and then encourage a fast warm-up. Run the generator between 20% and 60% of full-load for the first 10 hours.

After the first 10 hours of the generator's operation, the load can be increased to the full-load rated output, then periodically vary the load.

Avoid overload at all times. An overload is signaled by smoky exhaust with reduced output voltage and frequency. Monitor the current being drawn from the generator and keep it within the generator's rating. Since the generator operates at 1800 rpm to produce 60 hertz (or at 1500 rpm to produce 50 Hertz), control of the generator's break-in is governed by the current drawn from the generator.

NOTE: *Be aware of motor starting loads and the high current draw required for starting motors. This starting amperage draw can be 3 to 5 times normal running amperage. See GENERATOR INFORMATION in this manual.*

GENERATOR ADJUSTMENTS

Once the generator has been placed in operation, there may be governor adjustments required for engine speed (hertz) during the engine's break-in period (first 50 hours) or after this period see *ENGINE SPEED (HERTZ) ADJUSTMENT* under *ENGINE ADJUSTMENTS*. A no-load voltage adjustment may also be required in conjunction with the engine's speed adjustment see *GENERATOR INFORMATION*.

THE DAILY ROUTINE

CHECK LIST

Follow this check list each day before starting your generator.

- Check that all generator circuit breakers (power panel) are in the off position before starting.
- Record the hourmeter reading in your log (engine hours relate to the maintenance schedule.)

Any deficiency or problems in the following items must be corrected before start up.

- Visually inspect the engine for fuel, oil, or water leaks.
- Check the oil level (dipstick).
- Check the coolant level in the coolant recovery tank.
- Check your fuel supply.
- Check the starting batteries (weekly).
- Check drive belts for wear and proper tension (weekly).

CHECK WITH THE ENGINE RUNNING.

- Check for abnormal noise such as knocking, vibrating and blow-back sounds.
- Confirm exhaust smoke:
When the engine is cold - White Smoke.
When the engine is warm - almost Smokeless.
When the engine is overloaded - some Black Smoke.

NOTE: *Some unstable running may occur in a cold engine. This condition should abate as normal operating temperature is reached and loads are applied.*

⚠ CAUTION: *Do not operate the generator for long periods of time without a load being placed on the generator.*

STOPPING THE GENERATOR

Remove the AC amperage loads from the generator one at a time. Allow the generator to run for 3-5 minutes to stabilize the operating temperature. Then push the stop button. Once the generator shuts down, turn off the panel DC breaker as a safety precaution.

CAUTION (WESTERLINK or NMEA-2000): *The electronic components in the Digital Diesels draw a very small amount of amperage (milli-amps) from the generator's starting battery when the unit is in a static state. This maybe as much as 50 milli-amps for the system ECU and 50 milli-amps for each display. This can be as much as 72 amp-hours in a months time with no generator use. It is not necessary to be concerned with this slight amperage draw during normal seasonal use. However, if the generator set is not to be used for a number of months, such as winter storage, it is best to disconnect the DC power to the generator with a NMEA-2000 system or shut off the DC breaker on the generator's control box for a WESTERLINK system.*

NOTE: *Keep in mind that the Westerbeke generator maybe the DC power supply for the vessel's NMEA-2000 network.*

MAINTENANCE SCHEDULE

⚠ WARNING: *Never attempt to perform any service while the engine is running. Wear the proper safety equipment such as goggles and gloves, and use the correct tools for each job. When servicing/replacing DC components, turn off the DC circuit breaker on the*

SCHEDULED MAINTENANCE

EXPLANATION OF SCHEDULED MAINTENANCE

Maintenance procedures are all detailed in this manual.

DAILY CHECK BEFORE START-UP

| | |
|--|--|
| Coolant Level | Check at recovery tank, if empty, check at manifold. Add coolant if needed. |
| Engine Oil Level | Oil level should indicate between MAX and LOW on dipstick. Do not overfill! |
| Fuel/Water Separator (owner installed) | Check for water and dirt in fuel. Drain filter if necessary. Replace filter every 250 operating hours or once a year. |
| Fuel Supply | Use properly filtered #2 diesel with a Cetane rating of #45 or higher. Check that there is adequate fuel for the vessel's needs. |
| Visual Inspection of Engine <i>NOTE: Please keep engine surface clean. Dirt and oil will inhibit the engine's ability to remain cool.</i> | Check for fuel, oil and water and exhaust leaks. Check that the water injected exhaust elbow securing v-clamp is tight. No exhaust leaks around the elbow. Inspect wiring and electrical connections. Look for loose bolts/hardware and correct as needed. |
| Drive Belts | Inspect for frayed edges. Belts must be tight. |

INITIAL 50 HOURS OF OPERATION

| | |
|---|--|
| Engine Oil and Filter | Initial engine oil and filter change at 50 hours. |
| *Exhaust System | Check security of water injected exhaust elbow to exhaust manifold. Ensure there are no leaks. |
| *Valve Adjustment | Check adjustment of valves. |
| Inlet Fuel Filter | Initial change. |
| Fuel Filter and "O" Rings | Initial change with new O-rings. |
| Generator | Check that AC connections are secure with no chafing. |
| Re-Torque Cylinder Head Hold-Down Bolts | Re-torque bolts/engine cold, then check valve adjustment. |

EVERY 50 OPERATING HOURS OR MONTHLY

| | |
|--------------------|--|
| Drive Belt | Inspect for proper tension (3/8" to 1/2" deflection) and adjust if needed. Check belt for slipping, cracking and wear. Adjust tension or replace as needed. Replace cover. |
| Starting Batteries | Check electrolyte levels. Make sure cables and connections are in good order. Clean off corrosion if needed. Apply petroleum jelly to terminals for corrosion protection. |
| Electric Fuel Pump | Inspect for leaks, ensure fuel and electrical connections are clean and tight. |
| Zinc Anode | Inspect and clean zinc anode. Replace if necessary. Note the condition, then determine your own inspection schedule. |

EVERY 100 OPERATING HOURS OR YEARLY

| | |
|---------------------------------------|---|
| Engine Oil and Filter | Change engine oil and filter at 100 operating hours or yearly. |
| Air Intake and Filter (if applicable) | Keep air intake clear of obstructions. Clean air filter (if applicable) |

*WESTERBEKE recommends this service be performed by an knowledgeable mechanic.

NOTE: Keep the engine surface clean. Dirt and oil will inhibit the engine's ability to remain cool.

MAINTENANCE SCHEDULE

NOTE: Use the engine hourmeter gauge to log your engine hours or record your engine hours running time.

SCHEDULED MAINTENANCE

EXPLANATION OF SCHEDULED MAINTENANCE

EVERY 250 OPERATING HOURS OR YEARLY

| | |
|-------------------------------|--|
| *Exhaust Elbow/Exhaust System | Check the structural integrity of the water injected exhaust elbow casting. Check the integrity of the exhaust system attached to the elbow. All hose connections should be secure. No chaffing. No exhaust leaks. Hoses and muffler are in good serviceable condition. NOTE: An exhaust leak will cause exposure to diesel exhaust! |
| Fuel Filter and O-Rings | Remove and replace fuel filter and all sealing O-rings. |
| Inlet Fuel Filter | Remove and-replace inlet fuel filter. |
| *Generator | Check that AC connections are clean and secure. Ensure wires have no chafing. See <i>GENERATOR INFORMATION</i> . |
| Hoses | Engine hoses should be firm and tight. Replace if hoses become spongy, brittle or delaminated. Check and tighten all hose clamps as needed. |
| Fuel Water Separator Filter | Inspect bowl for dirt or water in fuel. Drain and replace filter. |
| DC Alternator | Inspect wiring, connections should be tight. Alternator should be clean and free of corrosion. Check mounting bracket and alternator bolt. All should be tight. |

EVERY 500 OPERATING HOURS OR YEARLY

| | |
|--|---|
| Raw Water Pump | Remove and disassemble the pump and inspect all parts: drive gear, pump shaft, wear plate and cover for wear and corrosion. Replace the impeller and gasket. Lubricate the impeller at re-assembly. |
| Coolant System | Drain, flush and re-fill the cooling system with appropriate antifreeze mix. Inspect the condition of the sealing gaskets of the pressure cap. Clean out coolant recovery tank and connecting hose. |
| *Valve Clearances | Adjust valves. (Incorrect valve clearance will result in poor engine performance.) |
| *Starter Motor | Check solenoid and motor for corrosion. Remove and lubricate. Clean and lubricate the starter motor pinion drive |
| *Fuel Injectors | Check and adjust injection opening pressure and spray conditions. |
| *Re-Torque Cylinder Head Hold Down Bolts | Re-Torque bolts. Engine cold, then check the valve clearance adjustments. |
| Pre-Heat Circuit | Check operation of preheat solenoid. Remove glow plugs, clean tips and check operation. |

EVERY 1000 OPERATING HOURS OR OR EVERY FIVE YEARS

| | |
|----------------|---|
| Heat Exchanger | Remove the heat exchanger for professional cleaning and pressure testing. |
|----------------|---|

*WESTERBEKE recommends this service be performed by an knowledgeable mechanic.

NOTE: Keep the engine surface clean. Dirt and oil will inhibit the engine's ability to remain cool.

FUEL SYSTEM

DIESEL FUEL

USE A DIESEL FUEL WITH A CETANE RATING OF #45 OR HIGHER. (No. 2-D (SAE J313) diesel fuel according to ASTM D975).

FUEL FILTERS

The fuel injection pump and the fuel injectors are precisely manufactured and they must receive clean diesel fuel, free from water and impurities. To ensure this flow of clean fuel, the fuel must pass through at least two fuel filters. The primary Fuel Filter/Water Separator and the Secondary Fuel Filter (s) on the engine. Visually inspect, clean and change these filters following the Maintenance Schedule in this manual.

FUEL WATER SEPARATOR

A primary fuel filter of the water separating type must be installed between the fuel tank and the engine to remove water and other contaminants from the fuel before they can be carried to the fuel system on the engine.

The owner/operator is responsible for making certain the fuel reaching the engine's injection equipment is free of impurities. This process is accomplished by installing and maintaining a proper fuel filter/water separator between the fuel tank and the generator/engine. Westerbeke recommends a 10 micron filter be used.

FUEL INJECTION PUMP

The fuel injection pump is the most important component of the diesel engine, requiring the utmost caution in handling. The fuel injection pump has been thoroughly bench-tested and the owner/operator is cautioned not to attempt to service it. If it requires servicing, remove it and take it to an authorized fuel injection pump service facility. Do not attempt to disassembly and repair it.

FUEL LIFT PUMP

Periodically check the fuel connections to and out of the pump and make sure that no leakage is present and that the fittings are tight and secure. The DC ground connection at one of the pump's mounting bolts should be clean and well secured by the mounting bolt to ensure proper pump operation.

When energized thru the preheat circuit, the fuel lift pump will purge air from the fuel system and provide a continuous flow of fuel as the engine is running.

INLET FUEL FILTER


To ensure properly filtered fuel into the fuel pump, there is a small inlet filter before the inlet to the fuel pump. Replace this filter after the initial 50 hours of operation, then follow the Maintenance Schedule in this manual.

ENGINE FUEL FILTER

Periodically check the fuel connections and the bowl for leakage. Replace the filter element after the first 50 hours then follow the *MAINTENANCE SCHEDULE*.

Changing/cleaning the filter element

1. Shut off the fuel supply.
2. Unscrew the retainer ring that holds the filter bowl to the housing and allow the bowl to come away from the housing,
3. Remove and replace the filter element and clean the bowl.
4. Replace the sealing "O" ring and reassemble the bowl to the housing. Thread the retainer ring on carefully so as not to cross thread. When retainer contacts the "O" ring, tighten 1/4 - 1/2 turns by hand. Open the fuel supply and run the engine to inspect for leaks.

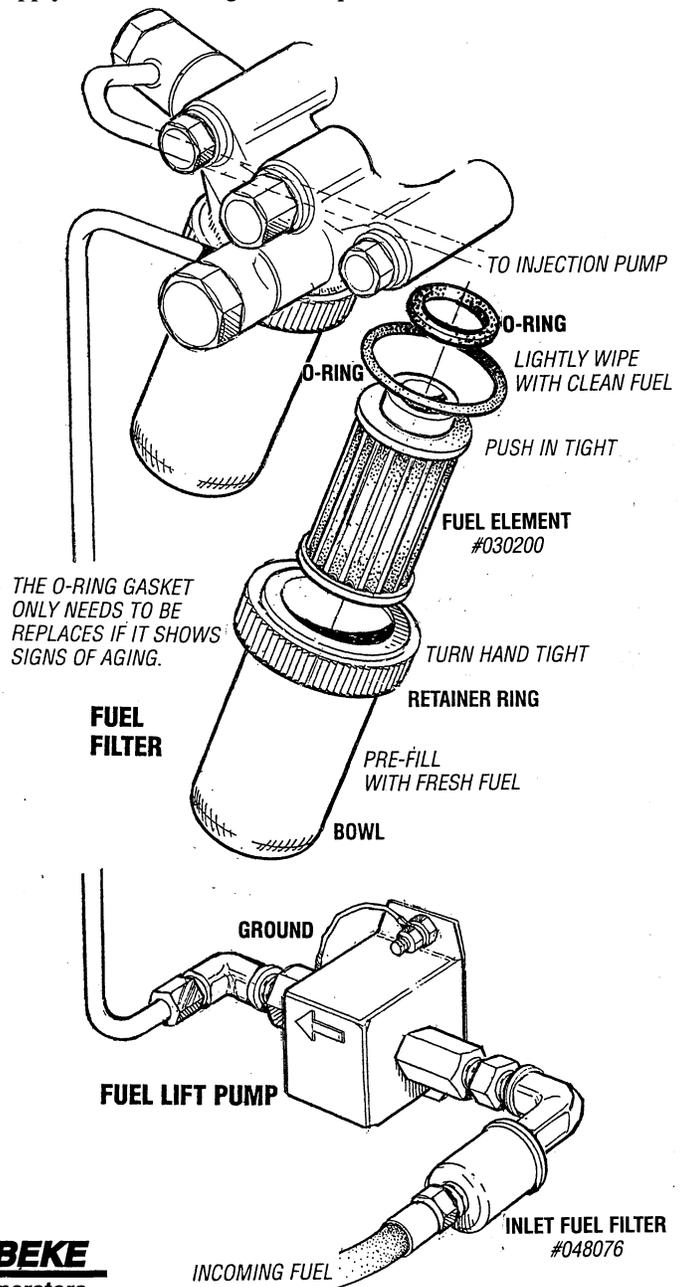


COOLING SYSTEM

DESCRIPTION

Westerbeke marine diesel engines are designed and equipped for fresh water cooling. Heat produced in the engine by combustion and friction is transferred to fresh water coolant which circulates throughout the engine. This circulating fresh water coolant cools the engine block, its internal moving parts, and the engine oil. The heat is transferred externally from the fresh water coolant to raw water by means of a heat exchanger, similar in function to an automotive radiator. Raw water flows through the tubes of the heat exchanger while

fresh water coolant flows around the tubes; engine heat transferred to the fresh water coolant is conducted through the tube walls to the raw water which is then pumped into the exhaust system where finally it is discharged overboard. In other words, the engine is cooled by fresh water coolant, this coolant is cooled by raw water, and the raw water carries the transferred heat overboard through the exhaust system. The fresh water coolant and raw water circuits are independent of each other. Using only fresh water coolant within the engine allows the cooling water passages to stay clean and free from harmful deposits.

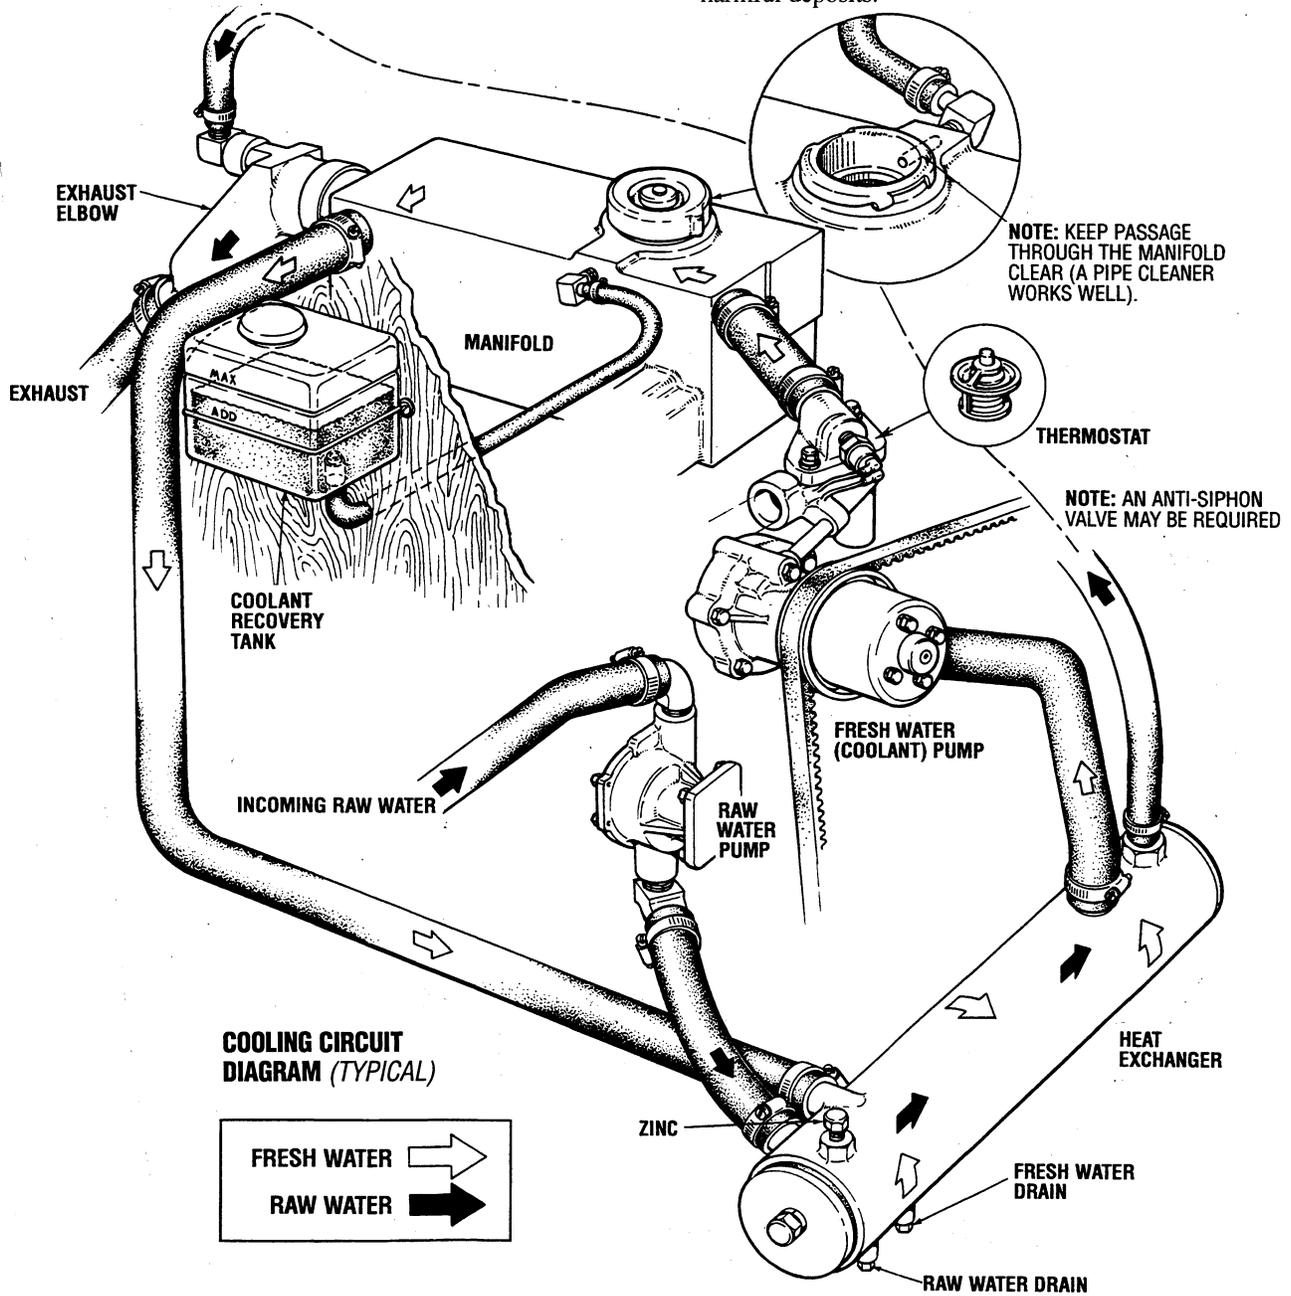


COOLING SYSTEM

FRESH WATER COOLING CIRCUIT


NOTE: Refer to the *ENGINE COOLANT* section for the recommended antifreeze and water mixture to be used as the fresh water coolant.

Fresh water coolant is pumped through the engine by a circulating pump, absorbing heat from the engine. The coolant then passes through the thermostat into the manifold, to the heat exchanger where it is cooled, and returned to the engine block via the suction side of the circulating pump.

When the engine is started cold, external coolant flow is prevented by the closed thermostat (although some coolant flow is bypassed around the thermostat to prevent the exhaust manifold from overheating). As the engine warms up, the thermostat gradually opens, allowing full flow of the engine's coolant to flow unrestricted to the external portion of the cooling system.

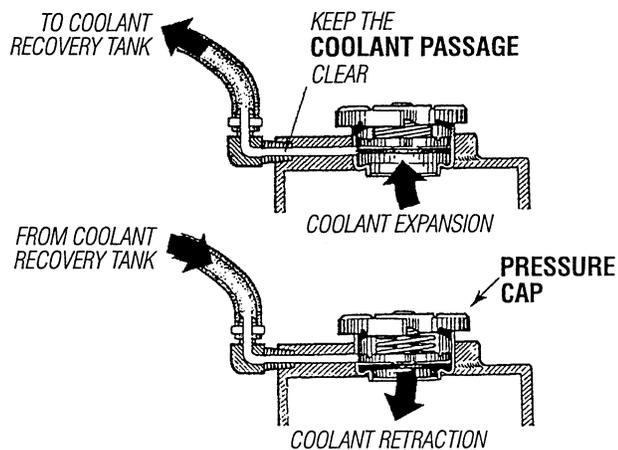

NOTE: Periodically check the condition of the manifold pressure cap. Ensure the upper and lower rubber seals are in good condition. Check to ensure the vacuum valve opens and closes tightly. Carry a spare cap. Check also to ensure the coolant passage is clear so coolant within the system is able to expand and contract to and from the coolant recovery tank.

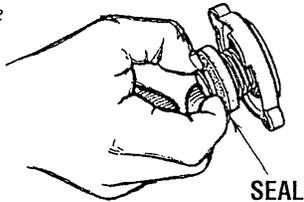

Coolant Recovery Tank

The coolant recovery tank allows for the expansion and contraction of the engine's coolant during engine operation without introducing air into the system. This recovery tank is provided with fresh water cooled models and with the fresh water coolant conversion kit and must be installed before operating the engine.

NOTE: This tank, with its short run of plastic hose, is best located at or above the level of the engine's manifold.


CHANGING COOLANT

The engine's coolant must be changed according to the *MAINTENANCE SCHEDULE*. If the coolant is allowed to become contaminated, it can lead to overheating problems.

CAUTION: Proper cooling system maintenance is critical; a substantial number of engine failures can be traced back to cooling system corrosion.

Drain the engine coolant by removing the drain plug on the engine block and opening the manifold pressure cap. Flush the system with fresh water, then reinstall the drain and start the refill process.

NOTE: The drain petcock on the heat exchanger should also be used to help drain engine coolant.

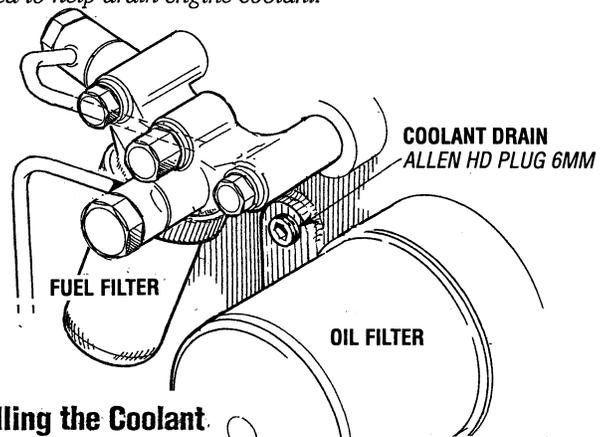

Refilling the Coolant.

After closing all open drain plugs, pour new pre-mixed antifreeze coolant into the pressure cap filler neck opening. Fill slowly until coolant is visible in the filler neck opening. Start the engine and monitor coolant in the filler neck opening, adding coolant as needed to maintain the level in the filler neck opening.

When coolant is stable in the opening, momentarily open the air bleed petcock on the thermostat housing to release any air in that area. Add coolant so the filler neck opening is full. Install the pressure cap.

AIR INTAKE/COOLING

Clean air is drawn into the engine through the air intake at the top side of the generator's backend. The air serves two functions: it cools the electronics in the control box and provides clean fresh air for engine combustion.

The generator's air intake must have "breathing space" and be clear from obstruction and the air intake hose should periodically be inspected to be sure it is also free from obstruction.

CAUTION: Never perform air intake maintenance with the generator running.

COOLING SYSTEM

THERMOSTAT

A thermostat, located near the manifold at the front of the engine, controls the coolant temperature as the coolant continuously flows through the closed cooling circuit. When the engine is first started, the closed thermostat prevents coolant from flowing (some coolant is by-passed through a hole in the thermostat to prevent the exhaust manifold from overheating). As the engine warms up, the thermostat gradually opens. The thermostat is accessible and can be checked, cleaned, or replaced easily. Carry a spare thermostat and gasket

Replacing the Thermostat

Remove the cap screws and disassemble the thermostat housing as shown. When installing the new thermostat and gasket, apply a thin coat of sealant on both sides of the gasket before pressing it into place. *Do not* over-tighten the cap screws.

Run the engine and check for normal temperatures and that there are no leaks at the thermostat housing.

RAW WATER INTAKE STRAINER

NOTE: Always install the strainer at or below the waterline so the strainer will always be self-priming.




A clean raw water intake strainer is a vital component of the engine's cooling system. Include a visual inspection of this strainer when making your periodic engine check. The water in the glass should be clear.

Perform the following maintenance after every 100 hours of operation:

1. Close the raw water seacock.
2. Remove and clean the strainer filter.
3. Clean the glass.
4. Replace the washer if necessary.
5. Reassemble and install the strainer.
6. Open the seacock.
7. Run the engine and check for leaks.

NOTE: Also follow the above procedure after having run hard aground.

If the engine temperature gauge ever shows a higher than normal reading, the cause may be that silt, leaves or grass may have been caught up in the strainer, slowing the flow of raw water through the cooling system.

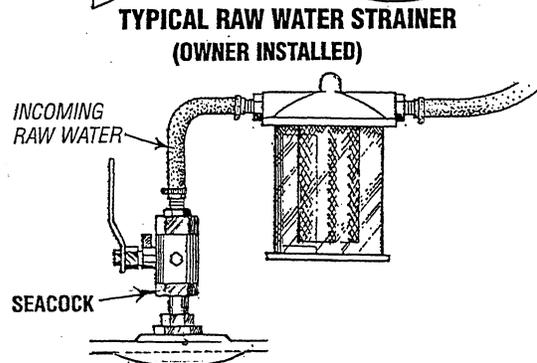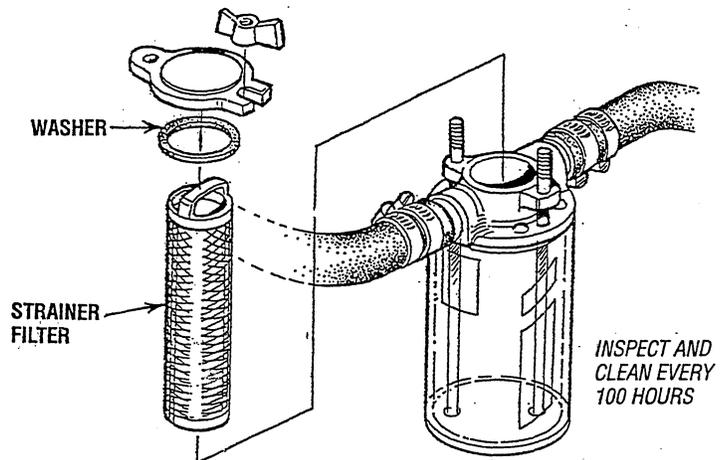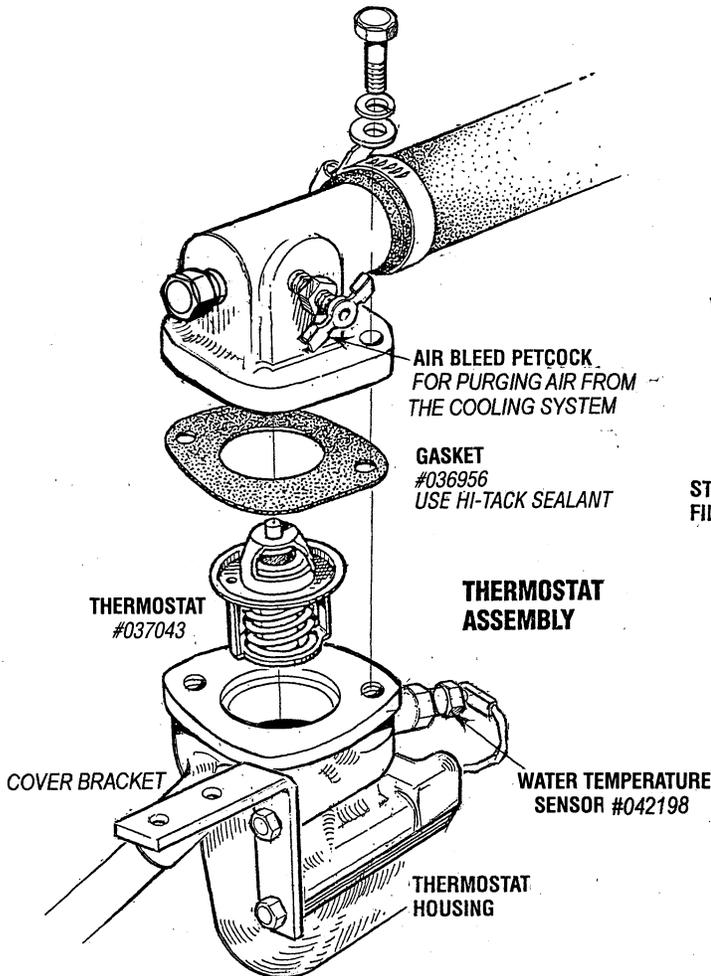

COOLING SYSTEM


RAW WATER COOLING CIRCUIT

The raw water flow is created by a positive displacement impeller pump. This pump draws water directly from the ocean, lake, or river from a thru-hull opening through a hose to the water strainer. The raw water passes from the strainer through the pump to the heat exchanger (through the heat exchanger tubes) where it cools the engine's circulating fresh water coolant. The raw water is then discharged into the water-injected exhaust elbow, mixing with, and cooling the exhaust gasses. This mixture of exhaust gas and raw water is driven through the exhaust system and overboard.

HEAT EXCHANGER

Cool raw water flows through the inner tubes of the heat exchanger. As the engine coolant passes around these tubes, the heat of the internal engine is conducted to the raw water which is then pumped into the exhaust system and discharged. The engine coolant (now cooled) flows back through the engine and the circuit repeats itself.

NOTE: Operating in silty and/or tropical waters may require that a heat exchanger cleaning be performed more often than every 1000 hours.

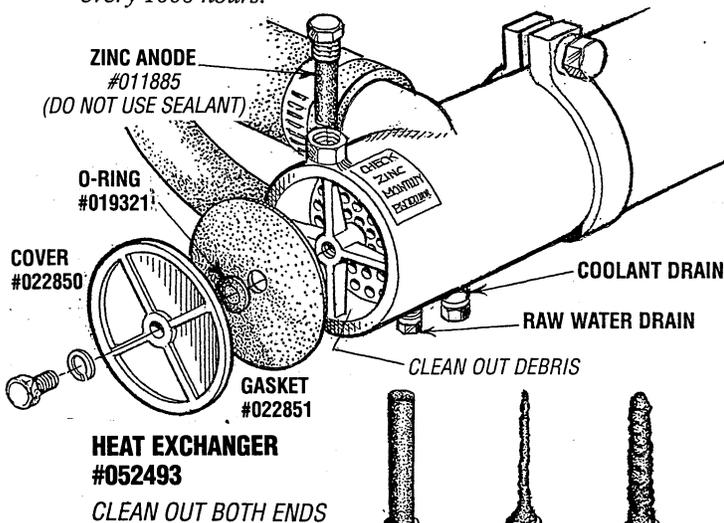

ZINC ANODE

A zinc anode, or pencil, is located in the raw water cooling circuit within the heat exchanger. The purpose of the zinc anode is to sacrifice itself to electrolysis action taking place in the raw water cooling circuit, thereby reducing the effects of electrolysis on other components of the system. The condition of the zinc anode should be checked monthly and the anode cleaned or replaced as required. Spare anodes should be carried on board.

NOTE: Electrolysis is the result of each particular installation and vessel location; not that of the engine.

NOTE: The threads of the zinc anodes are pipe threads and do not require sealant. Sealant should not be used as it may insulate the zinc from the metal of the heat exchanger housing preventing electrolysis action on the zinc.

RAW WATER PUMP

The raw water pump is a self-priming, rotary pump with a non-ferrous housing and a Neoprene impeller. The impeller has flexible blades which wipe against a curved cam plate within the impeller housing, producing the pumping action. **On no account should this pump be run dry.** There should always be a spare impeller and impeller cover gasket aboard (an impeller kit). Raw water pump impeller failures occur when lubricant (raw water) is not present during engine operation. Such failures are not warrantable, and operators are cautioned to make sure raw water flow is present at start-up. The raw water pump should be inspected periodically for broken or torn impeller blades. See *MAINTENANCE SCHEDULE*.


NOTE: Should a failure occur with the pumps internal parts (seals and bearings), it may be more cost efficient to purchase a new pump and rebuild the original pump as a spare.

Changing the Raw Water Pump Impeller

Close the raw water intake valve. Remove the pump cover and, using an impeller puller, screw drivers, or pliers, carefully pry the impeller out of the pump. Install the new impeller and gasket. Move the blades to conform to the curved cam plate and push the impeller into the pumps housing. When assembling, apply a thin coating of lubricant to the impeller and gasket. Open the raw water intake valve.

CAUTION: If any of the vanes have broken off the impeller, they must be found to prevent blockage in the cooling circuit. They often can be found in the heat exchanger.

INSPECTION: CHECK THE BASE OF EACH BLADE BY BENDING VIGOROUSLY. REPLACE THE IMPELLER IF THERE ARE ANY CRACKS.

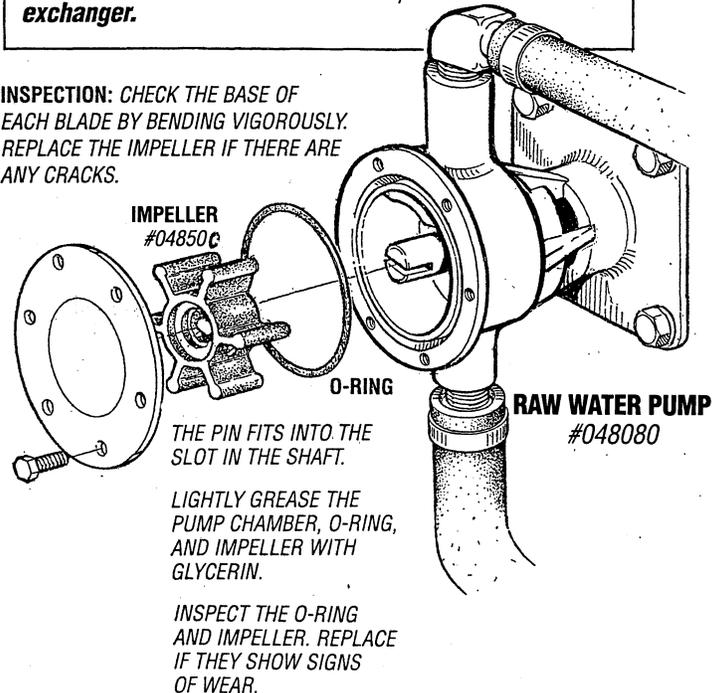

ENGINE LUBRICATING OIL

ENGINE OIL CHANGE

1. **Draining the Oil Sump.** Discharge the used oil through the sump drain hose (attached to the front of the engine) while the engine is warm. Drain the used oil completely, replace the hose in its bracket, and replace the end cap securely.

NOTE: Thread size for the lube oil drain hose capped end is 1/4 NPT.

Always observe the used oil as it is removed. A yellow/gray emulsion indicates the presence of water in the oil. Although this condition is rare, it does require prompt attention to prevent serious damage. Call a qualified mechanic should water be present in the oil. Raw water present in the oil can be the result of a fault in the exhaust system attached to the engine and/or a siphoning of raw water through the raw water cooling circuit into the exhaust, filling the engine. This problem is often caused by the absence of an anti-siphon valve, its poor location or lack of maintenance.

2. **Replacing the Oil Filter.** When removing the used oil filter, you may find it helpful and cleaner to punch a hole in the upper and lower portion of the old filter to drain the oil from it into a container before removing it. This helps to lessen spillage. A small automotive filter wrench should be helpful in removing the old oil filter.

NOTE: Do not punch this hole without first loosening the filter to make certain it can be removed.

Place some paper towels and a plastic bag around the filter when unscrewing it to catch any oil left in the filter. (Oil or any other fluid on the engine reduces the engine's cooling ability. Keep your engine clean.) Inspect the old oil filter as it is removed to make sure that the rubber sealing gasket comes off with the old oil filter. If this rubber sealing gasket remains sealed against the filter bracket, gently remove it.

When installing the new oil filter element, wipe the filter gasket's sealing surface on the bracket free of oil and apply a thin coat of clean engine oil to the rubber gasket on the new oil filter. Screw the filter onto the threaded oil filter nipple on the oil filter bracket, and then tighten the filter firmly by hand.

SAE OIL VISCOSITY GRADES



For all temperatures, use SAE 10W-40 or 15W-40.

⚠ WARNING: Used engine oil contains harmful contaminants. Avoid prolonged skin contact. Clean skin and nails thoroughly using soap and water. Launder or discard clothing or rags containing used oil. Discard used oil properly.

NOTE: Generic filters are not recommended, as the material standards or diameters of important items on generic parts might be entirely different from genuine parts. Immediately after an oil filter change and oil fill, run the engine to make sure the oil pressure is normal and that there are no oil leaks around the new oil filter.

3. **Filling the Oil Sump.** Add new oil through the oil filler cap on the top of the engine or through the side oil fill. After refilling, run the engine for a few moments while checking the oil pressure. Make sure there is no leakage around the new oil filter or from the oil drain system, and stop the engine. Then check the quantity of oil with the lube oil dipstick. Fill to, but not over the high mark on the dipstick, should the engine require additional oil.


LUBRICATION DIAGRAM

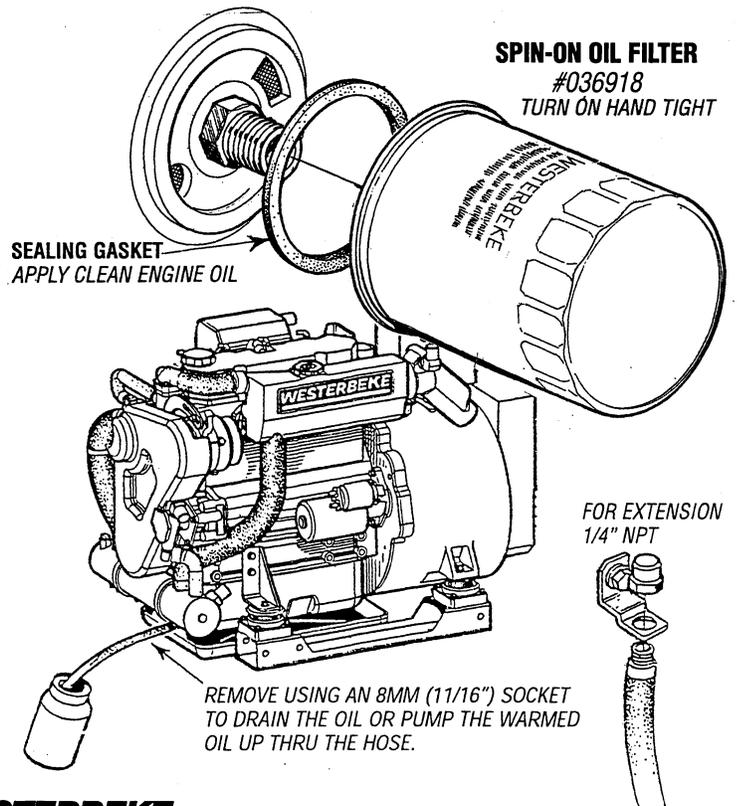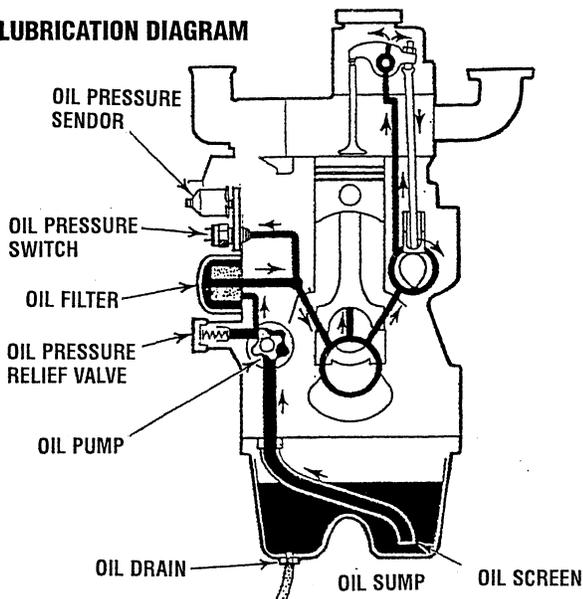

STARTER MOTOR

DESCRIPTION

The starter is a new type, small, light-weight and is called a high-speed internal-reduction starter. The pinion shaft is separate from the motor shaft; the pinion slides only on the pinion shaft. A reduction gear is installed between the motor shaft and a pinion shaft. The pinion sliding part is not exposed outside the starter so that the pinion may slide smoothly without becoming fouled with dust and grease. The motor shaft is supported at both ends on ball bearings. The lever mechanism, switch and overrunning clutch inner circuit are identical to conventional ones.

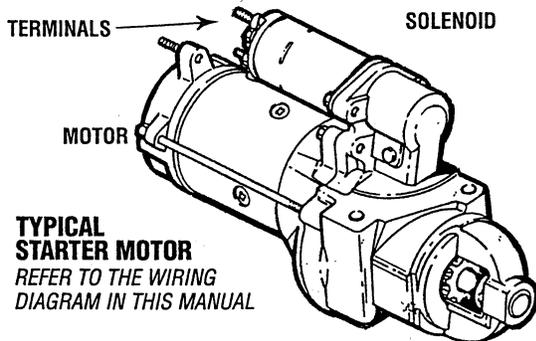

TYPICAL STARTER MOTOR
REFER TO THE WIRING DIAGRAM IN THIS MANUAL

TROUBLESHOOTING


⚠ WARNING: *The following emergency starting procedures must not be used with gasoline engines. Sparks could cause an explosion and fire.*

Prior to testing, make certain the ship's batteries are at full charge and that the starting system wiring connections (terminals) are clean and tight. Pay particular attention to the ground wire connections on the engine block.

To check the wiring, try cranking the starter for a few seconds, never more than 10 seconds at a time, then run your hand along the wires and terminals looking for warm spots that indicate resistance. Repair or replace any trouble spots.

Using a multimeter, test the voltage between the positive terminal stud on the start solenoid and the engine block (ground).


If you read 12 volts, the starter is faulty.

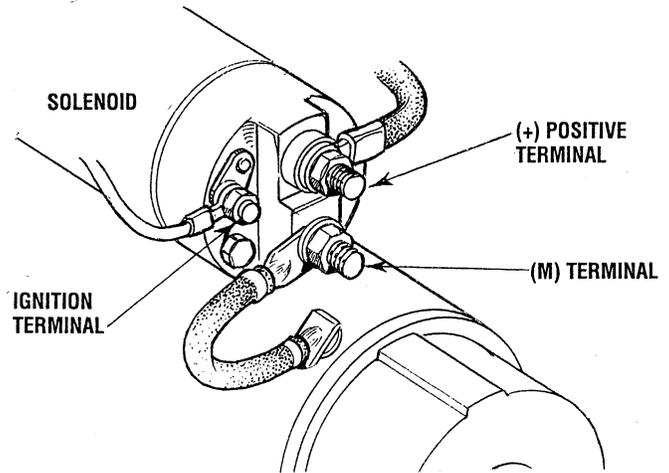

To test the ignition circuit, locate the ignition(s) terminal (it is one of the small terminal studs and is wired to the ignition circuit). Use a screwdriver, don't touch the blade, to jump from that ignition terminal to the positive battery connection terminal on the solenoid.

If the starter cranks, the fault lies with the ignition circuit.

If the solenoid clicks but nothing happens, the starter motor is probably faulty.

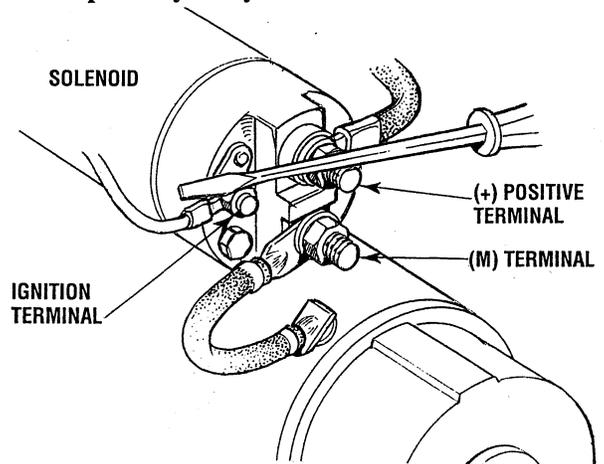


If nothing happens at all, the solenoid is not getting current. Check the battery isolation switch and inspect the wiring connections. It is also possible that the solenoid is defective.

⚠ WARNING: *There will be arcing and sparks will fly when jumping terminals. Be certain the engine space is free of potentially explosive fumes, especially gasoline, and that there are NO flammable solvents or materials stored nearby.*

STARTER MOTOR

⚠ WARNING: When performing these procedures, position yourself safely away from the moving parts of the engine in case the engine starts-up. Also warn other crew members of the danger.

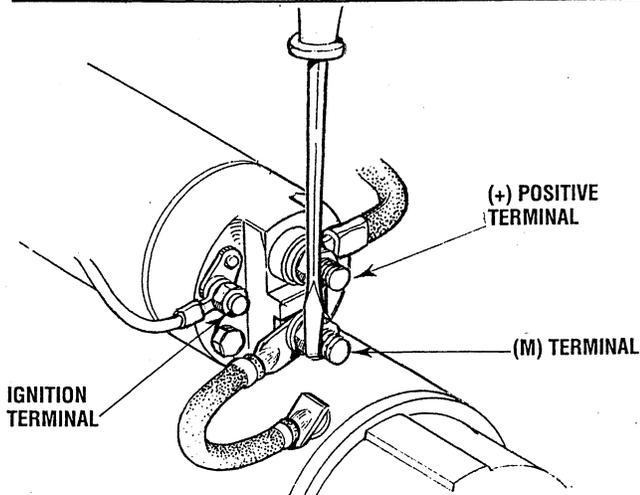

Test again by jumping the two large terminal studs. Hold the screwdriver blade firmly between the studs. Do not allow the screwdriver blade to touch the solenoid or starter casing, this would cause a short.

⚠ WARNING: There will be arcing as the full starting current should be flowing thru the blade of the screwdriver.

If the starter spins, the solenoid is faulty.

If the starter fails to spin, the motor is probably faulty.

If no arcing occurred, there is no juice reaching the solenoid.

NOTE: Starter motors are either inertia type or pre-engaged. In the pre-engaged model, the solenoid also moves an arm that engages the starter motor to the flywheel of the engine. Using a screwdriver to bypass the solenoid on such a starter will run the motor without engaging the flywheel. Turn the starter switch on to provide power to the solenoid. Hopefully it will create enough magnetic field for the arm to move even though the contacts inside the solenoid are bad.

SERVICE

WESTERBEKE uses a standard starter motor which can be serviced or rebuilt at any starter motor automotive service center,

If replacing the starter motor, make certain the new motor is certified for marine use. Automotive starters do not meet USCG standards. If in doubt, contact your WESTERBEKE dealer.

TO REMOVE FOR SERVICE

1. Disconnect the negative battery cable.
2. If necessary, remove any components to gain full access to the starter motor.
3. Label and disconnect the wiring from the starter. (Do not allow wires to touch, tape over the terminals).
4. Remove the starter mounting bolts.
5. Remove the starter from the engine. In some cases the starter will have to be turned to a different angle to clear obstructions,

ENGINE ADJUSTMENTS

NOTE: WESTERBEKE recommends that the following engine adjustments be performed by a competent engine mechanic. The information below is provided to assist the mechanic.

DRIVE BELT ADJUSTMENT

For your safety, WESTERBEKE generator models come equipped with belt guards that cover over the belt(s) on the front of the engine. ("Out of sight - out of mind." The belt guard is NOT installed for that purpose.) Operators are advised that proper inspection, service, and maintenance is required.


Excessive drive belt tension can cause rapid wear of the belt and reduce the service life of the fresh water pump's bearing. A slack belt or the presence of oil on the belt can cause belt slipping, resulting in high operating temperatures.

The drive belt is properly adjusted if the belt can be deflected no less than 3/8 inch (10mm) and no more than 1/2 inch (12mm) as the belt is depressed with the thumb at the midpoint between the two pulleys on the longest span of the belt. A spare belt or belts should always be carried on board.

⚠ WARNING: Never attempt to check or adjust the drive belt's tension while the engine is in operation.

Adjusting Belt Tension

1. Remove the belt guard.
2. Loosen the pivot belt that holds the idler sheave and loosen the adjusting bolt.
3. With the belt loose, inspect for wear, cracks and frayed edges.
4. Pivot the idler sheave to the left or right as required, to loosen or tighten.
5. Tighten the pivot bolt and the adjusting bolt.
6. Replace the guard. Operate the generator for about 5 minutes and then shut the generator down.
7. Remove the guard and recheck the belt tension.
8. Replace the guard.

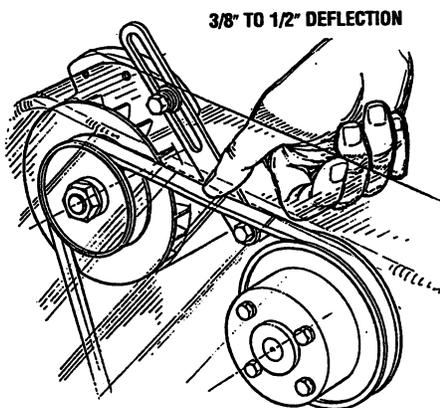

TORQUING THE CYLINDER HEAD BOLTS

After the initial break-in period (approximately 50 hours) and every 500 hours thereafter, the cylinder head bolts should be re-torqued.


Tighten the cylinder head bolts according to the sequence shown. Make sure the engine is cold when this is done. Before applying the specified torque to the bolt, loosen it 1/4 to 1/2 of a turn and then apply the torque. Follow this procedure according to the numbered sequence shown in the illustration to the right.

Bolts #1, 2 and 3, (12mm socket) 14 – 22 ft-lb

Bolts #4, 5, 6, 7, 8, 9, 10 and 11 (14mm socket) (54 – 61 ft-lb)

Rocketshaft Hold Down Bolts – 12mm socket (11 – 16 ft-lb)

Rocker Cover Hold Down Cap Nuts – (10mm socket) (snug)

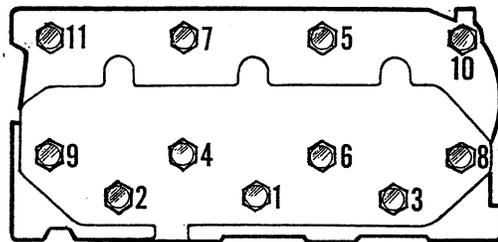

CYLINDER HEAD BOLT PATTERN

FUEL INJECTORS

In case of severe vibrations and detonation noise, have the injectors checked and overhauled by an authorized fuel injection service center. Poor fuel quality, contaminant's and loss of positive fuel pressure to the injection pump can result in injector faults. Since fuel injectors must be serviced in a clean room environment, it is best to carry at least one extra injector as a spare should a problem occur.

Before removing the old injector, clean the area around the base of the injector to help prevent any rust or debris from falling down into the injector hole. If the injector will not lift out easily and is held in by carbon build-up or the like, work the injector side-to-side with the aid of the socket wrench to free it, and then lift it out.

The injector seats in the cylinder head on a copper sealing washer. This washer should be removed with the injector and replaced with a new washer when the new injector is installed.

START TO INJECTION PRESSURE
1988 ± 142PSI (140 ± 10KG/CM²)

NOTE: Refer to the fuel injector page in this manual for additional information.

ENGINE ADJUSTMENTS

GENERATOR FREQUENCY ADJUSTMENT (HERTZ)

Once the diesel generator set has been placed in operation, there may be adjustments required for engine speed (Hertz) during the engine's break-in period (first 50 hours) or after this period. A no-load voltage adjustment may also be required in conjunction with the engine's speed adjustment. These are not warrantable adjustments as they relate to normal break-in and maintenance.

Frequency is a direct result of engine/generator speed, as indicated by the following:

When the generator is run at 1800 rpm, the AC voltage output frequency is 60 Hertz.

When the generator is run at 1500 rpm, the AC voltage output frequency is 50 Hertz.

Therefore to change the generator's frequency, the engine speed *must* be changed. To accomplish the frequency change, perform the following:

1. With the engine stopped, connect the AC output leads to the AC terminal block in accordance with the AC voltage connections diagram specified for your generator set, and change the Hertz circuit connection to the capacitor. These connections are shown in the GENERATOR section of this manual.

⚠ WARNING: Before starting the engine make certain that everyone is clear of moving parts! Keep away from pulleys and belts during test procedures.


2. In the control box on the generator is located the Electronic Control Unit (ECU). Switch #1 controls engine speed/generator frequency. **ON** for 50 Hz and **OFF** for 60 Hz. Select the correct switch position for the desired operating hertz.
3. Start the engine and observe generator hertz and no load AC voltage output. Adjust no load AC out put as needed. Refer to page 38 of this manual.

WHEN CHANGING THE GENERATORS FREQUENCY (50/60 HZ) SWITCH #1 ON THE CONTROL PANEL ECU BOARD MUST BE SWITCHED: **ON** FOR 50 HZ AND **OFF** FOR 60 HZ.



ELECTRONIC GOVERNOR


The Electronic Governor regulates the engine speed by sensing the engine's RPM with a magnetic pick-up at the flywheel. The governor's controller continuously monitors the engines speed and if there is any discrepancy, the controller signals the actuator and the actuator adjusts the engine to the desired speed electronically.

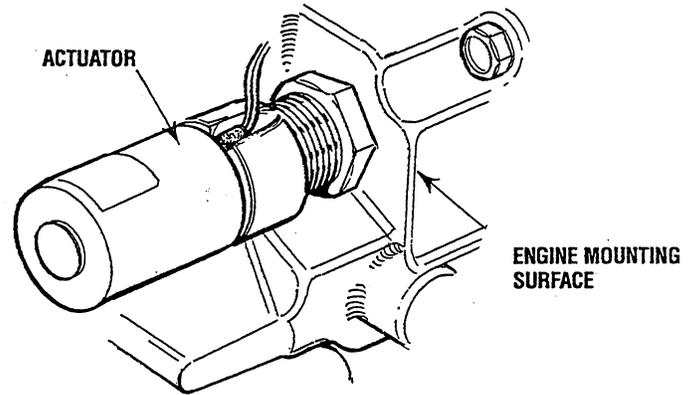


Actuator

The following instructions are for adjusting or replacing the actuator.

1. Shut-off the DC power to the generator.
2. Disconnect the actuator wires from the wiring harness.
3. Measure the distance between the actuator and the engine mounting surface as shown.

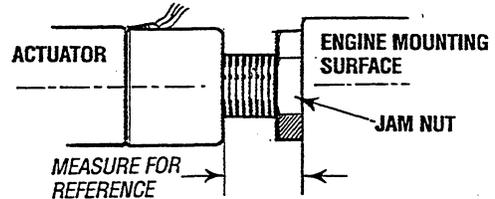

4. Back-off the 1 7/16" jam nut and unscrew the actuator.
5. Apply a small amount of teflon sealant to the replacement actuator and screw the actuator into the engine's mounting boss. Maintain the same distance between the actuator and the engine mounting surface as previously measured. Secure the actuator's position with the jam nut. (The standard distance is 13/16" to 7/8").
6. Reconnect the actuator wires and test the unit.

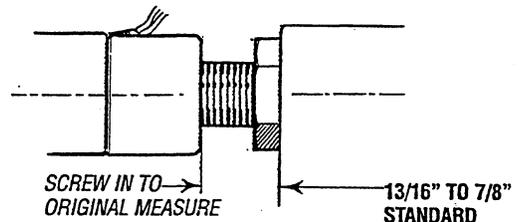

NOTE: Should the unit fail to shut down and go to idle. Loosen the jam nut and thread the actuator in 1/4 to 1/2 turn to obtain proper shut down. For additional information on Electronic Governing Troubleshooting, refer to the booklet on our website for diesel generators.

ENGINE ADJUSTMENTS

VALVE CLEARANCE ADJUSTMENT

NOTE: Retorque the cylinder head bolts before adjusting the engine's valves. See TORQUING THE CYLINDER HEAD BOLTS.

⚠ WARNING: Adjust the valve clearance when the engine is cold. Valves are adjusted by cylinder in the firing order of the engine. Tighten the cylinder head bolts to the specified torque before adjusting the valves.

Pull off the air breather pipe from the rocker cover and take off the rocker cover bolts and the rocker cover to expose the rocker shaft and valve assembly.


Remove the glow plugs from each of the cylinders to enable the crankshaft to be easily rotated by hand to position each cylinder for valve adjustment.

Valves are adjusted with the cylinder in the piston being adjusted at Top Dead Center (TDC) of its compression stroke. Each cylinder is adjusted following the engine's firing order (1-3-2 for WESTERBEKE three cylinder engines).

Valve adjustment beginning with cylinder #1. Rotate the crankshaft slowly and observe the operation of the valves for cylinder #1. Watch for the intake valve to open indicating the piston is on its intake stroke (the piston is moving down in the cylinder). Continue to rotate the crankshaft slowly and look for the intake valve to close. This indicates the piston is now starting its compression stroke (the piston is moving up in the cylinder towards TDC).

Align the TDC mark on the crankshaft front pulley with the timing marker on the front gear case cover when positioning the #1 Piston at TDC of its compression stroke. Confirm this by rotating the crankshaft approximately 20 degrees before and after this point and the two valves for the #1 cylinder should not move.

Re-install the glow plugs (use anti-seize compound on the threads) and assemble the rocker cover and rocker cover bolts. See TIGHTENING TORQUE SCHEDULE in this manual.

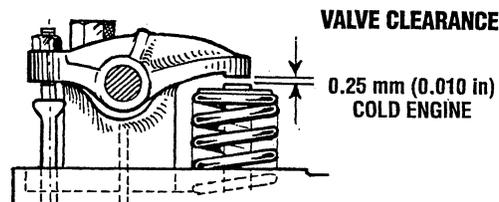

Adjust the valves in #1 cylinder for both intake and exhaust. Proceed to the next cylinder in the firing order.

Rotate the crankshaft 240 degrees in the normal direction of rotation and adjust the next cylinder's valves in the firing order. Rotate the crankshaft another 240 degrees and adjust the valves of the next cylinder in the firing order.

Adjust each valve's clearance by inserting a 0.010in (0.25mm) feeler gauge between the rocker arm and the valve stem. Make sure to adjust all valves while the engine is cold.

ENGINE ADJUSTMENTS

NOTE: WESTERBEKE recommends that the following engine adjustments be performed by a competent engine mechanic. The information below is provided to assist the mechanic.

Injection Pump Timing Adjustment (Spill Timing)

If your engine's fuel injection timing is not properly adjusted, the engine will not operate properly, and may be difficult to start. Have the injection pump delivery rate checked by a well-established fuel injection shop. Adjust the injection as follows:



NOTE: The injection pump fuel rack needs to be in the full fuel delivery position when performing this spill timing. To do this, unscrew the fuel shut off solenoid and remove the side cover to expose the injection pump fuel rack. Manually move the fuel rack to the full fuel delivery position (move fully to the left) secure it in this position then proceed.

1. Remove the high pressure fuel line from between the No. 1 injector and the No. 1 fuel delivery valve holder.
2. Remove the No. 1 fuel delivery valve holder over "O" ring and remove the delivery valve spring beneath the holder.
3. Reinstall only the delivery valve holder and reattach the high pressure fuel line to the delivery holder. Attach it so that the end that would connect to the fuel injector is pointing away from the engine fuel will flow from this line during the timing check.

Rotate the engine's crankshaft in its normal direction of rotation to position piston No. 1 at the beginning of its compression stroke.

Move the throttle lever to its full open position and operate the electric lift pump. Slowly rotate the crankshaft clockwise (as viewed from the front), catching the fuel from the No. 1 fuel line, until the instant the fuel completely stops flowing (no drips). At this instant, the 15° BTDC timing mark on the crankshaft pulley should be directly aligned with the timing indicator on the front of the gear case ± .5 degrees.

If the specified injection timing (15° BTDC) cannot be attained, adjust the timing by increasing or decreasing the thickness of shim material under the injection pump's mounting flange to change the injection timing point. Changing the shim thickness by 0.004 inch (0.01mm) changes the injection timing by approximately one degree. To advance the timing, decrease the shim thickness, as required. To retard the timing, increase the shim thickness, as required. Refer to your Generator's Parts List for shim part numbers.

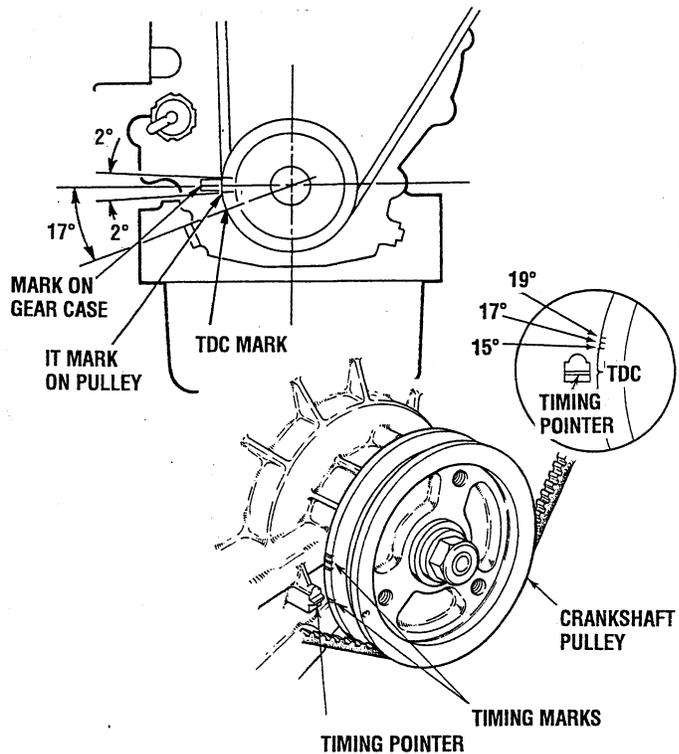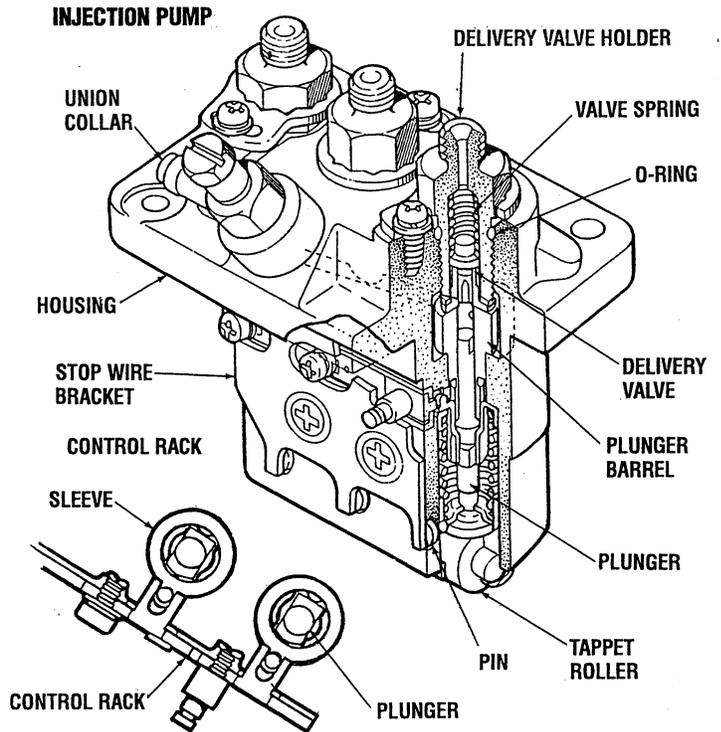

ENGINE ADJUSTMENTS

NOTE: WESTERBEKE recommends that the following engine adjustments be performed by a competent engine mechanic. The information below is provided to assist the mechanic.

OIL PRESSURE

The engine's oil pressure is constantly monitored by the control panel. The red light will illuminate and the generator will shutdown if the oil pressure fall below 5 psi. Do not restart the generator without checking the oil and finding the problem.

NOTE: A newly started, cold engine can have an oil pressure reading upwards of 60 psi. A warmed engine can have an oil pressure reading as low as 35 psi. These readings will vary depending upon the temperature of the engine and the load placed on the generator.

LOW OIL PRESSURE


The specified safe minimum oil pressure is 4.3 - 1.4 psi (0.3 - 0.1 kg/cm²). An oil pressure of 5 PSI will shut the engine down. A gradual loss of oil pressure usually indicates worn bearings. For additional information on low oil pressure readings, see the *ENGINE TROUBLESHOOTING* chart.

TESTING OIL PRESSURE

To test oil pressure, remove the oil gallery "T" plug and install a mechanical oil pressure gauge in its place. After warming up the engine, read the oil pressure gauge.

OIL PRESSURE 35.0 lb/in² (3.8 kg/cm²) or more at 1800 rpm (depending on temperature and load)

TORQUE:
SENSOR AND GAUGE 9-13 ft-lb. (1.2 - 1.8 m-kg)

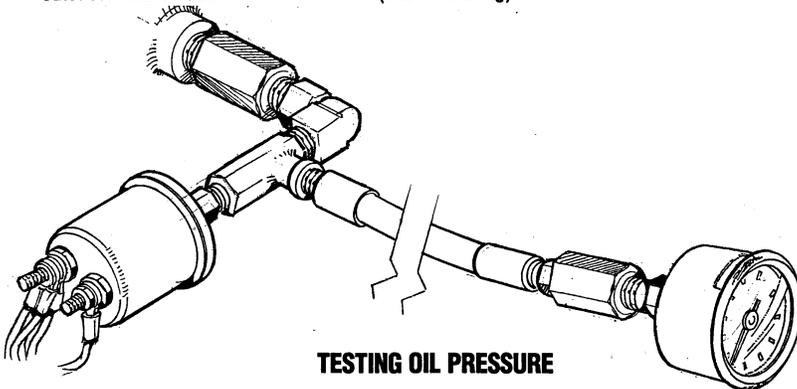


TESTING GLOW PLUGS

To inspect the plug, remove the electrical terminal connections, then unscrew or unclamp each plug from the cylinder head. Thoroughly clean each plug's tip and threads with a soft brush and cleaning solution to remove all the carbon and oil deposits. While cleaning, examine the tip for wear and burn erosion; if it has eroded too much, replace the plug.


An accurate way to test glow plugs is with an ohmmeter. Touch one prod to the glow plug's wire connection, and the other to the body of the glow plug, as shown. A good glow plug will have a 0.4 - 0.6 ohm resistance. This method can be used with the plug in or out of the engine. You can also use an ammeter to test the power drain (5 - 6 amps per plug).

WARNING: These glow plugs will become very hot to the touch. Be careful not to burn your fingers when testing the plugs.

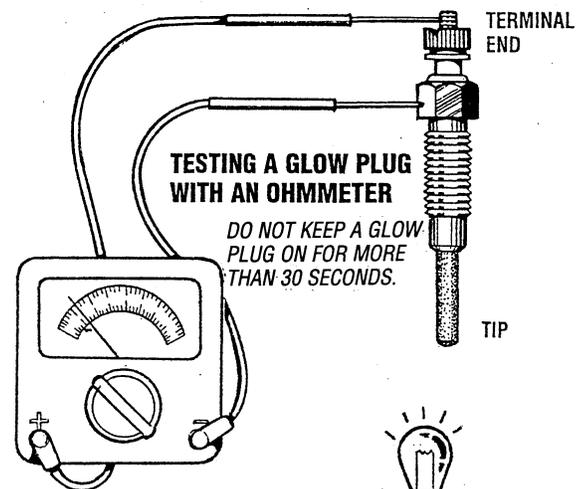

TESTING A GLOW PLUG USING A TEST LIGHT

Glow Plug Tightening Torque
7 - 11 ft-lb (1.0 - 1.5 m-kg)

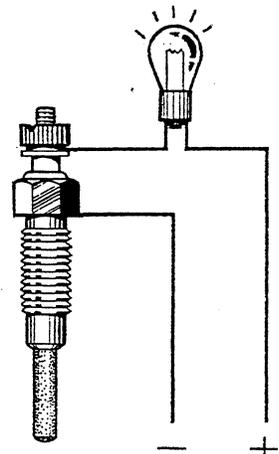

Re-install the plugs in the engine and test them again. The plugs should get very hot (at the terminal end) within 7 to 15 seconds. If the plugs don't heat up quickly, check for a short circuit. When reinstalling the glow plugs, use anti-seize compound on the threads.

FUEL INJECTORS

REMOVING THE INJECTORS

NOTE: Injector must be serviced in a "clean room" environment.

1. Disconnect the high pressure lines from the injectors and loosen the lines at their attachment to the injection pump and move them out of the way of the injectors. Avoid bending the lines.
2. Using a 17mm long socket, remove the fuel return line in its entirety from the top of the injectors. Take care not to lose the two sealing washers and banjo bolt that attaches the fuel return line to each injector.

NOTE: Clean the area around the base of the injector prior to lifting it out of the cylinder head to help prevent any rust or debris from falling down into the injector hole. If the injector will not lift out easily and is held in by carbon build up or the like, work the injector side to side with the aid of the 17mm deep socket wrench to free it and then lift it out.


3. The injector seats in the cylinder head on a copper sealing washer. This washer should be removed with the injector and replaced with a new washer when the injector is reinstalled.

INJECTION TESTING

1. Using the nozzle tester, check the spray pattern and injection starting pressure of nozzle and, if it exceeds the limit, adjust or replace the nozzle. When using nozzle tester, take the following precautions:


CAUTION: The spray injected from the nozzle is of such velocity that it may penetrate deeply into the skin of fingers and hands, destroying tissue. If it enters the bloodstream, it may cause blood poisoning.

- a. If the diesel fuel of the nozzle tester is discolored, replace it. At the same time, clean or replace the filter.
- b. Set the nozzle tester in a clean place where there is no dust or dirt.
- c. Mount the nozzle and nozzle holder on the nozzle tester.
- d. Use the fuel at the approximate temperature of 68° F (20° C)
- e. Operate the hand lever of nozzle tester several times to bleed the air in the nozzle line, then move the hand lever at intervals of one stroke per second while reading the injection starting pressure.

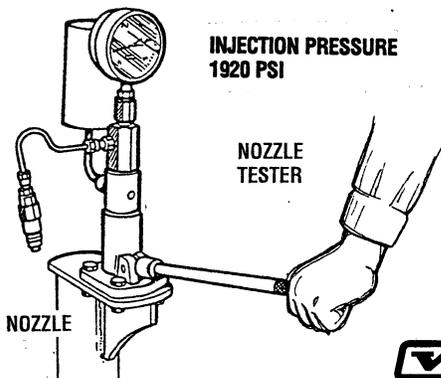

Inspecting Spray Pattern


1. Operate the hand lever of the nozzle tester at intervals of one stroke per second to check if the fuel is injected correctly in its axial direction. A nozzle is defective if it injects fuel in an oblique direction or in several separate strips. Also, a spray in the form of particles indicates a defect. These defects may sometimes be caused by clogging with dust and, therefore, all parts should be carefully cleaned before reassembly. (Care should be taken not to expose ones skin to this spray as it may penetrate the skin and cause infection.)

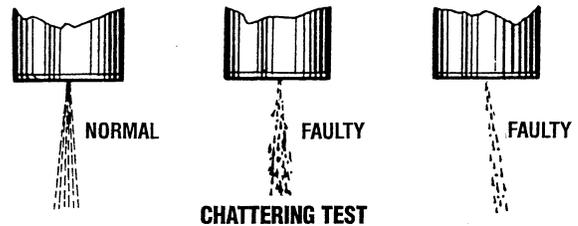

2. Apply the pressure of 1635 lb/in² (115 kg/cm²) to nozzle by operating the hand lever, and check the drips from the nozzle tip. If it drips or has a large accumulation of fuel on the bottom, it is considered defective and should be replaced. A very small amount of fuel may sometimes remain on the tip of the nozzle; however, this does not indicate a defect.



The injection starting pressure for the injectors is adjusted by increasing or decreasing the thickness of the adjusting shim. The shim has 10 different thicknesses for every 0.0020 in (0.05 mm), between 0.0049in (1.25mm) to 0.0669in (1.7mm). With each 0.0020in (0.05mm) increase, injection pressure is increased approximately 71.1 lb/in² (5.0 kg/cm²). When replacing the shim, grip the retaining nut in a vise and remove the body with a wrench. Tighten the retaining nut to the specified torque.

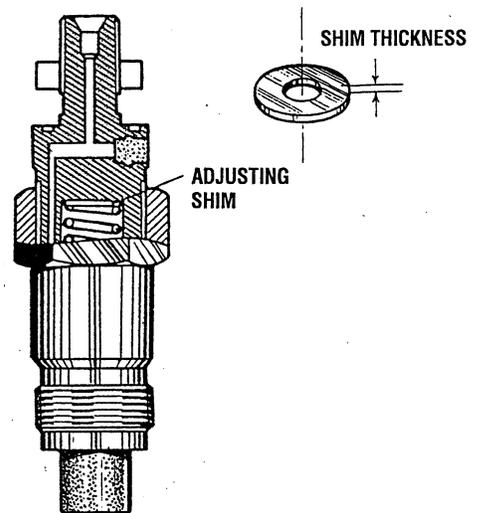

ENGINE TROUBLESHOOTING

LCD display faults 

Note: The engine's DC electrical system is protected by a 20 amp rocker type reset circuit breaker mounted on the control panel.


| Problem | Probable Cause | Verification/Remedy |
|--|---|---|
| START BUTTON depressed no panel indications. | <ol style="list-style-type: none"> 1. Battery Switch not on. 2. Circuit breaker tripped/off. 3. Loose battery connections. | <ol style="list-style-type: none"> 1. Check switch and/or battery connections. 2. Reset breaker; if breaker trips again, check preheat solenoid circuit and check circuit for shorts to ground. 3. Check (+) connection to starter solenoid and (-) connection to engine ground stud. Check battery cable connections. |
| START switch depressed no starter engagement. | <ol style="list-style-type: none"> 1. Connection to solenoid faulty. 2. Faulty solenoid. 3. Loose battery connection. 4. Low battery. 5. K1 Relay | <ol style="list-style-type: none"> 1. Check connection. 2. Check that 12 volts are present at the solenoid connection. 3. Check battery connections. 4. Check battery charge state. 5. Check K1 relay. |
| START switch is depressed; panel indications OK; starter solenoid OK actuator not functioning. | <ol style="list-style-type: none"> 1. Poor connections to actuator. 2. Defective actuator. | <ol style="list-style-type: none"> 1. Check connections. 2. Remove and check actuator. |
| Generator engine cranks but does not start, actuator energized. NOTE: There is a 6 - 8 crank cycle. Three cranks can be initiated if there is a no start after the 3 rd cycle. The cycles will be terminated and a Under Speed fault will be displayed on the LCD Display screen. | <ol style="list-style-type: none"> 1. Faulty Fueling system. 2. Preheat solenoid faulty. | <ol style="list-style-type: none"> 1. Check that the valves are open. <ol style="list-style-type: none"> 1a. Switch to combine house and start batteries. 1b. Replace batteries. 1c. Check fuel lift pump. 1d. Change inlet fuel filter. 2. Check solenoid. |
| Battery runs down. | <ol style="list-style-type: none"> 1. High resistance leak to ground. 2. Low resistance leak. 3. Poor battery connections. 4. DC Alternator not charging. | <ol style="list-style-type: none"> 1. Check wiring. Insert sensitive (0 - .25 amp) meter in battery lines. Do not start engine. Remove connections and replace after short is located. 2. Check all wires for temperature rise to locate the fault. 3. Check cable connections at battery for loose connections, corrosion. 4. Check connections, check belt tension, test alternator. See DC ELECTRICAL SYSTEM/ALTERNATOR in this manual. |
| Battery not charging | <ol style="list-style-type: none"> 1. DC charge circuit faulty. 2. Alternator drive. | <ol style="list-style-type: none"> 1. Perform DC voltage check of generator charging circuit. See DC ELECTRICAL SYSTEM/ALTERNATOR in this manual. 2. Check drive belt tension. Alternator should turn freely. Check for loose connections. Check output with voltmeter. Ensure 12 volts are present at the Exe terminal. |
| Generator engine stops. (Fault display under speed) NOTE: There is a 6 - 8 crank cycle. Three cranks can be initiated if there is a no start after the 3 rd cycle. The cycles will be terminated and a Under Speed fault will be displayed on the LCD Display screen. | <ol style="list-style-type: none"> 1. Switches and/or wiring loose. 2. Fuel starvation. 3. 20 Amp circuit breaker tripping. (LCD display blank) 4. Exhaust system is restricted. 5. Water in fuel. 6. Air intake obstruction. | <ol style="list-style-type: none"> 1. Inspect wiring for short circuits and loose connections. Inspect switches for proper operation. 2. Check fuel supply, fuel valves, fuel feed strainer. 3. Check for High DC amperage draw during operation. Ensure breaker is not overly sensitive to heat which would cause tripping. 4. Check for blockage or collapsed muffler. 5. Pump water from fuel tank(s), change filters and bleed fuel system. 6. Check air intake filter cartridge. |
| Engine starts, runs, and shuts down. | <ol style="list-style-type: none"> 1. Faulty oil pressure sensor 2. Water temperature sensor. 3. Faulty exhaust temperature switch. | <ol style="list-style-type: none"> 1. Check oil pressure sensor. 2. Check water temperature sensor. 3. Check temperature switch. |
| Exhaust smoking problems | <ol style="list-style-type: none"> 1. Blue smoke. 2. White smoke. 3. White smoke. | <ol style="list-style-type: none"> 1. Incorrect grade of engine oil. <ol style="list-style-type: none"> 1a. Crankcase is overfilled with engine oil (oil is blowing out through the exhaust). 2. Engine is running cold. <ol style="list-style-type: none"> 2a. Faulty injector or incorrect injector timing. 3. Improper grade of fuel or possible generator overload. <ol style="list-style-type: none"> 3a. Fuel burn incomplete due to high back pressure in exhaust or insufficient air for proper combustion (Check for restrictions in exhaust system; check air intake.). 3b. Improperly timed injectors or valves or poor compression. 3c. Lack of air — check air intake and air filter. Check for proper ventilation. |

ENGINE TROUBLESHOOTING

LCD DISPLAY FAULTS

| PROBLEM | PROBABLE CAUSE | VERIFICATION/REMEDY |
|---|--|--|
| LCD Display does not illuminate | <ol style="list-style-type: none"> 1. Check battery. 2. 20 amp breaker off. 3. Loose display connection. 4. 1 amp fuse blown (faulty). | <ol style="list-style-type: none"> 1. Battery on. 2. Turn breaker on. 3. Check all cable connections. 4. Check/replace. Determine cause |
| Low Oil Pressure | <ol style="list-style-type: none"> 1. Oil level low/oil leak. 2. Lack of oil pressure 3. Ground connection. 4. Faulty control module (ECU). 5. Faulty oil pressure sensor. | <ol style="list-style-type: none"> 1. Check oil level, add oil and repair leaks. 2. Test oil pressure. If OK, test oil pressure sensor, inspect oil filter, inspect oil pump. 3. Check ground connection. 4. Inspect all the plug connections/replace. 5. Check sensor/replace. |
| High Coolant Temperature | <ol style="list-style-type: none"> 1. Check system coolant level. 2. Sea water pump. 3. Check water pump drive belt. 4. Faulty temperature sensor. 5. Ground connection. 6. Faulty control module (ECU). | <ol style="list-style-type: none"> 1. Add coolant. Check for leaks. 2. Inspect impeller/pump/replace. 3. Adjust belt tension, replace belt. 4. Check sensor/replace. 5. Check ground circuit. 6. Check plug connections/replace. |
| High Exhaust Temperature | <ol style="list-style-type: none"> 1. Check sea water flow. 2. Faulty exhaust temperature switch. 3. Ground Connection. 4. Faulty control module (ECU). 5. Sea water pump. 6. Faulty fire suppression system. | <ol style="list-style-type: none"> 1. Inspect thru hull fitting, hose and strainer. Correct as needed. 2. Test/replace. 3. Check ground circuit. 4. Check plug connections. 5. Inspect impeller/replace. 6. By-pass system/check. |
| Battery Voltage | <ol style="list-style-type: none"> 1. Check alternator drive belt. 2. Check charge voltage. 3. Check battery connections. 4. Faulty control module (ECU). | <ol style="list-style-type: none"> 1. Adjust tension/replace if worn. 2. Check excitation. Replace/repair alternator 3. Check + and - cables from battery to engine. 4. Check plug connections/replace. |
| Generator Frequency Overspeed (steady LED) Underspeed (flashing LED) | <ol style="list-style-type: none"> 1. Check engine speed. 2. Check fuel supply. 3. Amperage load. 4. Crank cycle with no start. (underspeed fault) | <ol style="list-style-type: none"> 1. Check speed setting. 2. Inspect filters/replace filters. Test fuel pump operation. 3. Check + and - cables from battery to engine. 4. Check MPU. Check resistance. AC voltage cranking. Check for damage. |
| LED Display Edges Turn Pink | <ol style="list-style-type: none"> 1. Compartment ambient temperature too high. | <ol style="list-style-type: none"> 1. Ventilate compartment. <i>Note: Heat will often change the color of an LCD display. This will not effect the operation of the engine.</i> |
| Waiting for ECU | <ol style="list-style-type: none"> 1. ECU and LCD display not compatible. 2. Loose cable connection. 3. Panel DC breaker OFF. 4. Blown 8 amp fuse. 5. Terminating Resistors. 6. Battery Voltage to ECU. 7. Faulty 4-Way Connector | <ol style="list-style-type: none"> 1. Check compatibility with Westerlink or NMEA. 2. Check all cable connections. 3. Turn ON, check DC voltage across breaker. 4. Check/replace fuse. Check DC voltage across fuseholder 5. Check all terminating resistors are in place. 120 ohm per resistor measured across pin #4 and #5. 6. Check between pins P2-24 and P2-25. P2 ECU plug unplugged from ECU. Power turned ON. If voltage is present, ECU is faulty. 7. Replace Connector |

ALTERNATORS TESTING/TROUBLESHOOTING

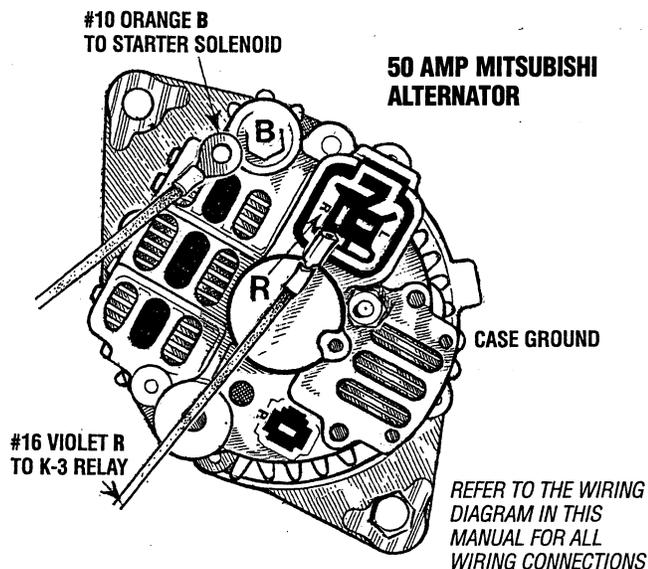

DESCRIPTION

The following information applies to the standard alternators that are supplied with WESTERBEKE'S Engines and Generators.

ELECTRICAL CHARGING CIRCUIT

The charging system consists of an alternator with a voltage regulator, an engine DC wiring harness, a mounted DC circuit breaker and a battery with connecting cables. Because of the use of integrated circuits (IC's), the electronic voltage regulator is very compact and is mounted internally or on the back of the alternator.

It is desirable to test the charging system (alternator and voltage regulator) using the wiring harness and electrical loads that are a permanent part of the system and will then provide the technician with an operational test of the charging system as well as the major components of the electrical system.

ALTERNATOR DESCRIPTION

The stator is connected to a three-phase, full-wave bridge rectifier package which contains six diodes. The bridge converts the AC generated in the stator to a DC output for battery charging and accessories,

Power to the regulator and the field of the integral regulator alternator is provided by the field diode (or diode trio) package contained in the alternator.

These alternators produce a rated output of 50 or 51 amps. rated output is achieved at approximately 6000 alternator rpm at an ambient temperature of 75°F (23.8°C). The alternators are designed to operate in an ambient temperature range of -40° to 212°F (-40° to 100°C).

VOLTAGE REGULATOR

The integral voltage regulator is an electronic switching device which senses the system voltage level and switches the voltage applied to the field in order to maintain a proper system voltage.

The regulator design utilizes all-silicon semi conductors and thick-film assembly techniques. After the voltage has been adjusted to the proper regulating valve, the entire circuit is encapsulated to protect the circuit and the components from possible damage due to handling or vibration.

ALTERNATOR TROUBLESHOOTING

Use this troubleshooting section to determine if a problem exists with the charging circuit or with the alternator. If it is determined that the alternator or voltage regulator is faulty, have a qualified technician check it.

⚠ WARNING: A working alternator runs hot. A failed alternator can become very hot. Do not touch the alternator until it has cooled.

LOW BATTERY/FAULTY CIRCUIT

If the starter only moans or makes a clicking sound instead of spinning the engine to life it is likely a low battery or a faulty connection in the starting circuit and not an alternator problem.

PRELIMINARY INSPECTION

Before starting the actual alternator and voltage regulator, testing the following checks are recommended.

1. Make certain your alternator is securely mounted.
2. Check the drive belts for proper tension. Replace the belt if it is worn or glazed.
3. Check that all terminals, connectors and plugs are clean and tight. Loose or corroded connections cause high resistance and this could cause overcharging, undercharging or damage to the charging system. Badly corroded battery cables could prevent the battery from reaching a fully charged condition.
4. Check the condition of the battery and charge if necessary. A low or discharged battery may cause false or misleading readings in the tests.

NOTE: An isolator with a diode, a solenoid, or a battery selector switch is usually mounted in the circuit to isolate the batteries so the starting battery is not discharged along with the house batteries. If the isolator is charging the starting battery but not the house battery, the alternator is OK and the problem is in the battery charging circuit.


ALTERNATORS TESTING/TROUBLESHOOTING

TESTING THE ALTERNATOR

CAUTION: Before starting the engine make certain that everyone is clear of moving parts! Keep away from sheaves and belts during test procedures.


1. Start the Engine.
2. After the engine has run for a few minutes, measure the starting battery voltage at the battery terminals using a multimeter set on DC volts.
 - a. If the voltage is increasing toward 14 volts, the alternator is working.
 - b. If the voltage remains around 12 volts, a problem exists with either the alternator or the charging circuit; continue with Steps 3 through 6.

MEASURING BATTERY VOLTAGE (ENGINE RUNNING)

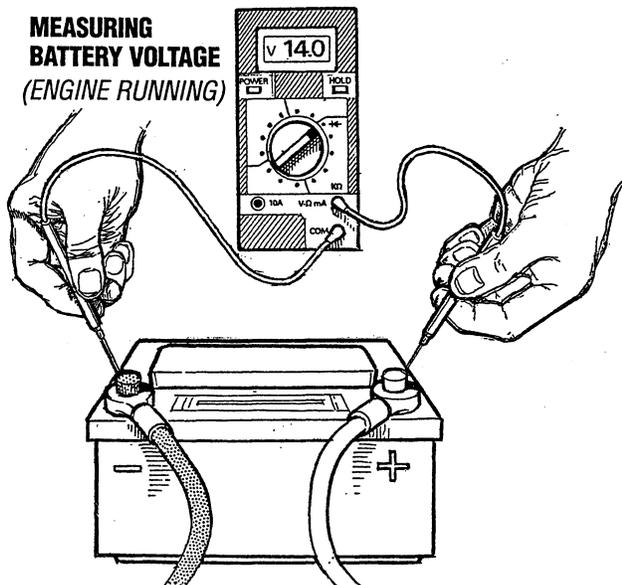


3. Turn off the engine. Inspect all wiring and connections. Ensure that the battery terminals and the engine ground connections are tight and clean.
4. If a battery selector switch is in the charging circuit, ensure that it is on the correct setting.
5. Check the battery voltage. If your battery is in good condition the reading should be 12 to 13 volts.

MEASURING BATTERY VOLTAGE (ENGINE OFF)

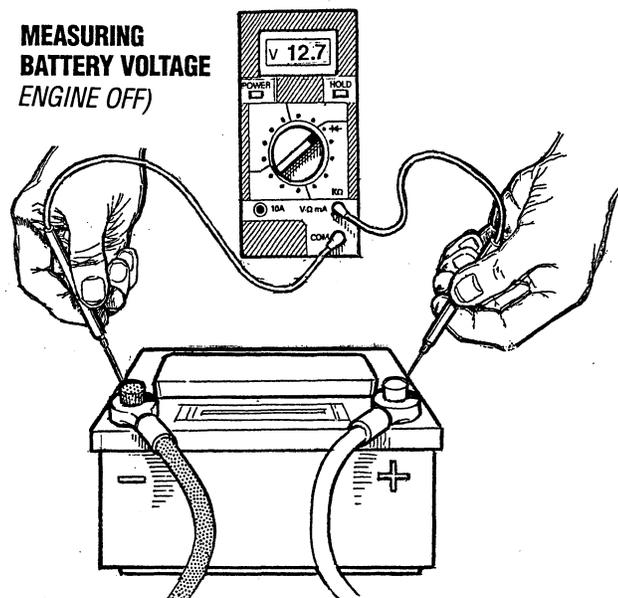

TESTING THE OUTPUT CIRCUIT

1. Connect the positive probe to the output terminal B and connect the negative probe to ground.
2. Wiggle the engine wiring harness while observing the voltmeter. The meter should indicate the approximate battery voltage, and should not vary. If no reading is obtained, or if the reading varies, check the alternator output circuit for loose or dirty connections or damaged wiring.
3. Start the engine.
4. Repeat the same measurement, the negative probe to ground, the positive probe to B with the engine running. The voltage reading should be between 13.5 and 14.5 volts. If your alternator is over or under-charging, have it repaired at a reliable service shop.
5. If the previous test reads only battery voltage at terminal B, use the meter to measure the DC excitation terminal. If 12 volts is not present at exciter terminal R, inspect the wiring for breaks and poor connections. Jump 12 volts from a 12 volt source (such as the battery) and operate the alternator. If the voltage output is 13-14 volts, . . . then the alternator is OK.

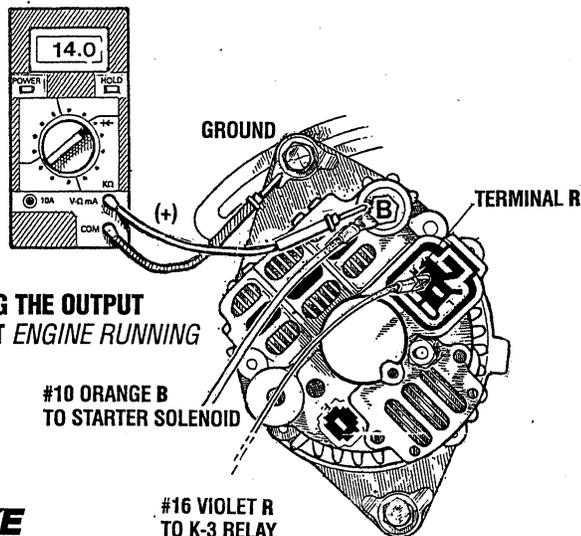


TESTING THE OUTPUT CIRCUIT ENGINE RUNNING

ALTERNATORS TESTING/TROUBLESHOOTING

TESTING THE EXCITATION CIRCUIT


1. Connect the positive (+) multimeter probe to the excitation terminal **R** on the alternator and the negative (-) lead to ground.
2. Turn the battery switch to the on position and note the multimeter reading. The reading should be 1.3 to 2.5 volts (see illustration).

TESTING THE EXCITATION CIRCUIT (ENGINE RUNNING)

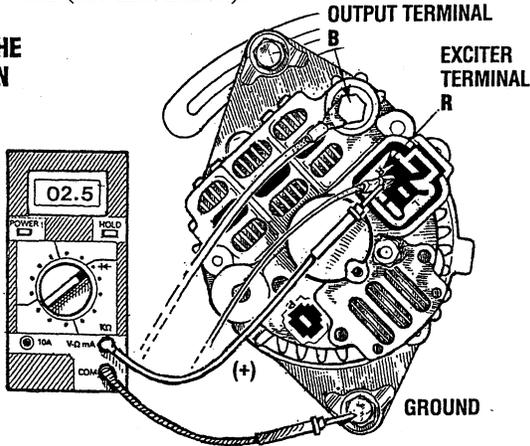

3. If the reading is between .75 and 1.1 volts, the rotor field circuit probably is shorted or grounded.
4. If the reading is between 6.0 and 7.0 volts, the rotor field circuit probably is open.
5. If no reading is obtained, an open exists in the alternator-excitation lead or in the excitation circuit of the regulator. Disconnect the lead from exc terminal **R**. Connect the positive multimeter probe to the excitation lead and the negative multimeter probe to ground. If the multimeter now indicates an approximate battery voltage, the voltage regulator is defective and must be replaced. If no voltage is indicated, check the excitation circuit for loose or dirty connections or damaged wiring.

TESTING THE EXCITATION CIRCUIT ENGINE RUNNING

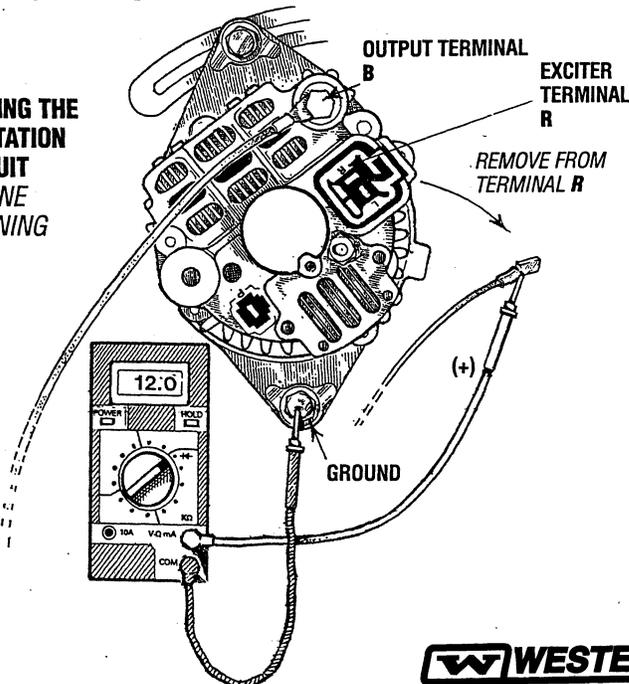

CHECKING THE SERVICE BATTERY

Check the voltage of the service battery. This battery should have a voltage between 13 and 14 volts when the engine is running. If not, there is a problem in the service battery charging circuit. Troubleshoot the service battery charging circuit by checking the wiring and connections, the solenoid, isolator, battery switch, and the battery itself.

When the problem has been solved and before the alternator is back in operation, take the time to tighten and clean the terminal studs. Also clean the connecting terminals from the wiring harness.

ALTERNATOR REPAIR

If tests indicate a failed alternator, it will need to be disassembled and repaired. Any good alternator service shop can do the job.

NOTE: WESTERBEKE'S Service Manual has detailed instructions for the disassembly and repair of their standard alternators.

BATTERY CARE

The minimum recommended capacity of the battery used in the engine's 12 volt DC control circuit is 800 - 1000 Cold Cranking Amps (CCA).

Review the manufacturer's recommendations and then establish a systematic maintenance schedule for your engine's starting batteries and house batteries.

- Monitor your voltmeter for proper charging during engine operation.
- Check the electrolyte level and specific gravity with a hydrometer.
- Use only distilled water to bring electrolytes to a proper level.
- Make certain that battery cable connections are clean and tight to the battery posts (and to your engine).

GENERATOR INFORMATION

USE OF ELECTRIC MOTORS

The power required to start an electric motor is considerably more than is required to keep it running after it is started. Some motors require much more current to start than others. Split-phase (AC) motors require more current to start, under similar circumstances, than other types. They are commonly used on easy-starting loads, such as washing machines, or where loads are applied after the motor is started, such as small power tools. Because they require 5 to 7 times as much current to start as to run, their use should be avoided, whenever possible, if the electric motor is to be driven by a small generator. Capacitor and repulsion-induction motors require from 2 to 4 times as much current to start as to run. The current required to start any motor varies with the load connected to it. An electric motor connected to an air compressor, for example, will require more current than a motor to which no load is connected.

In general, the current required to start 115-Volt motors connected to medium starting loads will be approximately as follows:

| MOTOR SIZE (HP) | AMPS FOR RUNNING (AMPERES) | AMPS FOR STARTING (AMPERES) |
|-----------------|----------------------------|-----------------------------|
| 1/6 | 3.2 | 6.4 to 22.4* |
| 1/4 | 4.6 | 9.2 to 32.2* |
| 1/3 | 5.2 | 10.4 to 72.8* |
| 1/2 | 7.2 | 14.4 to 29.2* |
| 3/4 | 10.2 | 20.4 to 40.8* |
| 1 | 13 | 26 to 52 |

***NOTE:** In the above table the maximum Amps for Starting is more for some small motors than for larger ones. The reason for this is that the hardest starting types (split-phase) are not made in larger sizes.

Because the heavy surge of current needed for starting motors is required for only an instant, the generator will not be damaged if it can bring the motor up to speed in a few seconds. If difficulty is experienced in starting motors, turn off all other electrical loads and, if possible, reduce the load on the electric motor.

Required Operating Speed

Run the generator first with no load applied, then at half the generator's capacity, and finally loaded to its full capacity as indicated on the generator's data plate. The output voltage should be checked periodically to ensure proper operation of the generating plant and the appliances it supplies. If an AC voltmeter or ampere meter is not installed to monitor voltage and load, check it with a portable meter and amp probe.

NOTE: When the vessel in which the generator is installed contains AC equipment of 120 volts only, it is recommended that the generator's AC terminal block be configured to provide one 120 volt AC hot leg for the vessel's distribution panel. This will ensure good motor starting response from the generator.

CARBON MONOXIDE DETECTOR

WESTERBEKE recommends mounting a carbon monoxide detector in the living quarters. Carbon Monoxide, even in small amounts is deadly.

Generator Frequency Adjustment

Frequency is a direct result of engine/generator speed, as indicated by the following:

- When the generator is run at 1800 RPM, the AC voltage output frequency is 60 Hertz.
- When the generator is run at 1500 RPM, the AC voltage output frequency is 50 Hertz.

Therefore, to change the generator's frequency, the generator's drive engine's speed must be changed. A reconfiguration of the AC output connections at the generator is also necessary.

Therefore, to change the generator's frequency/voltage, the generator's drive engine's speed must be changed using the dipswitch on the ECU. The AC output configuration of the generator changed and the connections on the voltage sensing PC board changed.

WHEN CHANGING THE GENERATORS FREQUENCY (50/60 HZ) SWITCH #1 ON THE CONTROL PANEL ECU BOARD MUST BE SWITCHED: ON FOR 50 HZ AND OFF FOR 60 HZ.



Generator Maintenance

- Maintaining reasonable cleanliness is important. Connections of terminal boards and rectifiers may become corroded, and insulation surfaces may start conducting if salts, dust, engine exhaust, carbon, etc. are allowed to build up. Clogged ventilation openings may cause excessive heating and reduced life of windings.
- For unusually severe conditions, thin rust-inhibiting petroleum-base coatings, should be sprayed or brushed over all surfaces to reduce rusting and corrosion. Typical materials suggested are Daubert Chemical Co. "Non-Rust AC-410" and Ashland "Tectyle 506" or equivalent.
- In addition to periodic cleaning, the generator should be inspected for (a) tightness of all connections, (b) evidence of overheated terminals and (c) loose or damaged wires.
- The drive discs on single bearing generators should be checked periodically if possible for tightness of screws and for any evidence of incipient cracking failure. Discs should not be allowed to become rusty because rust may accelerate cracking. The bolts which fasten the drive disc to the generator shaft must be hardened steel SAE grade 8, identified by 6 radial marks, one at each of the 6 corners of the head.
- The rear armature bearing is lubricated and sealed; no maintenance is required. However, if the bearing becomes noisy or rough-sounding, have it replaced.
- Examine bearing at periodic intervals. No side movement of shaft should be detected when force is applied. If side motion is detectable, bearings are wearing or wear on shaft of bearing socket outside bearing has occurred. Repair must be made quickly or major components will rub and cause major damage to generator.

BT GENERATOR SINGLE PHASE



DESCRIPTION

This generator is a four-pole, brushless, self-excited generator which requires only the driving force of the engine to produce AC output. The copper and laminated iron in the exciter stator are responsible for the self-exciting feature of this generator. The magnetic field produced causes an AC voltage to be induced into the related exciter rotor windings during rotation. Diodes located in the exciter rotor rectify this voltage to DC and supply it to the windings of the rotating field. This creates an electromagnetic field which rotates through the windings of the main stator, inducing an AC voltage which is supplied to a load. A step down transformer is connected in parallel to the AC output of the main stator. An AC voltage is produced in the auxiliary windings of the transformer and the main stator and is, in turn, supplied to a full-wave bridge rectifier. The rectifier produces a DC voltage to further excite the exciter stator windings, enabling the generator to produce a rated AC output.

Circuit Breaker

A circuit breaker is installed on all WESTERBEKE generators. This circuit breaker will automatically disconnect generator power in case of an electrical overload. The circuit breaker can be manually shut off when servicing the generator to ensure no AC power is coming from the generator to the vessel.

NOTE: This circuit breaker is available as a WESTERBEKE add-on kit for earlier model generations; contact your WESTERBEKE dealer.

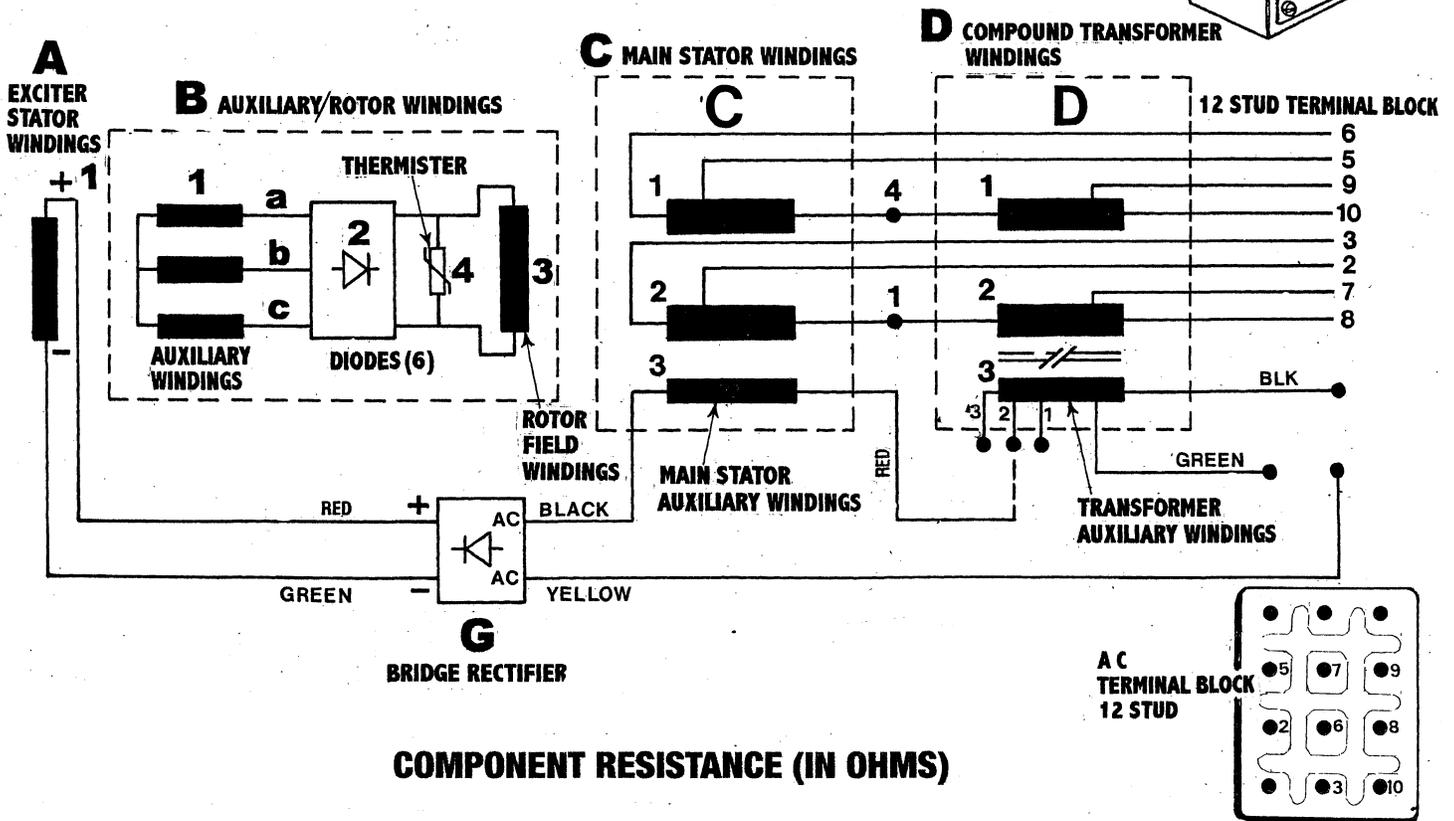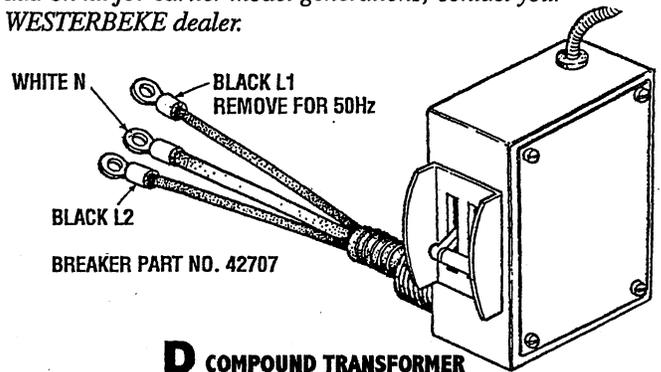

COMPONENT RESISTANCE (IN OHMS)

A EXCITER STATOR WINDINGS

1....10.0 Ω

B AUXILIARY ROTOR WINDINGS

1 a b c Auxiliary Windings are measured in pairs:
a-b....1.3 Ω, b-c....1.3 Ω, c-a....1.3 Ω

2 Diodes (6)....Ω/Infinite

3 Rotating Field Windings....8.1 Ω

4 Thermister....infinite

C MAIN STATOR WINDINGS

1 and 2....0.6 Ω

3 Main Stator Auxiliary Windings....1.8 Ω

D COMPOUND TRANSFORMER WINDINGS

1 and 2....0.2 Ω

3 Compound Transformer Aux. Windings....4.3 Ω

G BRIDGE RECTIFIER

Note: Resistance readings and voltage checks can be accessed easily for the components in the exciter circuit A, G, C-3 and D-3 by locating the color coded wires at the connection points shown on the above schematic. When checking winding resistance values be sure to lift both of the component's electrical connections.

BT GENERATOR SINGLE PHASE

PRELIMINARY CHECKING

Before electrical testing check for proper engine speed/hertz adjustment. Low engine speed will cause low AC voltage output, high engine speed-high AC output.

Before testing, get a clear explanation of the problem that exists, be certain it relates to generator components.

TROUBLESHOOTING

The test procedures on the following pages can be used to troubleshoot WESTERBEKES 12 stud (terminal block) BT generators.

Due to the simplicity of the generators design troubleshooting is relatively simple and field testing and repairing can be accomplished with basic tools and repair parts which should include the following:

A quality multimeter [multitester] capable of reading less than one ohm and with a specific diode testing function.

Basic electrical tools including cutters, soldering iron, wire stripper/crimper, terminals connectors, etc.

Repair parts such as diodes, suppressors, fuses, bridge rectifier, etc.

TROUBLESHOOTING SEQUENCE

The **bold** letters and numbers refer to the components of the *internal wiring schematics* and also to the *component resistance charts* in the following pages

LOW VOLTAGE (60-100 VOLTS-AC/60Hz - 115-200VOLTS/50Hz) TEST COMPONENTS IN THE FOLLOWING ORDER:

F Selector Switch (6 stud only)

B Exciter Rotor:

2 Diodes (6), **3** Field Windings, **1** Exciter Windings **a b c**

A Exciter Stator Windings **1-1+2**

NO AC VOLTAGE OUTPUT (EXTREMELY LOW VOLTAGE 1-5 VOLTS) TEST COMPONENTS IN THE FOLLOWING ORDER:

C Main Stator Windings **1+2**

B Thermister **4**

2 Diodes (**4-6** open/shorted)

D Compound Transformer Winding **1+2**

B Rotor Field Winding **3**

RESIDUAL VOLTAGE (18-22V) TEST COMPONENTS IN THE FOLLOWING ORDER:

A Exciter Stator Windings **1-1+2**

G Bridge Rectifier

D Transformer Aux. Winding **3**

C Main Stator Aux. Winding **3**

Check Also: *Circuit connections from the transformer to the connections on the Bridge Rectifier.*

EXCITER CIRCUIT VOLTAGES (NOMINAL)

AC into Bridge Rectifier: No Load 16 VAC - Full Load 45 VAC

DC out of Bridge Rectifier: No Load 7 VDC - Full Load 20 VDC

BT GENERATOR SINGLE PHASE

REFER TO THE WIRING SCHEMATIC WHEN PERFORMING THESE TESTS AND MEASUREMENTS

NO-LOAD VOLTAGE

The amount of no-load voltage produced by the generator can be an indicator of where in the generator the problem/fault may lie.

Residual Voltage 18-22 Volts

This voltage is the AC voltage produced by the generator from magnetism in the exciter stator field. This voltage is measured between the AC Neutral and Hot leg(s) with no-load on the generator running at 60 hertz.

The presence of residual voltage is an indication that the following generator components are OK.

Exciter Rotor **B-1 a, b, & c** and **B-2**

Rotating Field **B-3**

Main Stator **C-1** and **C-2**

Compound Transformer **D-1** and **D-2**

The fault lies in one or more of the following components in the exciter circuit.

Exciter Stator **A-1** [and **A-2** if applicable]

Bridge Rectifier **G**

Selector Switch [if applicable]


Main Stator Auxiliary Windings **C-3**

Compound Transformer Auxiliary Winding **D-3**

12 VOLT EXCITATION

Twelve (12) volt DC excitation applied to the exciter stator windings should cause the generator to produce between 140-150 volts AC measured between the Line and Neutral. (Normal Excitation 8-9 volts DC no load)


Correct voltage produced with 12 volts excitation indicates the fault is in one or more of the above listed components **B-3**, **D-1**, **D-2**, & **D-3**.

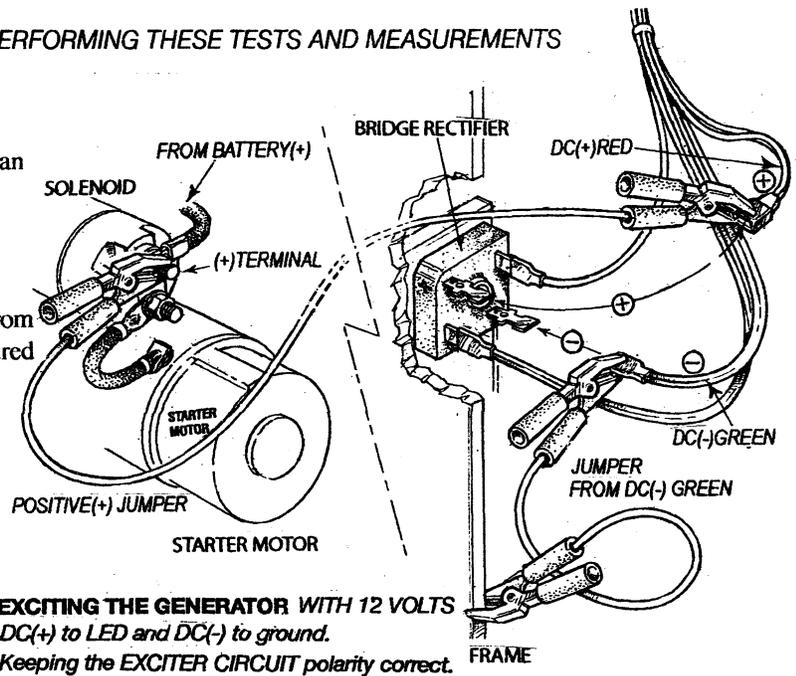

If the generator does not produce the correct voltage [140-150V with excitation, then also include the rotor components as possible faults. The Absence of any voltage from the generator indicates a fault with the main stator windings **C-1** and **C-2** and/or the compound transformer windings **D-1** and **D-2**.

Apply 12 volt DC excitation to the exciter stator windings as illustrated. A fault in the main stator and/or compound transformer windings such as a short will cause the generator engine to load down and the shorted windings to eventually produce smoke as the excitation is continued.

Voltage output greater than residual and less than rated output 35-100 volts indicates a fault in the exciter rotor/field **B-1**, **B-2** or **B-3**. Excitation of the generator should produce a partial rise in voltage output and, when removed, the voltage will return to the original low output.

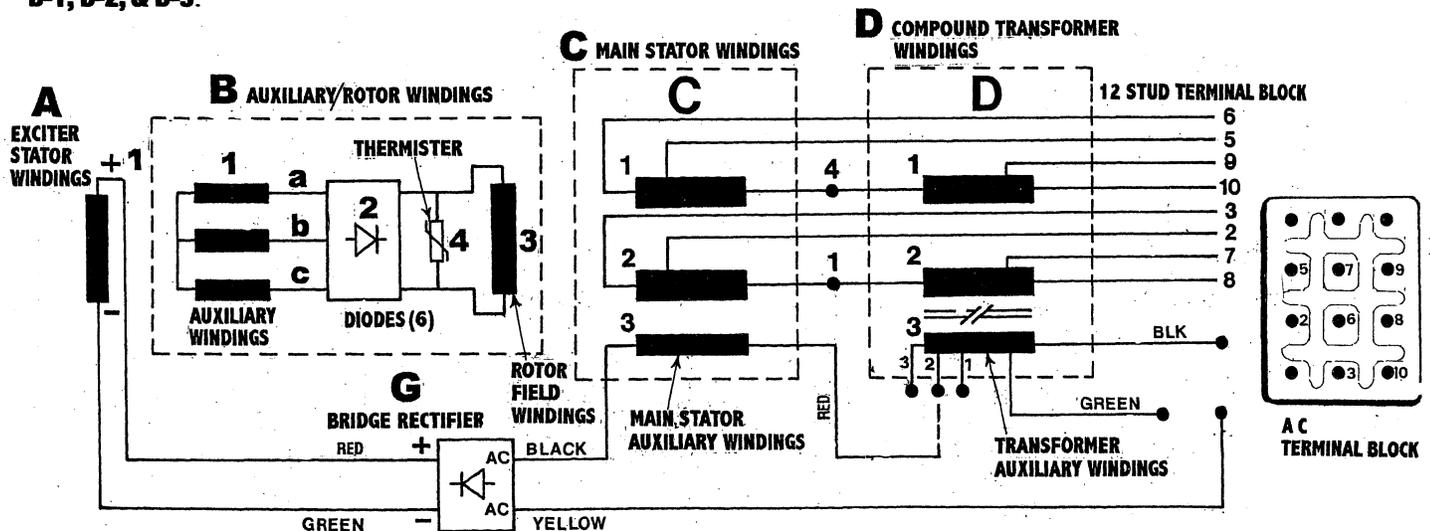

VOLTAGE ADJUSTMENT


NO-LOAD VOLTAGE ADJUSTMENT

Voltage adjustment is made with the generator regulation being governed by the compound transformer.

1. The selector switch [if applicable] must be in the comp position
2. To confirm no-load voltage, start the generator and apply a momentary (moderate) load to excite the transformer. The voltage produced by the generator after the momentary load is removed is no-load voltage. Note the voltage output from the generators 120 volt leg(s) (230 volt 50 hertz). The no-load voltage should be between 121-124 volts at 61.5-62 hertz (232-236 volts at 51.5-52 hertz).
3. To raise or lower the voltage, shims of varying thickness (non-conductive material) are placed or removed from under the steel laminated bar on top of the compound transformer. The material used for shimming should not soften at temperatures in the 176° (80° C) range. A small reduction in no-load voltage (1 to 3 volts) can sometimes be accomplished by gently tapping the top of the laminated steel bar to reduce the gap between the existing shims and the transformer core.

Connects to 1, 2, or 3, red to increase or decrease AC voltage

THREE POSITION TERMINAL

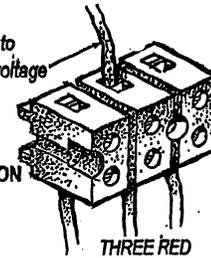


FULL-LOAD VOLTAGE ADJUSTMENT

VOLTAGE CONNECTION TERMINAL

The three red connections coming into this component can be used to increase AC voltage to the bridge rectifier or lower it by moving the single/double red connection on the other side from #3 to #2 or #1 to increase and from #1 to #2 or #3 to decrease. Increasing AC voltage to the rectifier will increase excitation and the AC output. Decreasing AC voltage to the rectifier will lower excitation and the AC output. These connections are generally used to increase excitation when at full amperage load the AC output of the generator falls below acceptable levels 108 volts – 60 hertz or 210 volts – 50 hertz. Note: Hertz/Speed drop is not the issue. No-load voltage may need to be adjusted when these connections are moved.



Note: Do not use these adjustments to compensate for overload conditions being placed on the generator/engine (inductive-motor type loads). Loss of generator hertz/speed, the result of this type of overload, will cause a drop in voltage output.

BT GENERATOR COMPONENTS

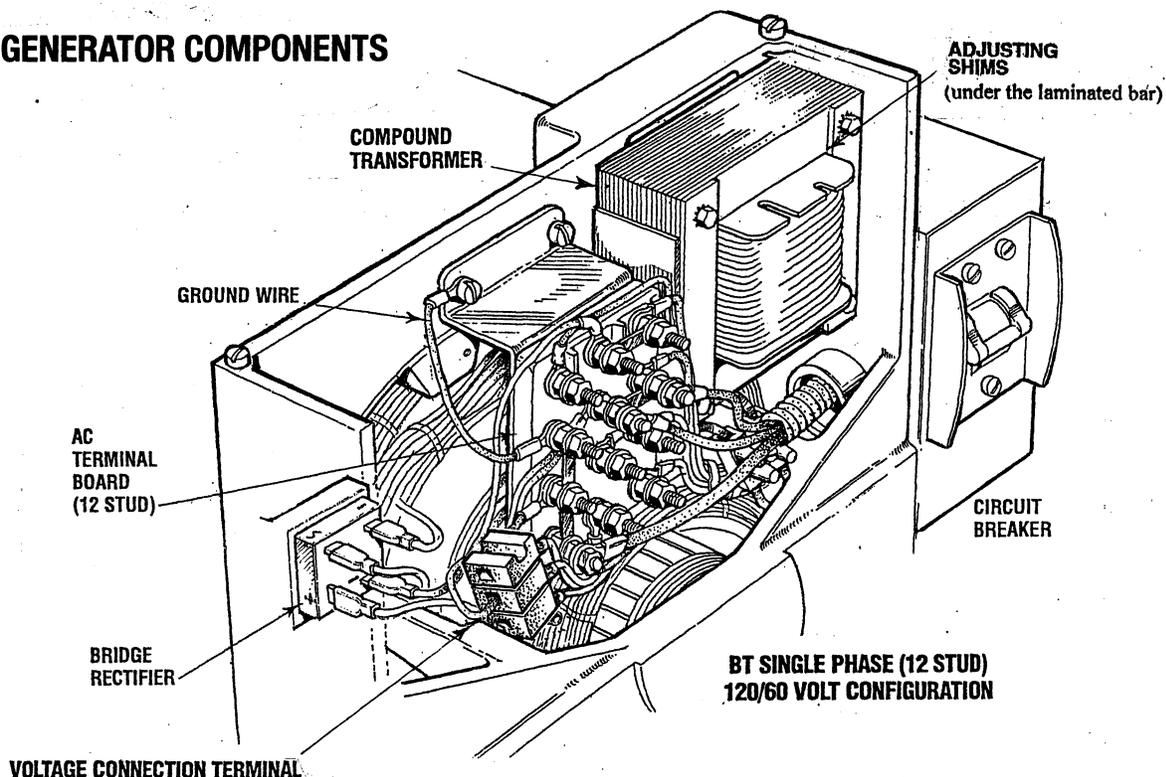

BT GENERATOR TROUBLESHOOTING

TESTING STATOR WINDINGS VERY LOW VOLTAGE, OR NO VOLTAGE

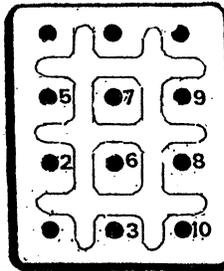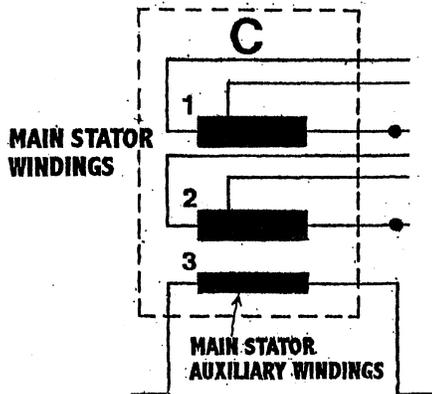


AC TERMINAL BLOCK (12 stud)

MAIN STATOR AUXILIARY WINDINGS C-3

Resistance is measured between the lifted single black AC connection on the bridge rectifier and the single lifted red lead off the #3 position junction terminal.


Main stator auxiliary windings resistance
C-3 - 1.7Ω

Continuity Test: No continuity should be found between the lifted leads to the generator case/ground.

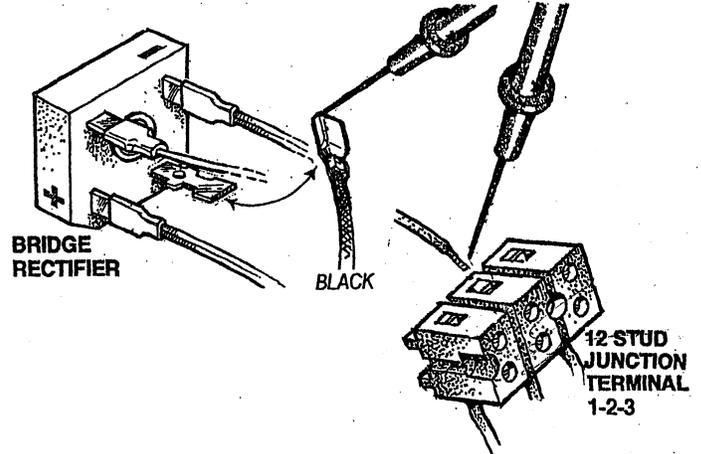

MAIN STATOR WINDINGS C


Windings Group C-1: The resistance value is measured between lifted #4 from Junction Terminal or Red Isolation Post below the transformer and lead #6 lifted off the AC terminal Block. To totally isolate this winding group. Also lift lead #5 off the terminal Block

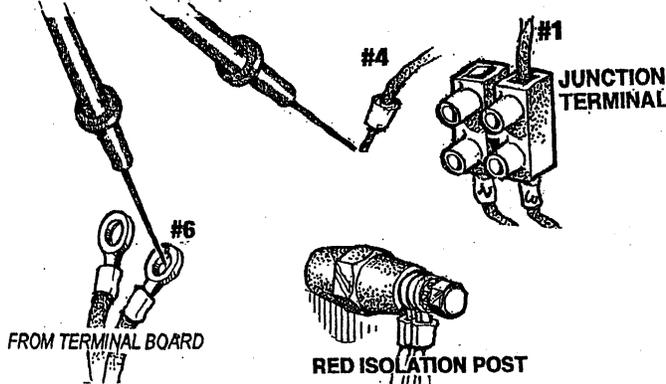

Windings Group C-2: The resistance value is measured between the lifted lead #1 from the Junction Terminal or Red Isolation Post below the transformer and lead #3 lifted off the AC Terminal Block. To totally isolate this winding group. Lift lead #2 off the terminal Block.

Main stator windings C-1 - 0.6Ω C-2 - 0.6Ω

Continuity Test: No continuity should be found between the lifted leads to the case/ground or between the connections of the two groups.

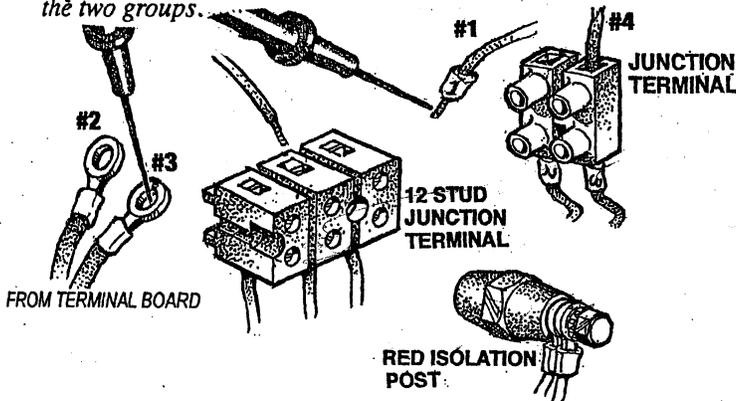


TESTING THE BRIDGE RECTIFIER (meter FLUKE multimeter)


1. Set the meter on Ohms scale and connect the positive lead to point #4. Take the negative lead and momentarily touch point #1, #2, #3 and #5. There should be no Ohm value registered on the meter.
2. Remove the positive lead from point #4 and connect the negative lead to it. Momentarily touch points #1, #2 and #3. The Ohm meter should register an arbitrary value at each point it touches.
3. Leave the negative lead on point #4, touch point #5 with the positive lead. The meter should register no Ohm value.
4. Place the positive lead on point #1 and the negative lead on point #3. The meter again should register no Ohm value. Reverse these connections and the meter should register no Ohm value.

If the rectifier fails any of these tests replace the rectifier as it is defective.

Note: The AC-DC terminals location may vary on some bridge rectifiers but + and - are clearly marked.

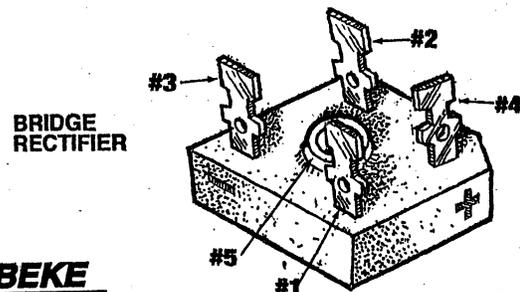

COMPOUND TRANSFORMER

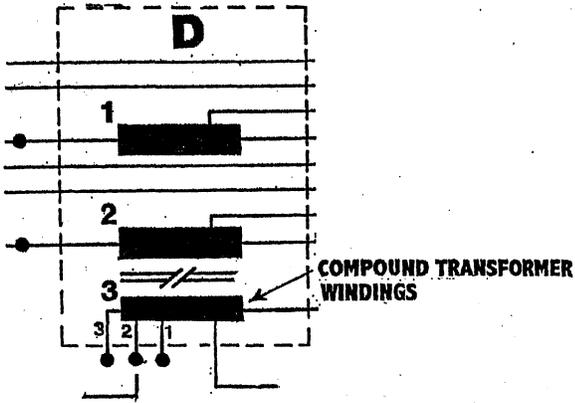


COMPOUND TRANSFORMER D MEASURING RESISTANCE

Winding Group D-1: Resistance value is measured between lifted #4 lead from the junction terminal and lead #10 lifted off the AC terminal block. To totally isolate the winding lift lead #9 off the AC terminal block.

Winding Group D-2: Resistance value is measured between lifted lead #1 from the junction terminal and lead #8 lifted off the AC terminal block. To totally isolate the winding lift #7 off the AC terminal block.


Compound Transformer Windings Resistance
D-1 & D-2 – 0.2Ω

Continuity Test: No continuity should be found from either of these leads to the generator case/ground or between either of the transformer winding groups.

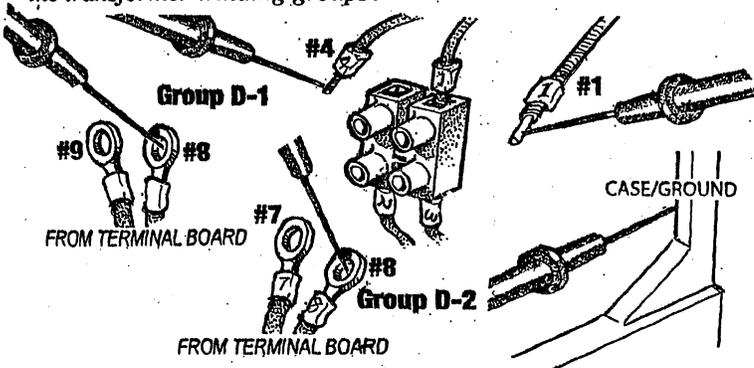


Transformer Auxillary-Windings D-3: Remove all three leads #1, #2, and #3 from the three position terminal strip (located just below the transformer). Lift the black and green leads from the AC terminal block and measure between red #1 and the black lead. Transformer Auxillary Windings Resistance
D-3 – 1.7-1.8Ω

Continuity Test: There should be no continuity found from any of these leads to the case/ground or to either transformer winding group.

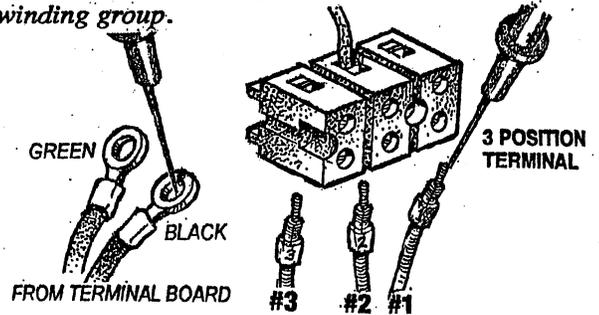

TESTING EXCITER ROTOR WINDINGS

B AUXILIARY ROTOR WINDINGS

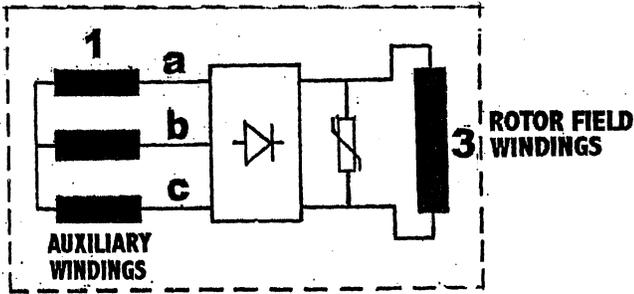

TESTING AUXILIARY WINDINGS 1 a b and c

Locate the three terminal points on the exciter rotor for these auxiliary winding groups. Position the exciter rotor as shown in the illustration and count off the porcelain knobs from the 12 o'clock point either left or right to locate terminal points **a**, **b** and **c**. Measure the resistance value between the pairs of terminal points **a** & **b**, **b** & **c** and **c** & **a**. There is no need to unsolder these connections unless a faulty reading appears. If this occurs, unsolder and verify the winding fault. There should be no continuity found between any of the three terminal points and the rotor shaft/case ground.

Auxiliary windings 1-a, b and c 12 Stud – 1.3 Ω

TESTING ROTOR FIELD WINDINGS 3

Refer to the illustration or diagram of the exciter rotor. The field winding connections are noted as the (+) and (-) connections of the red & white striped wires. Measure the resistance value with your ohmmeter between these two connection points. These connections need not be unsoldered unless a faulty reading appears. If this occurs unsolder the connection and verify the resistance reading. With these connections lifted, there should be no continuity to the rotor shaft. This would indicate a short to ground with these field windings.

Field Windings 3 12 Stud – 8.1 Ω



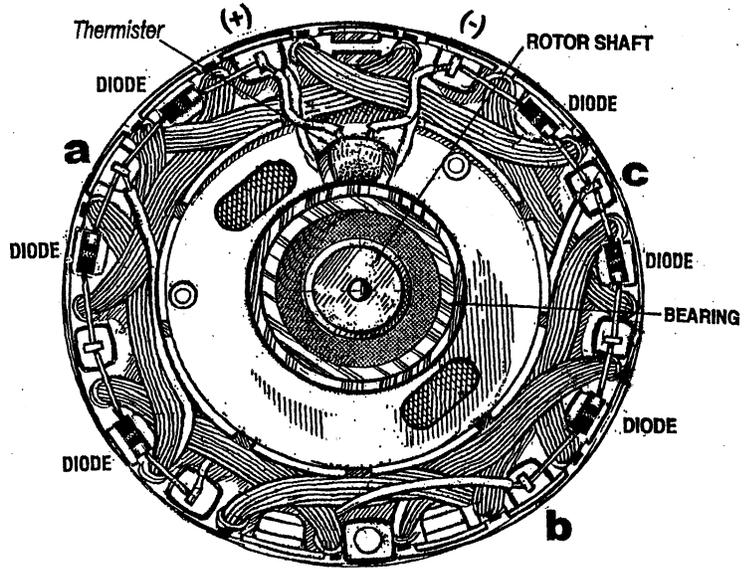


ILLUSTRATION AND DIAGRAM OF THE EXCITER ROTOR

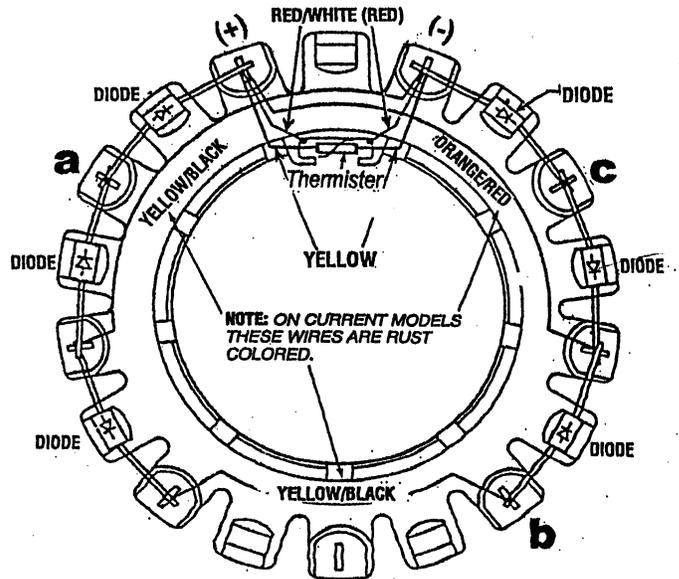

BT GENERATOR SINGLE PHASE

REFER TO THE WIRING SCHEMATICS TROUBLESHOOTING GUIDES AND COMPONENT RESISTANCE CHARTS IN THIS MANUAL

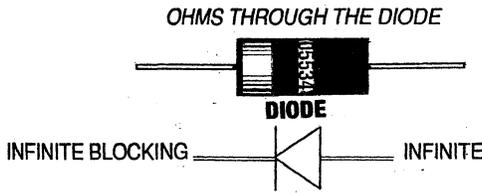


TESTING DIODES

Six diodes are mounted on the exciter rotor; they rectify the AC voltage produced by the three groups of the auxiliary windings to DC voltages and supply this DC voltage to the rotating field windings.



The diodes can be easily checked in place with the use of a common automotive 12-volt high beam headlight bulb, some jumper leads and the generator's 12 volt starting battery.

A short or an open in a diode can easily be found with the above without having to unsolder and isolate each diode to check it with an ohmmeter.

Note: Attempting to check diodes in place with an ohmmeter will give erroneous readings on the diodes due to the auxiliary winding's connections.

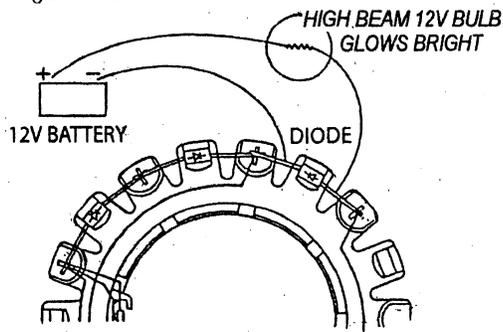

When leads are put across the diode, as illustrated, voltage passes through the diode allowing the headlight to glow brightly.

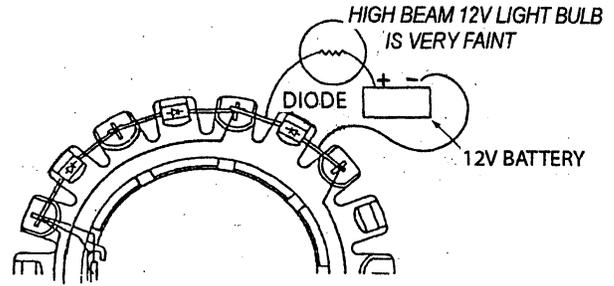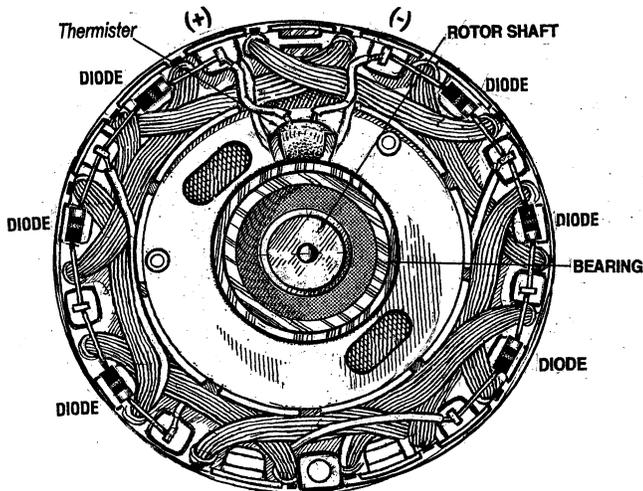

Reverse the leads across the diode. The diode should block voltage passing through it, and the headlight should not glow, or it may glow faintly.

1. Should the bulb not glow with leads connected in both directions, the diode is open internally.
2. Should the bulb glow with leads connected in both directions, the diode is shorted internally.

In both 1. and 2. above, the diode should be replaced. Check the resistance values of the rotating field windings and the integrity of the resistors connected between the field windings.



TESTING THE THERMISTER

The thermistor is located on the Exciter Rotor and connects between the + and - connection for the rotating field winding resistance: Infinite.

The Thermistor is a voltage absorber when amperage load changes take place with the generator to help prevent/ or reduce light flicker if open circuited, it has no affect on the operation of the generator other than a flicker in the lights when amperage load changes take place not occurring before. Should the thermistor short it will negate the affects of the rotating field winding on the stator windings and no AC output voltage will be produced.

When exciting the generator in an effort to locate the cause of a very low or no AC output and the cause is a shorting thermistor. There will be no loading of the drive engine. No growling from the AC generator. However as the excitation is allowed to continue the short will produce heat in the thermistor and some electrical smell/smoke visible in the area of the rotor rear carrier bearing. The thermistor can be removed and the generator operation restored other than for light flicker until a replacement is installed.

BT GENERATOR SINGLE PHASE

CHANGING FREQUENCY 50/60Hz

1. Frequency is a direct result of engine/generator speed:
1800 rpm = 60 hertz; 1500 rpm = 50 hertz.
2. To change generator frequency follow the steps below.
 - a. Configure the AC terminal block for the desired voltage frequency as shown. * Ensure that the case ground wire is connected to the correct terminal block neutral ground stud.

NOTE: The white/green ground wire may be removed in those installations where the AC circuit has a separate neutral and ground circuit. This will prevent the unit from being a ground source in the vessel.
 - b. Start the engine, monitor AC voltage. Adjust no-load AC voltage output as needed.
 - c. After the no-load hertz adjustment is made, the no-load voltage may need to be readjusted. In most cases, if the generator was producing the correct no-load voltage at the previous hertz setting, it would be correct at the changed hertz setting.
In the event it needs adjustment, adjust the shim thickness under the laminated steel bar of the transformer.


60 hertz: no-load voltage, 121 - 124 volts.
50 hertz: no-load voltage, 234 - 238 volts.
 - d. Load the generator to the rated amperage output corresponding to the hertz speed of the generator.

Rated Loaded Speed
60 hertz: loaded speed, 59.5 – 60.0 Hertz
50 hertz: loaded speed, 49.5 – 50.0 Hertz
Maximum voltage drop acceptable at full rated output (amps)
60 hertz: 108 - 110 volts
50 hertz: 215- 220 volts

Should the voltage drop below the proper rate, loaded excitation can be increased to raise this voltage by repositioning the connection on the Voltage Connection Terminal.

TERMINAL BLOCK WIRING CONNECTIONS

Winding Connections Needed To Obtain The Proper Voltage and Frequency

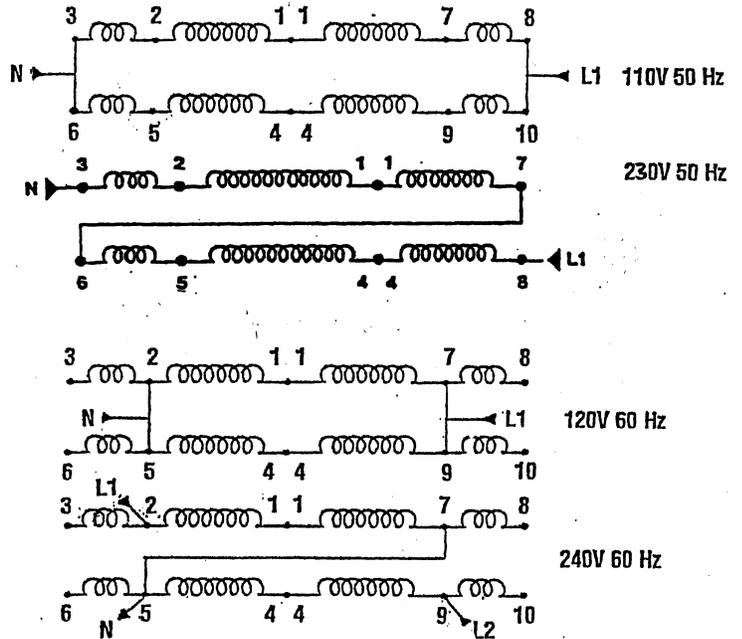

* AC TERMINAL BLOCK CONNECTIONS

DIP SWITCH

CHANGING FREQUENCY
(DC breaker must be off)

When changing the generators frequency (50/60Hz) switch #1 on the ECU board must be positioned: **ON** for 50Hz
OFF for 60Hz

ECU SWITCHES


BT SHORE POWER TRANSFER SWITCH CONNECTION

If the installer connects shore power to the vessel's AC circuit, this must be done by means of the SHORE POWER/OFF/SHIPS GEN. Set the transfer switch shown in the diagrams to the OFF position. This switch prevents simultaneous connection of shore power to generator output.

CAUTION: Damage to the generator can result if utility shore power and generator output are connected at the same time. This type of generator damage is not covered under the warranty; it is the installer's responsibility to make sure all AC connections are correct.

CAUTION: Heavy motor loads should be shut off before switching shore power to generator power or vice-versa because voltage surges induced by switching with heavy AC loads on the vessel being operated may cause damage to the exciter circuit components in the generator.


Shore Power Connections (60 Hertz)

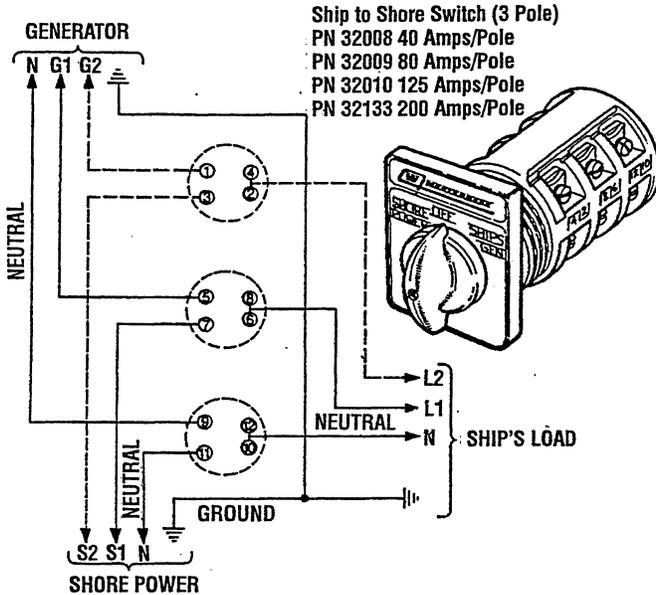

NOTE: Diagram shows connections for a two-wire, 120 volt system. For a three-wire system, use the dotted lines for the other hot leg.

230 Volt/50 Hertz Two Wire Configuration

Notice the repositioning of the white ground lead on the terminal block to the generator case.

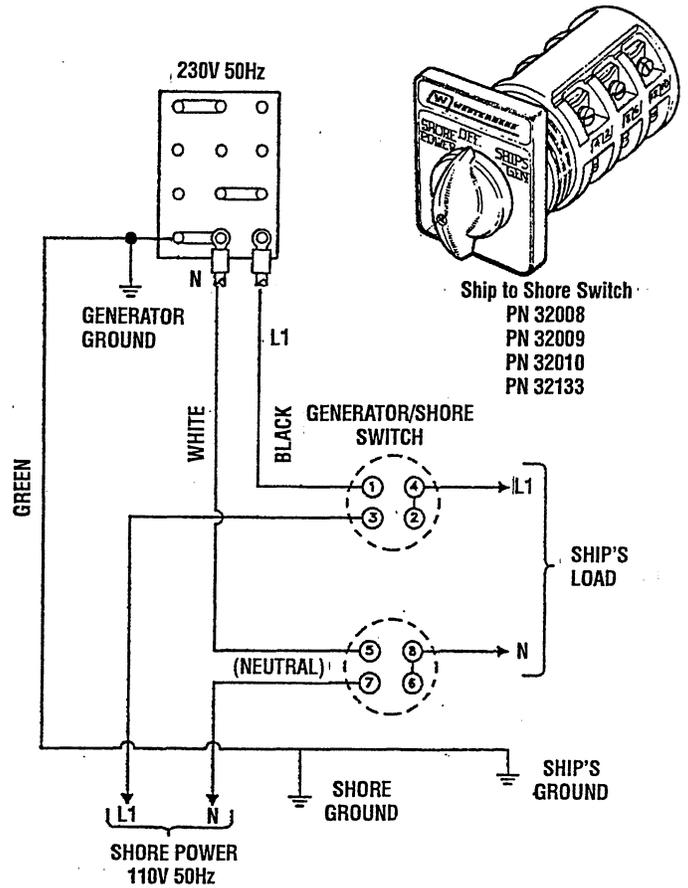

SPECIFICATIONS - 7.6/5.7KW GENERATOR

ENGINE SPECIFICATIONS

| | |
|---|---|
| Engine Type | Diesel, four-cycle, three-cylinder, fresh water-cooled, vertical in-line overhead valve mechanism (11 Hp at 1800 rpm maximum) |
| Aspiration | Naturally aspirated |
| Governor | Electronic |
| Combustion Chamber | Swirl type |
| Bore & Stroke | 2.99 x 2.76 inches (76 x 70 mm) |
| Piston Displacement | 58.09 cubic inches (0.952 liters) |
| Firing Order | 1 - 3 - 2 |
| Direction of Rotation | Clockwise, when viewed from the front |
| Compression Ratio | 21:1 |
| Dimensions | Refer to the Sales Brochure |
| Weight | 407 lbs (184.6 kgs) |
| Fuel Consumption at full rated amp load | 1800 rpm (0.78 gph) 2.9 lph approx. 1500 rpm (0.58 gph) 2.2 lph approx. |
| Inclination | Continuous 15° Temporary 25° (not to exceed 30 min.) |
| Generator Power Take Off | 11.9 hp (maximum) |

TUNE-UP SPECIFICATIONS

| | |
|--|--|
| Compression Pressure (Limit of Difference Between cylinders) | 398 psi (28 kg/cm ²) at 280 rpm limit 47.2 psi (3.0 kg/cm ²) |
| Valve Timing | Intake Opens 17° BTDC Intake Closes 47° ABDC Exhaust Opens 51° BBDC Exhaust Closes 13° ATDC |
| Spill timing (Static) | 15° ± .5 |
| Valve Seat Angle | Intake 45° Exhaust 45° |
| Engine Speed | 1800 rpm 60 Hertz 1500 rpm 50 Hertz |
| Valve Clearance (engine cold) | Intake and Exhaust 0.010 inches (0.25 mm) |
| Injector Pressure | 1920 + 71 - 0 psi (135 + 5 - 0 kg/cm ²) |

FUEL SYSTEM

| | |
|--------------------------------------|--|
| General | Open flow, self bleeding - self priming |
| Fuel | No. 2 diesel oil (cetane rating of 45 or higher) |
| Fuel Injection Pump | In-line plunger (Bosch type) |
| Fuel Injection Timing (spill timing) | 15° ± BTDC |
| Nozzle | Throttle type |
| Fuel Filter | Cartridge type |
| Air cleaner | Plastic intake silencer |
| Air Flow (engine combustion) | 30.2 cfm (0.85 cmm) |

EXHAUST EMISSIONS SYSTEMS

| | |
|--------------------------|----------------------|
| Emission Control Systems | Smoke puffer limiter |
|--------------------------|----------------------|

ELECTRICAL SYSTEM

| | |
|------------------------|-------------------------------------|
| Starting Battery | 12-Volt, (-) negative ground |
| Battery Capacity | 800 - 1000 Cold Cranking Amps (CCA) |
| DC Charging Alternator | 51 Amp rated, belt driven |
| Starter | 12-Volt, reduction gear, 1.2 KW |
| Starting Aid | Glow plugs, sheathed type |
| DC No-Load Current | ± 2% of rated amps |
| DC Cranking Current | 195 - 200 Amps (engine cold) |

COOLING SYSTEM

| | |
|-------------------------------|---|
| General | Fresh water-cooled block, thermostatically-controlled with heat exchanger |
| Operating Temperature | 170 - 190° F (77 - 88° C) |
| Fresh Water Pump | Centrifugal type, metal impeller, belt-driven |
| Raw Water Pump | Positive displacement, rubber impeller, gear-driven |
| Raw Water Flow, at 1800 rpm | 6.5 US gpm (25.8 lpm) (measured before discharging into exhaust elbow). |
| System Capacity (fresh water) | 4.0 qts (3.79 liters) |

LUBRICATION SYSTEM

| | |
|--------------------------------------|--|
| General | Pressure fed system with external relief valve |
| Oil Filter | Full flow, paper element, spin-on type |
| Sump Capacity (not including filter) | 3.2 U.S. qts (3.03 liters) plus filter/cooler assembly |
| Operating Oil Pressure (engine hot) | 35 - 55 psi (2.5 - 3.8 kg/cm ²) |
| Oil Grade | API Specification CF, CG-4, CH-4, CI-4 or CJ-4 SAE 10W-40 or 15W-40 |

AC GENERATOR (Single Phase)

| | |
|------------------------|---|
| General - Single Phase | Brushless, four-pole, revolving field sealed lubricated single bearing design. Reconnectable single phase for 120/240 volts with solid state voltage regulator. |
| Voltage - Single Phase | 120 or 120/240 Volts - 60 Hertz 230 Volts - 50 Hertz. |
| Voltage regulation: | ±5% no load to full load. |
| Frequency regulation: | ±0.05 Hertz (5%) no load to full load. |
| Rating (Volts AC) | 7.6 KW - 60 Hertz (1800 rpm) 120 Volts - 31.6 Amps 120/240 Volts - 63.1/31.6 Amps 5.7 KW - 50 Hertz (1500 rpm) 230 Volts - 24.7 Amps |

AC GENERATOR (Single Phase)

| | |
|--|----------------------|
| Air Requirements (60 Hertz) at 1800 rpm | 200 cfm (5.66 cmm) |
| NOTE: Increase air supply 15% for 50 Hertz operation @ 1500 rpm | |
| Engine Combustion | 30.2 cfm (0.85 cmm) |
| Generator Compartment Temperature | 120°F (50°C) maximum |
| Engine Cooling | 100 cfm (2.83 cmm) |

SPECIFICATIONS - 6.5/5.0KW GENERATOR

ENGINE SPECIFICATIONS

| | |
|---|---|
| Engine Type | Diesel, four-cycle, three-cylinder, fresh water-cooled, vertical in-line overhead valve mechanism (10.9 Hp at 1800 rpm maximum) |
| Aspiration | Naturally aspirated |
| Governor | Electronic |
| Combustion Chamber | Swirl type |
| Bore & Stroke | 2.99 x 2.76 inches (76 x 70 mm) |
| Piston Displacement | 58.09 cubic inches (0.952 liters) |
| Firing Order | 1 - 3 - 2 |
| Direction of Rotation | Clockwise, when viewed from the front |
| Compression Ratio | 21:1 |
| Dimensions | Refer to the Sales Brochure |
| Weight | 407 lbs (184.6 kgs) |
| Fuel Consumption at full rated amp load | 1800 rpm (0.78 gph) 2.9 lph approx. 1500 rpm (0.58 gph) 2.2 lph approx. |
| Inclination | Continuous 15° Temporary 25° (not to exceed 30 min.) |
| Generator Power Take Off | 10.9/8.4 hp (maximum) |

TUNE-UP SPECIFICATIONS

| | |
|--|--|
| Compression Pressure (Limit of Difference Between cylinders) | 398 psi (28 kg/cm ²) at 280 rpm limit 47.2 psi (3.0 kg/cm ²) |
| Valve Timing | Intake Opens 17° BTDC Intake Closes 47° ABDC Exhaust Opens 51° BBDC Exhaust Closes 13° ATDC |
| Spill timing (Static) | 15° ± .5 |
| Valve Seat Angle | Intake 45° Exhaust 45° |
| Engine Speed | 1800 rpm 60 Hertz 1500 rpm 50 Hertz |
| Valve Clearance (engine cold) | Intake and Exhaust 0.010 inches (0.25 mm) |
| Injector Pressure | 1920 + 71 - 0 psi (135 + 5 - 0 kg/cm ²) |

FUEL SYSTEM

| | |
|--------------------------------------|--|
| General | Open flow, self bleeding - self priming |
| Fuel | No. 2 diesel oil (cetane rating of 45 or higher) |
| Fuel Injection Pump | In-line plunger (Bosch type) |
| Fuel Injection Timing (spill timing) | 15° ± BTDC |
| Nozzle | Throttle type |
| Fuel Filter | Cartridge type |
| Air cleaner | Plastic intake silencer |
| Air Flow (engine combustion) | 30.2 cfm (0.85 cmm) |

EXHAUST EMISSIONS SYSTEMS

| | |
|--------------------------|----------------------|
| Emission Control Systems | Smoke puffer limiter |
|--------------------------|----------------------|

ELECTRICAL SYSTEM

| | |
|------------------------|-------------------------------------|
| Starting Battery | 12-Volt, (-) negative ground |
| Battery Capacity | 800 - 1000 Cold Cranking Amps (CCA) |
| DC Charging Alternator | 51 Amp rated, belt driven |
| Starter | 12-Volt, reduction gear, 1.2 KW |
| Starting Aid | Glow plugs, sheathed type |
| DC No-Load Current | ± 2% of rated amps |
| DC Cranking Current | 195 - 200 Amps (engine cold) |

COOLING SYSTEM

| | |
|-------------------------------|---|
| General | Fresh water-cooled block, thermostatically-controlled with heat exchanger |
| Operating Temperature | 170 - 190° F (77 - 88° C) |
| Fresh Water Pump | Centrifugal type, metal impeller, belt-driven |
| Raw Water Pump | Positive displacement, rubber impeller, gear-driven |
| Raw Water Flow, at 1800 rpm | 6.5 US gpm (25.8 lpm) (measured before discharging into exhaust elbow). |
| System Capacity (fresh water) | 4.0 qts (3.79 liters) |

LUBRICATION SYSTEM

| | |
|--------------------------------------|--|
| General | Pressure fed system with external relief valve |
| Oil Filter | Full flow, paper element, spin-on type |
| Sump Capacity (not including filter) | 3.2 U.S. qts (3.03 liters) plus filter/cooler assembly |
| Operating Oil Pressure (engine hot) | 35 - 55 psi (2.5 - 3.8 kg/cm ²) |
| Oil Grade | API Specification CF, CG-4, CH-4, CI-4 or CJ-4 SAE 10W-40 or 15W-40 |


AC GENERATOR (Single Phase)

| | |
|------------------------|--|
| General - Single Phase | Brushless, four-pole, revolving field sealed lubricated single bearing design. Reconnectable single phase for 120/240 volts with solid state voltage regulator. |
| Voltage - Single Phase | 120 or 120/240 Volts - 60 Hertz 230 Volts - 50 Hertz. |
| Voltage regulation: | ±5% no load to full load. |
| Frequency regulation: | ±0.05 Hertz (5%) no load to full load. |
| Rating (Volts AC) | 6.5 KW - 60 Hertz (1800 rpm) 120 Volts - 27.1 Amps 120/240 Volts - 54.2/27.1 Amps 5.0 KW - 50 Hertz (1500 rpm) 230 Volts - 21.7 Amps |

AC GENERATOR (Single Phase)

| | |
|--|----------------------|
| Air Requirements (60 Hertz) at 1800 rpm | 200 cfm (5.66 cmm) |
| NOTE: Increase air supply 15% for 50 Hertz operation @ 1500 rpm | |
| Engine Combustion | 30.2 cfm (0.85 cmm) |
| Generator Compartment Temperature | 120°F (50°C) maximum |
| Engine Cooling | 100 cfm (2.8 cmm) |

D-NET WIRING DIAGRAM #52414 (12 VOLT) WESTERLINK

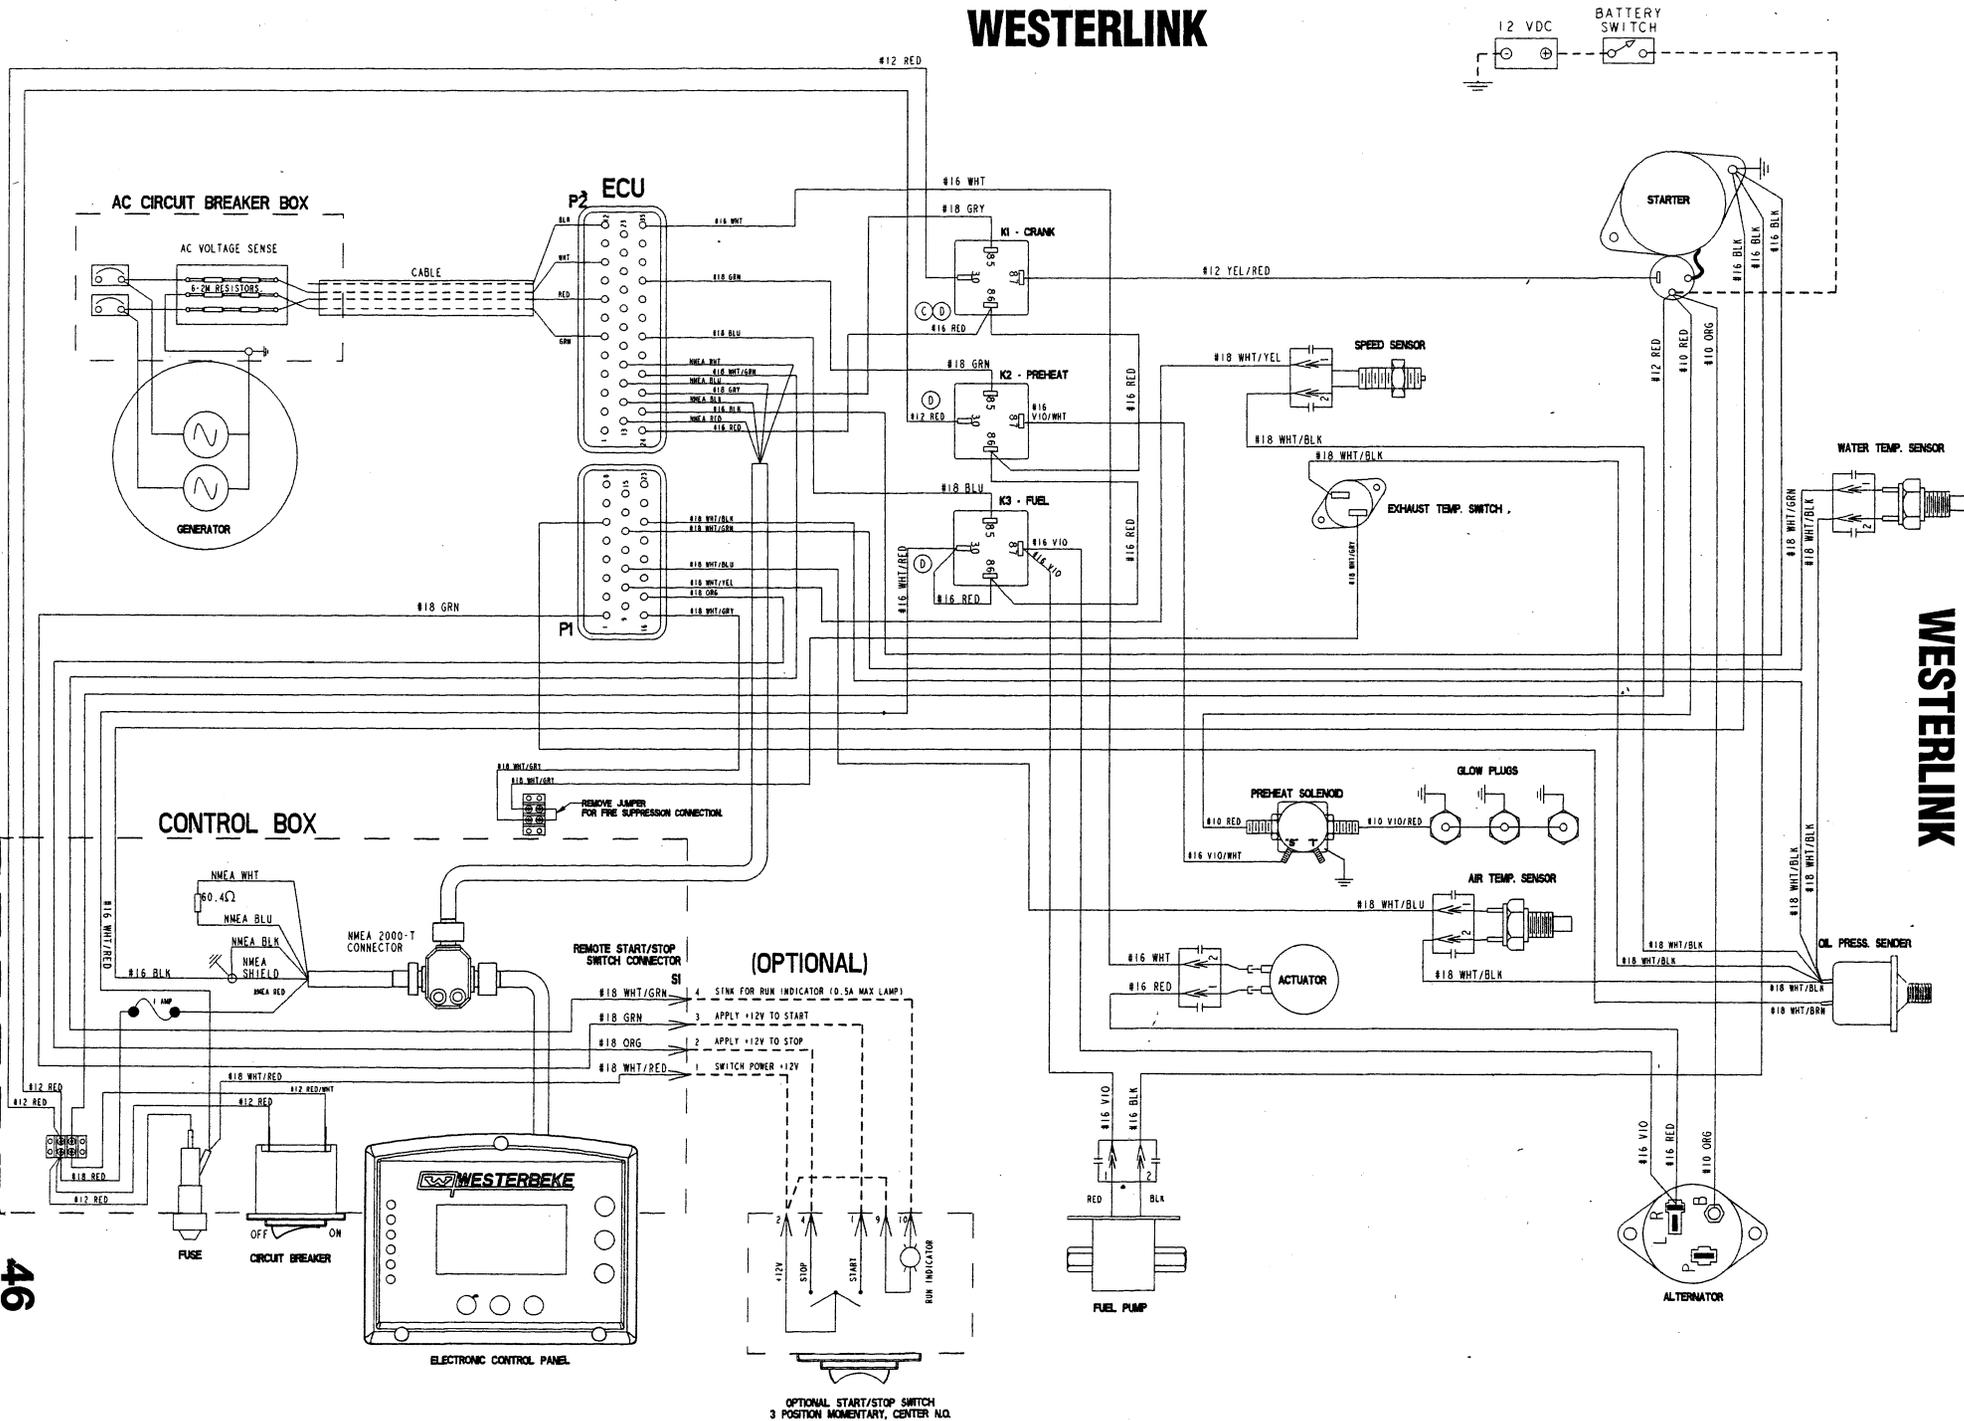



D-NET WIRING DIAGRAM #52414 (12 VOLT)
WESTERLINK

D-NET WIRING DIAGRAM #52793 (12 VOLT) WESTERLINK/NMEA 2000

NOTES:

- 1) EXTERNAL ALARM SYSTEM CONNECTION IS NOT A POWER SOURCE. CIRCUIT LOGIC IS CLOSED TO RUN / OPEN TO STOP GENSET.
- 2) FOR NMEA-2000: CONNECT 1AMP FUSE/BREAKER WIRE TO C2 (AS SHOWN - DC BREAKER DOES NOT CONTROL NETWORK POWER) FOR WESTERLINK; CONNECT 1AMP FUSE/BREAKER WIRE TO S27(DC BREAKER CONTROLS NETWORK POWER)
- 3) ECU WILL NOT POWER UP UNLESS NETWORK POWER IS PRESENT ON ECU P2-13. POWER IS SUPPLIED VIA THE NETWORK CABLE TO THE ECU. POWERING DOWN THE NMEA-2000 NETWORK WHILE THE GENSET IS RUNNING WILL SHUT DOWN THE GENSET.
- 4) IF THE NMEA-2000 NETWORK IS POWERED FROM A SOURCE EXTERNAL TO THE GENSET, THE INTERNAL NETWORK POWER SUPPLY CONNECTOR IN THE PANEL BOX MUST BE DISCONNECTED FROM THE 4-WAY TEE.
- 5) FOR MULTIPLE GENSETS CONNECTED TO THE SAME NMEA-2000 NETWORK, IF ONE GENSET IS SUPPLYING POWER TO THE NETWORK, THE OTHER GENSET MUST HAVE ITS INTERNAL NETWORK POWER SUPPLY DISCONNECTED FROM THE 4-WAY TEE.
- 6) WHENEVER NMEA-2000 NETWORK POWER IS CYCLED OFF AND BACK ON, THE GENSET MAY NEED TO BE STOPPED AND THE DC CIRCUIT BREAKER CYCLED TO RESTORE PROPER NETWORK COMMUNICATIONS.
- 7) SEE NETWORK HARDWARE INSTALLATION GUIDE 53078 FOR MORE INFORMATION ABOUT NETWORKING.
- 8) DIGITAL DISPLAY MUST BE RECONFIGURED WHEN CHANGING ANY OF THE FOLLOWING SETTINGS:
 - 7A) CHANGING AC WIRING BETWEEN WYE AND DELTA CONFIGURATION
 - 7B) CHANGING AC WIRING BETWEEN 2-WIRE 1-PHASE AND 3-WIRE 1-PHASE
 - 7C) CHANGING BACKEND BETWEEN 1-PHASE AND 3-PHASE.

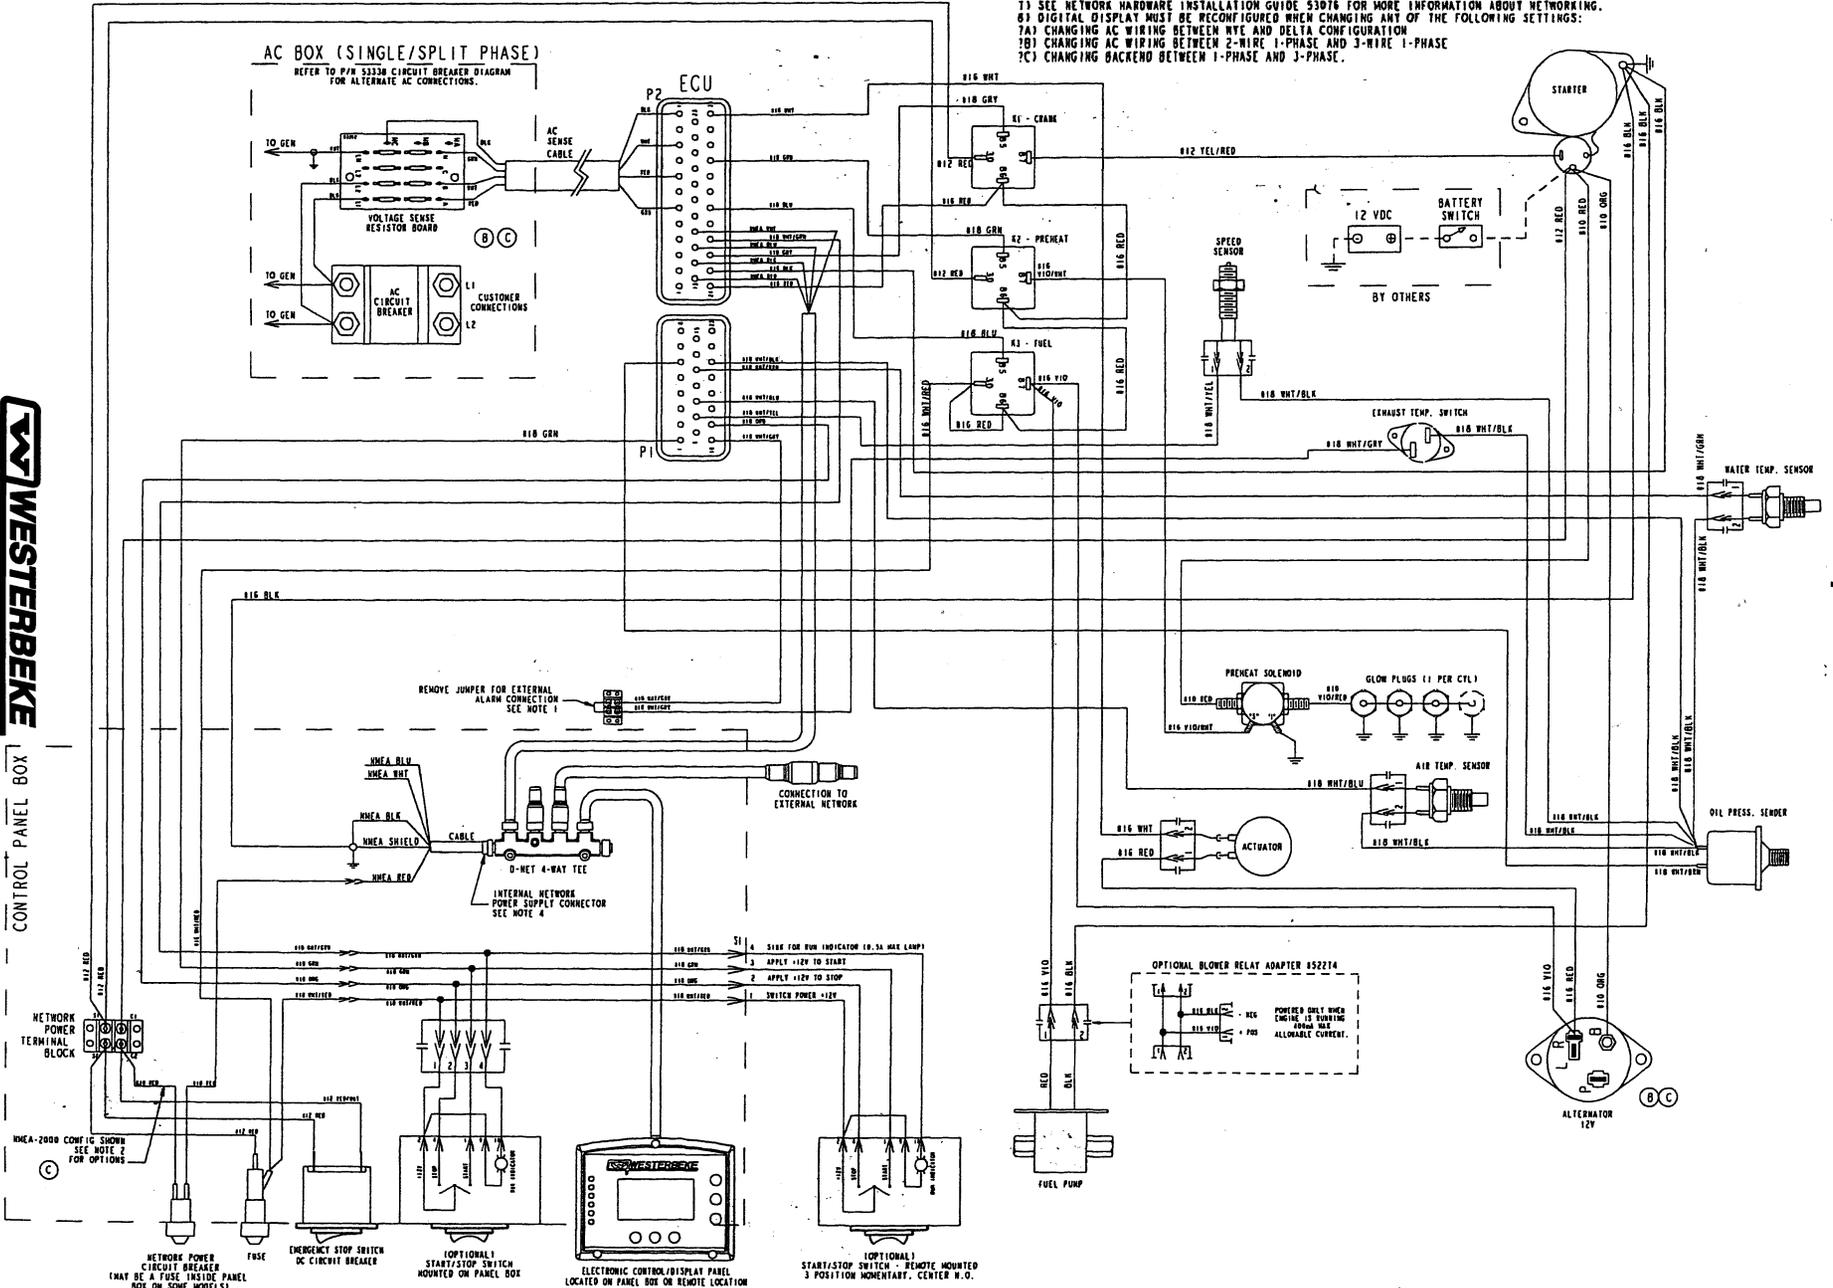

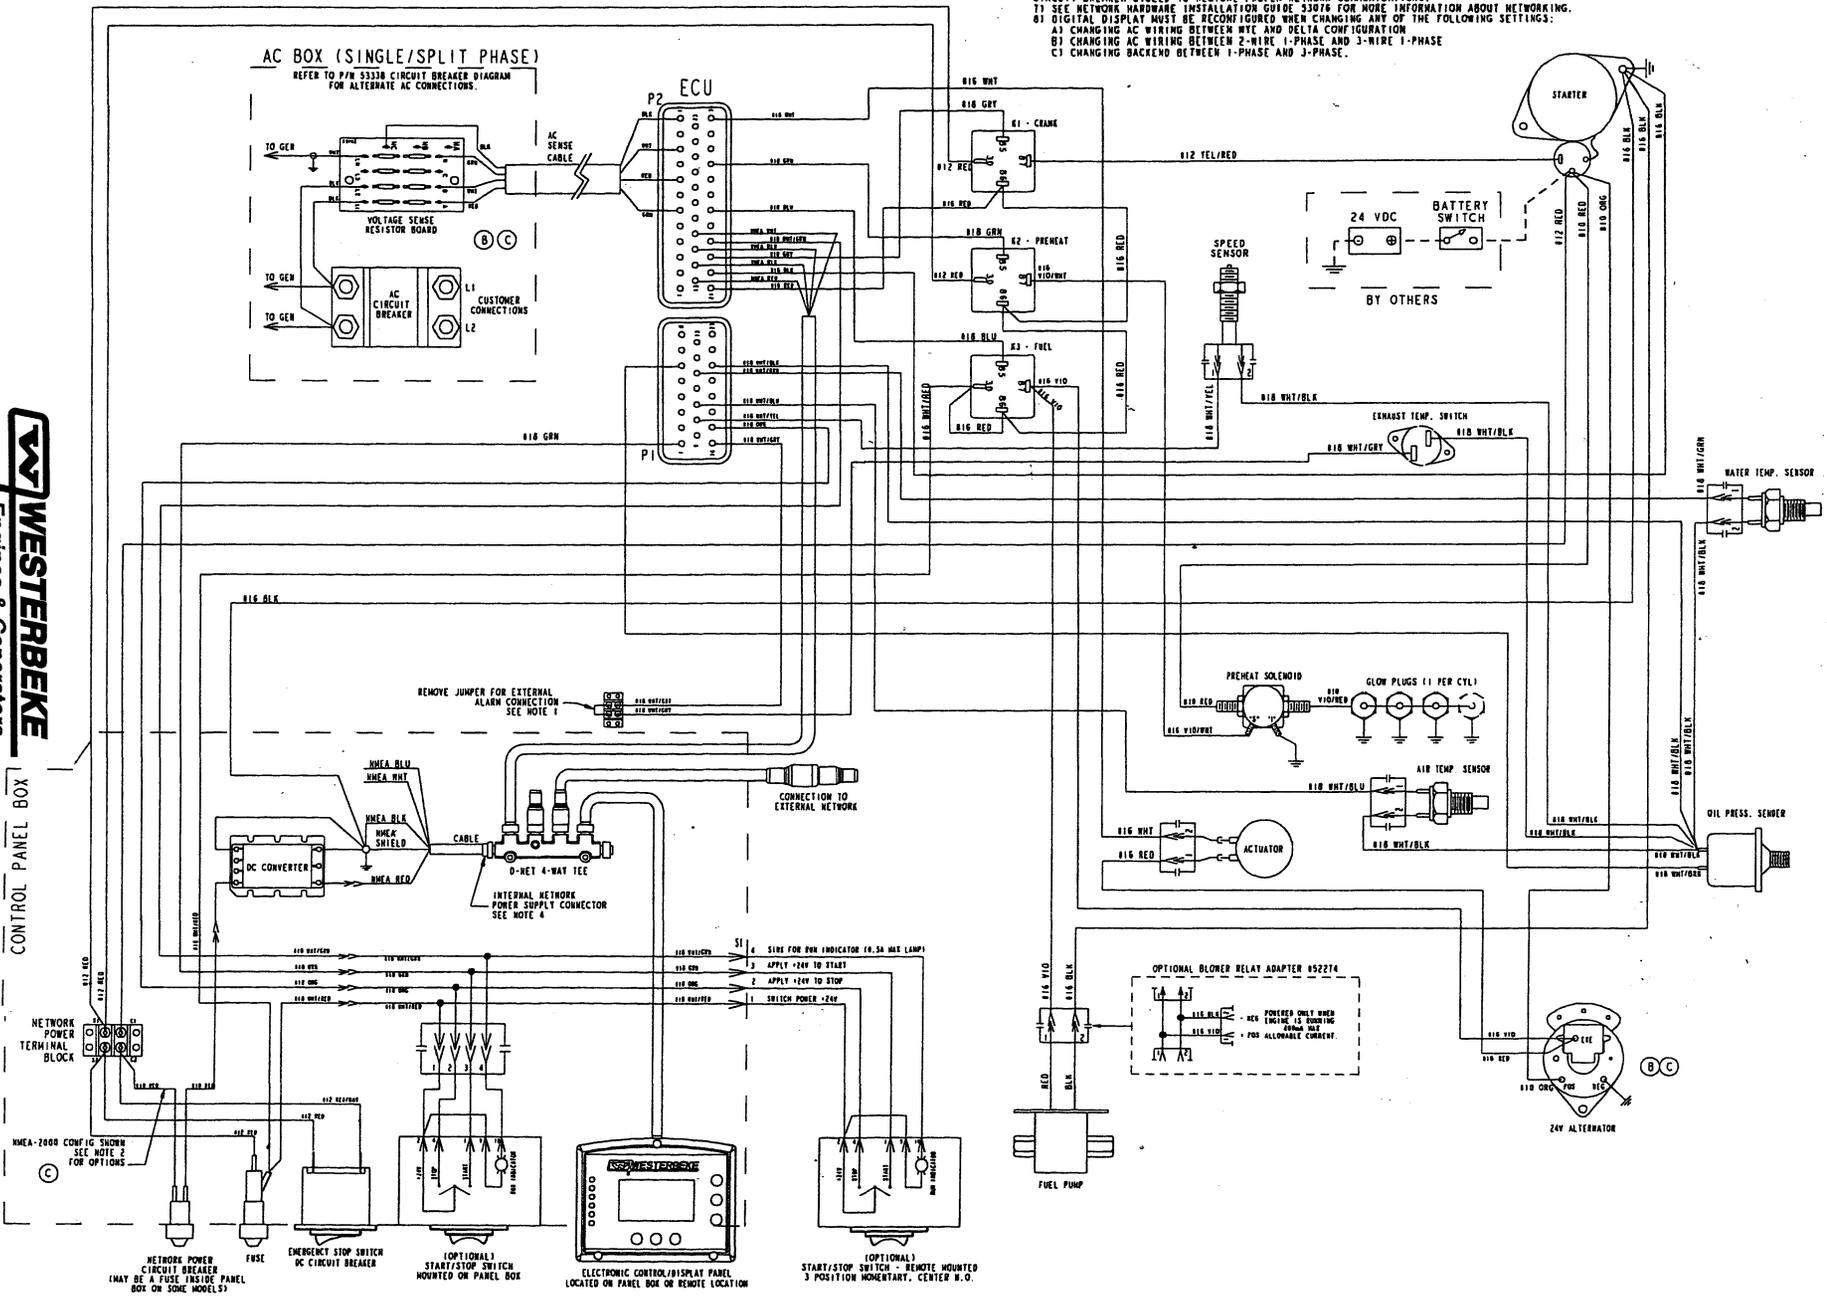

- NOTES:
- EXTERNAL ALARM SYSTEM CONNECTION IS NOT A POWER SOURCE. CIRCUIT LOGIC IS CLOSED TO RUN / OPEN TO STOP GENSET.
 - FOR NMEA-2000: CONNECT LAMP FUSE/BREAKER WIRE TO C2 (AS SHOWN - DC BREAKER DOES NOT CONTROL NETWORK POWER) FOR WESTERBEKE; CONNECT LAMP FUSE/BREAKER WIRE TO S27(DC BREAKER CONTROLS NETWORK POWER)
 - ECU WILL NOT POWER UP UNLESS NETWORK POWER IS PRESENT ON ECU P2-13. POWER IS SUPPLIED VIA THE NETWORK CABLE TO THE ECU. POWERING DOWN THE NMEA-2000 NETWORK WHILE THE GENSET IS RUNNING WILL SHUT DOWN THE GENSET.
 - IF THE NMEA-2000 NETWORK IS POWERED FROM A SOURCE EXTERNAL TO THE GENSET, THE INTERNAL NETWORK POWER SUPPLY CONNECTOR IN THE PANEL BOX MUST BE DISCONNECTED FROM THE 4-WAY TEE.
 - FOR MULTIPLE GENSETS CONNECTED TO THE SAME NMEA-2000 NETWORK, IF ONE GENSET IS SUPPLYING POWER TO THE NETWORK, THE OTHER GENSET MUST HAVE ITS INTERNAL NETWORK POWER SUPPLY DISCONNECTED FROM THE 4-WAY TEE.
 - WHenever NMEA-2000 NETWORK POWER IS CYCLED OFF AND BACK ON, THE GENSET MAY NEED TO BE STOPPED AND THE DC CIRCUIT BREAKER CYCLED TO RESTORE PROPER NETWORK COMMUNICATIONS.
 - SEE NETWORK HARDWARE INSTALLATION GUIDE 33076 FOR MORE INFORMATION ABOUT NETWORKING.
 - DIGITAL DISPLAY MUST BE RECONFIGURED WHEN CHANGING ANY OF THE FOLLOWING SETTINGS:
 - A) CHANGING AC WIRING BETWEEN WYE AND DELTA CONFIGURATION
 - B) CHANGING AC WIRING BETWEEN 2-WIRE 1-PHASE AND 3-WIRE 1-PHASE
 - C) CHANGING BACKEND BETWEEN 1-PHASE AND 3-PHASE.

D-NET WIRING DIAGRAM #53477 (24 VOLT)
WESTERLINK/NMEA 2000

LAY-UP & RECOMMISSIONING

GENERAL

Many owners rely on their boatyards to prepare their craft, including engines and generators, for lay-up during the off-season or for long periods of inactivity. Others prefer to accomplish lay-up preparation themselves.

The procedures which follow will allow you to perform your own lay-up and recommissioning, or you may use them as a check list if others do the procedures.

These procedures should afford your engine protection during a lay-up and also help familiarize you with the maintenance needs of your engine.

If you have any questions regarding lay-up procedures, call your local servicing dealer; he will be more than willing to provide assistance.

Propeller Shaft Coupling [Propulsion Engine]

The transmission and propeller half couplings should always be opened up and the bolts removed when the boat is hauled out of the water or moved from land to water, and during storage in the cradle. The flexibility of the boat often puts a severe strain on the propeller shaft or coupling or both, while the boat is taken out or put in the water. In some cases, the shaft has actually been bent by these strains. This does not apply to small boats that are hauled out of the water when not in use, unless they have been dry for a considerable period of time.

Fresh Water Cooling Circuit

A 50-50 solution of antifreeze and distilled water is recommended for use in the coolant system at all times. This solution may require a higher concentration of antifreeze, depending on the area's winter climate. Check the solution to make sure the antifreeze protection is adequate.

Should more antifreeze be needed, drain an appropriate amount from the engine block and add a more concentrated mixture. Operate the engine to ensure a complete circulation and mixture of the antifreeze concentration throughout the cooling system. Now recheck the antifreeze solution's strength.

Lubrication System

With the engine warm, drain all the engine oil from the oil sump. Remove and replace the oil filter and fill the sump with new oil. Use the correct grade of oil. Refer to the *ENGINE LUBRICATING OIL* pages in this manual for the oil changing procedure. Run the engine and check for proper oil pressure and make sure there are no leaks.

CAUTION: Do not leave the engine's old engine oil in the sump over the lay-up period. Lubricating oil and combustion deposits combine to produce harmful chemicals which can reduce the life of your engine's internal parts.

Fuel System [Gasoline]

Top off your fuel tanks with *unleaded* gasoline of 89 octane or higher. A fuel conditioner such as *Sta-Bil* gasoline stabilizer should be added. Change the element in your gasoline/water separator and clean the metal bowl. Re-install and make certain there are no leaks. Clean up any spilled fuel.

Fuel System [Diesel]

Top off your fuel tanks with No. 2D diesel fuel. Fuel additives should be added prior to topping off to ensure they mix with the fuel being added and fuel still in the tank. Additives, such as Bio-bor and Diesel Kleen + Cetane Boost should be added at this time to control bacteria growth and condition the fuel. Care should be taken that the additives used are compatible with the primary fuel filter/water separator used in the system. Change the element in your primary fuel filter/water separator clean the separator sediment bowl.

Change the fuel filter elements on the engine and bleed the fuel system, as needed. Start the engine and allow it to run for 5 – 10 minutes to make sure no air is left in the fuel system. Check for any leaks that may have been created in the fuel system during this servicing, correcting them as needed. Operating the engine for 5 – 10 minutes will help allow movement of the treated fuel through the injection equipment on the engine.

Raw Water Cooling Circuit

Close the through-hull seacock. Remove the raw water intake hose from the seacock. Place the end of this hose into a five gallon bucket of clean fresh water. Before starting the engine, check the zinc anode found in the primary heat exchanger on the engine and clean or replace it as required, and also clean any zinc debris from inside the heat exchanger where the zinc anode is located. Clean the raw water strainer.

Start the engine and allow the raw water pump to draw the fresh water through the system. When the bucket is empty, stop the engine and refill the bucket with an antifreeze solution slightly stronger than needed for winter freeze protection in your area.

Start the engine and allow all of this mixture to be drawn through the raw water system. Once the bucket is empty, stop the engine. This antifreeze mixture should protect the raw water circuit from freezing during the winter lay-up, as well as providing corrosion protection.

Remove the impeller from your raw water pump (some antifreeze mixture will accompany it, so catch it in a bucket). Examine the impeller. Acquire a replacement, if needed, and a cover gasket. Do not replace the impeller (into the pump) until recommissioning, but replace the cover and gasket.

LAY-UP & RECOMMISSIONING

Starter Motor

Lubrication and cleaning of the starter drive pinion is advisable, if access to the starter permits its easy removal. Make sure the battery connections are shut off before attempting to remove the starter. Take care in properly replacing any electrical connections removed from the starter.

Cylinder Lubrication [Diesel]

If you anticipate a long lay-up period (12 months or more) WESTERBEKE recommends removal of the glow plugs for access to the cylinders. Squirt some Marvel Mystery Oil into each cylinder to help prevent the piston rings from adhering to the cylinder walls. Rotate the engine crankshaft by hand two revolutions and re-install the glow plugs.

If your engine does not have glow plugs, the injectors will have to be removed. Be sure to have replacement sealing washers for the injectors and return fuel line as needed.

Intake Manifold [Gasoline]

Clean the filter screen in the flame arrester, and place a clean cloth lightly soaked in lube oil around the flame arrester to block any opening. Also place an oil-soaked cloth in the through-hull exhaust port, Make a note to remove cloths prior to start-up!

Cylinder Lubrication [Gasoline]

Spray fogging oil into the open air intake, with the flame arrester removed, while the engine is running. The fogging oil will stall the engine and coat the intake components, valves, cylinders and spark plugs for winter protection.

NOTE: At re-commissioning, Remove the spark plug and clean and gap them. Rotate the engine by hand 2 complete revolutions. Re-install the spark plugs. Tighten securely and firmly attach the high tension leads.

Batteries

If batteries are to be left on board during the lay-up period, make sure that they are fully charged, and will remain that way, to prevent them from freezing. If there is any doubt that the batteries will not remain fully charged, or that they will be subjected to severe environmental conditions, remove the batteries and store them in a warmer, more compatible environment.

⚠ WARNING: Lead acid batteries emit hydrogen, a highly-explosive gas, which can be ignited by electrical arcing or a lighted cigarette, cigar, or pipe. Do not smoke or allow an open flame near the battery being serviced. Shut off all electrical equipment in the vicinity to prevent electrical arcing during servicing.

Transmission [Propulsion Engine]

Check or change the fluid in the transmission as required Wipe off grime and grease and touch up any unpainted areas. Protect the coupling and the output flange with an anti-corrosion coating. Check that the transmission vent is open. For additional information, refer to the *TRANSMISSION SECTION*.

Spare Parts

Lay-up time provides a good opportunity to inspect your Westerbeke engine to see if external items such as drive belts or coolant hoses need replacement. Check your basic spares kit and order items not on hand, or replace those items used during the lay-up, such as filters and zinc anodes. Refer to the *SPARE PARTS* section of this manual.

Recommissioning

The recommissioning of your Westerbeke engine after a seasonal lay-up generally follows the same procedures as those described in the *PREPARATIONS FOR STARTING* section regarding preparation for starting and normal starts. However, some of the lay-up procedures will need to be counteracted before starting the engine.

1. Remove the oil-soaked cloths from the intake manifold.
2. Remove the raw water pump cover and gasket and discard the old gasket. Install the raw water pump impeller removed during lay-up (or a replacement, if required). Install the raw water pump cover with a new cover gasket.
3. Reinstall the batteries that were removed during the lay-up, and reconnect the battery cables, making sure the terminals are clean and that the connections are tight. Check to make sure that the batteries are fully charged.

⚠ CAUTION: Wear rubber gloves, a rubber apron, and eye protection when servicing batteries. Lead acid batteries emit hydrogen, a highly explosive gas, which can be ignited by electrical arcing or a lighted cigarette, cigar, or pipe. Do not smoke or allow an open flame near the battery being serviced. Shut off all electrical equipment in the vicinity to prevent electrical arcing during servicing.

4. Remove the spark plugs, wipe clean, re-gap, and install to proper tightness [gasoline].
5. Check the condition of the zinc anode in the raw water circuit and clean or replace the anode as needed. Note that it is not necessary to flush the antifreeze/fresh water solution from the raw water coolant system. When the engine is put into operation, the system will self-flush in a short period of time with no adverse affects. It is advisable, as either an end of season or recommissioning service, to inspect the area where the zinc is located in the heat exchanger and clear any and all zinc debris from that area.
6. Start the engine in accordance with procedures described in the *PREPARATIONS FOR STARTING* section of this manual.

IMPORTANT NOTE: Engines that will be laid-up for 12 months or more. The engine crank shaft should be rotated two or three revolutions periodically. This will help keep the fuel injection pump components operational.

DOMESTIC HOT WATER HEATER CONNECTIONS

DESCRIPTION



Once the Heater By-Pass connection is installed on the engine, plumbing of the engine antifreeze coolant can be made to the water heater. The water heater should be mounted in a convenient location either in a high or low position in relation to the engine so that the connecting hoses from the heater to the engine can run in a reasonably direct line without any loops which might trap air.

INSTALLATION


Follow the steps as illustrated below. Remove the upper and lower thermostat housing. This will allow access to remove the existing by-pass fixture as shown in STEP 1. Install the Heater By-Pass as shown in STEP 2.

The hose spuds on the Heater By-Pass are for 3/8" I.D. hose, to connect to 5/8" I.D. hose, use the hose adapters.

STEP 1: UN-BOLT AND REMOVE THE UPPER AND LOWER THERMOSTAT HOUSINGS AS ONE ASSEMBLY. REMOVE THE EXISTING BY-PASS FIXTURE.

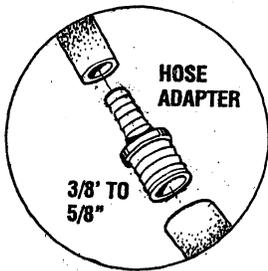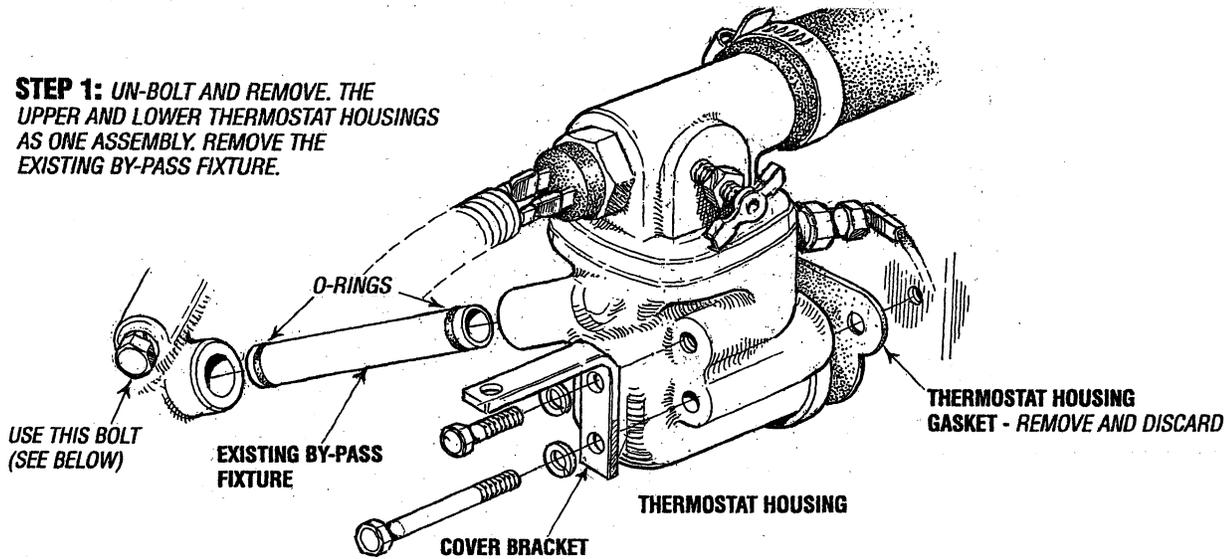

STEP 2: ATTACH THE TWO SEALING O-RINGS TO THE WATER HEATER BY-PASS AND ASSEMBLE AS ILLUSTRATED.

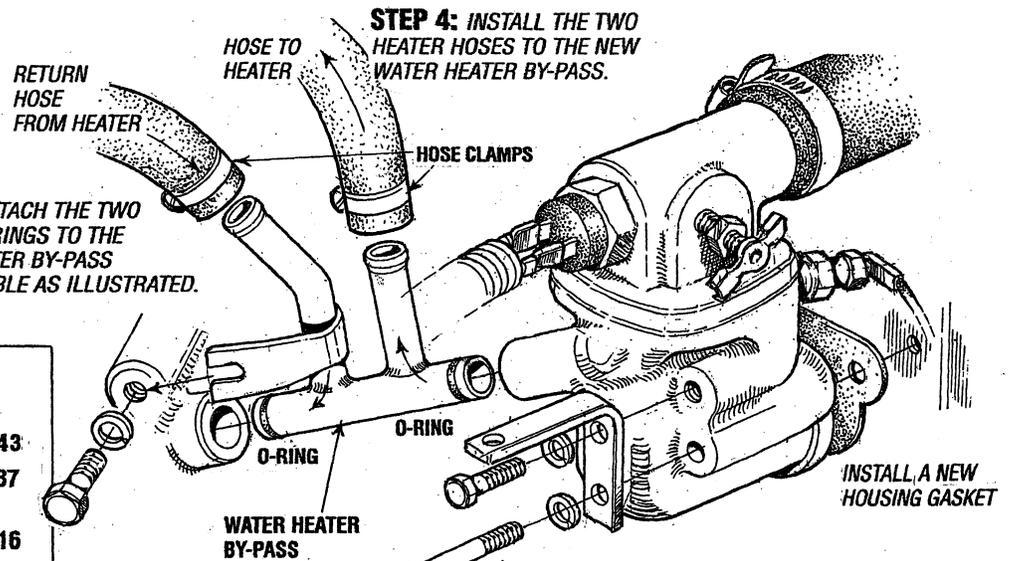

STEP 4: INSTALL THE TWO HEATER HOSES TO THE NEW WATER HEATER BY-PASS.

STEP 3: RE-INSTALL THE THERMOSTAT HOUSING ASSEMBLY USING THE NEW GASKET.


PARTS LISTING

| | |
|---------------------------------|-----------|
| HEATER BY-PASS | PN 042743 |
| SEALING O-RING (2) | PN 036937 |
| THERMOSTAT LOWER HOUSING GASKET | PN 037016 |
| HOSE ADAPTERS (2) | PN 302391 |
| THERMOSTAT HOUSING GASKET | PN 036956 |


DOMESTIC HOT WATER HEATER CONNECTIONS

WATER HEATER INSTALLATIONS

Once the Heater By-Pass connection is installed on the engine, plumbing of the engine antifreeze coolant can be made to the water heater. The water heater should be mounted in a convenient location either in a high or low position in relation to the engine so that the connecting hoses from the heater to the engine can run in a reasonably direct line without any loops which might trap air.

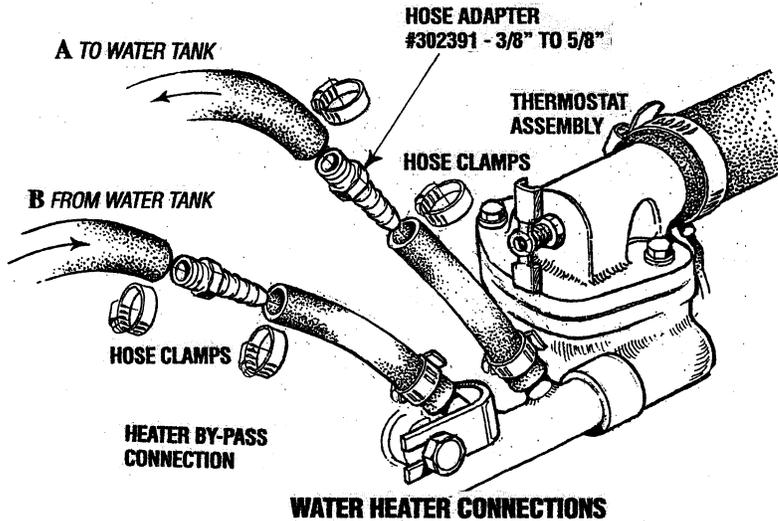

Using the Heater By-Pass connection, install hoses A and B as illustrated below. Use the hose adapters (PN 302391) to increase the hose size from 3/8" to 5/8".

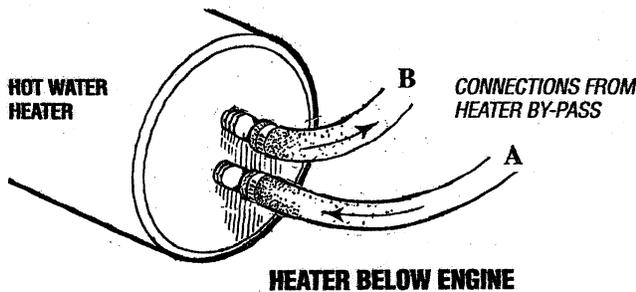

FILLING THE COOLING SYSTEM

Fill the engine's cooling system with antifreeze thru the pressure cap operating on the exhaust manifold. Start the engine and monitor the coolant until good circulation is noted. Fill the manifold and install the pressure cap. Add antifreeze to the coolant recovery tank (mark). The engine's antifreeze circuit with its hot water heater should now be fully functional.


HEATER ABOVE THE ENGINE

When the water heater is located above the engine, a remote expansion tank is required. Install the expansion tank in a convenient location above the water heater.

NOTE: The expansion tank replaces the standard plastic recovery tank and will now serve as the systems check point and fillpoint.

As shown in the illustration, a single hose is teed into the fitting at connection B on the water heater. That hose must rise continuously to the expansion tank. (This will allow any air to rise to the tank and be expelled).

Remove the plastic coolant recovery tank that is no longer needed. Remove its attachment fitting from the exhaust manifold and plug the opening with a 1/8npt plug.

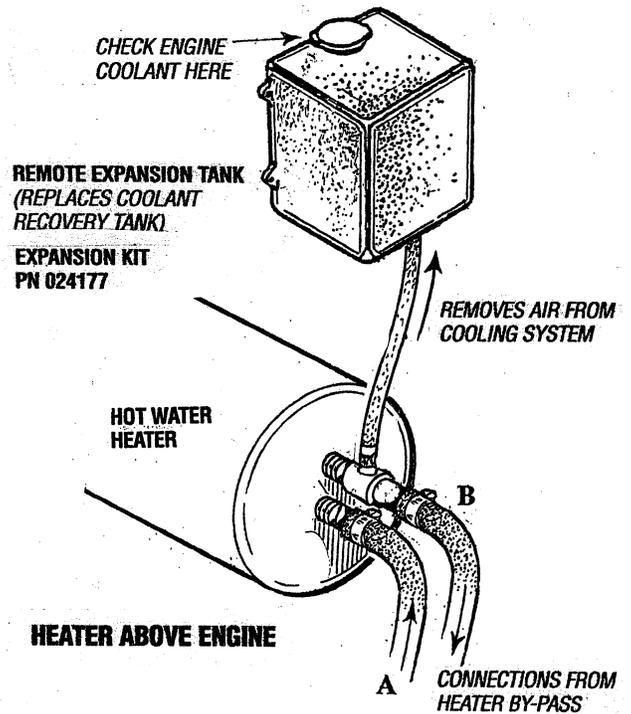

FILLING THE COOLANT SYSTEM (REMOTE TANK)

Fill the engine's cooling system at the pressure cap opening on the engine's water jacketed exhaust manifold. Install the pressure cap and continue filling the system at the remote expansion tank. Fill the tank to about 1/2 full. Start the engine and monitor the coolant level in the remote tank. As air is expelled, add coolant to maintain this level. Once the level is stable and good circulation is felt at both heater hoses, install the pressure cap on the remote tank. When checking the engine coolant level, it is now done at the remote expansion tank.

POWER TAKE OFF SYSTEMS


POWER TAKE OFF ADAPTER

A power take off adapter can be attached to the generator backend. This adapter allows access to the full power of the engine for a variety of hydraulic and electrical accessories.

Refer to the generators specifications for the horsepower available at 1800rpm (60hz) or 1500rpm (50hz).

This horsepower can be utilized for either AC amperage output or to operate the power take-off, but not both.

Contact your WESTERBEKE DISTRIBUTOR for additional information.

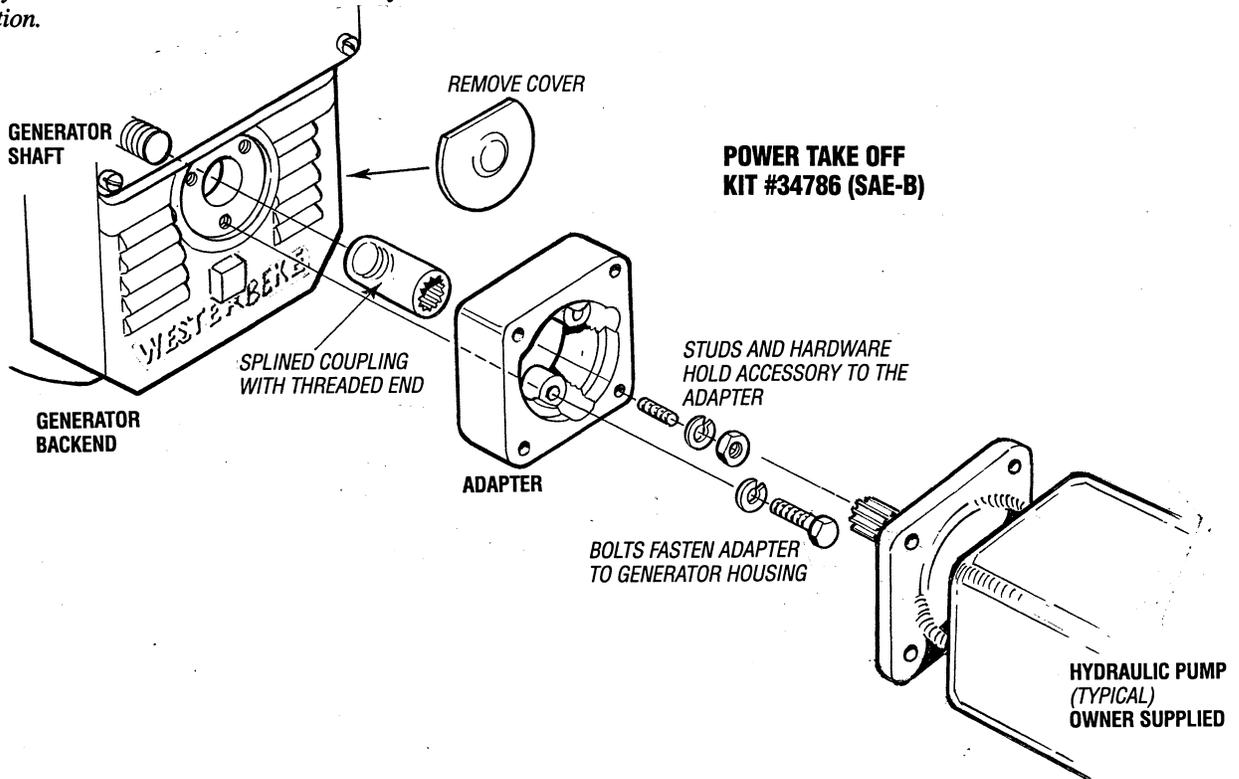


REMOTE STOP/START PANEL AND EXTENSION HARNESSSES

DESCRIPTION

A remote panel is available that allows the generator to be stopped and started from any location on the boat. The connecting harnesses come in three different lengths and two of these can be combined for a maximum run at 75' (22.17M).

NOTE: For additional information, contact your local WESTERBEKE dealer.

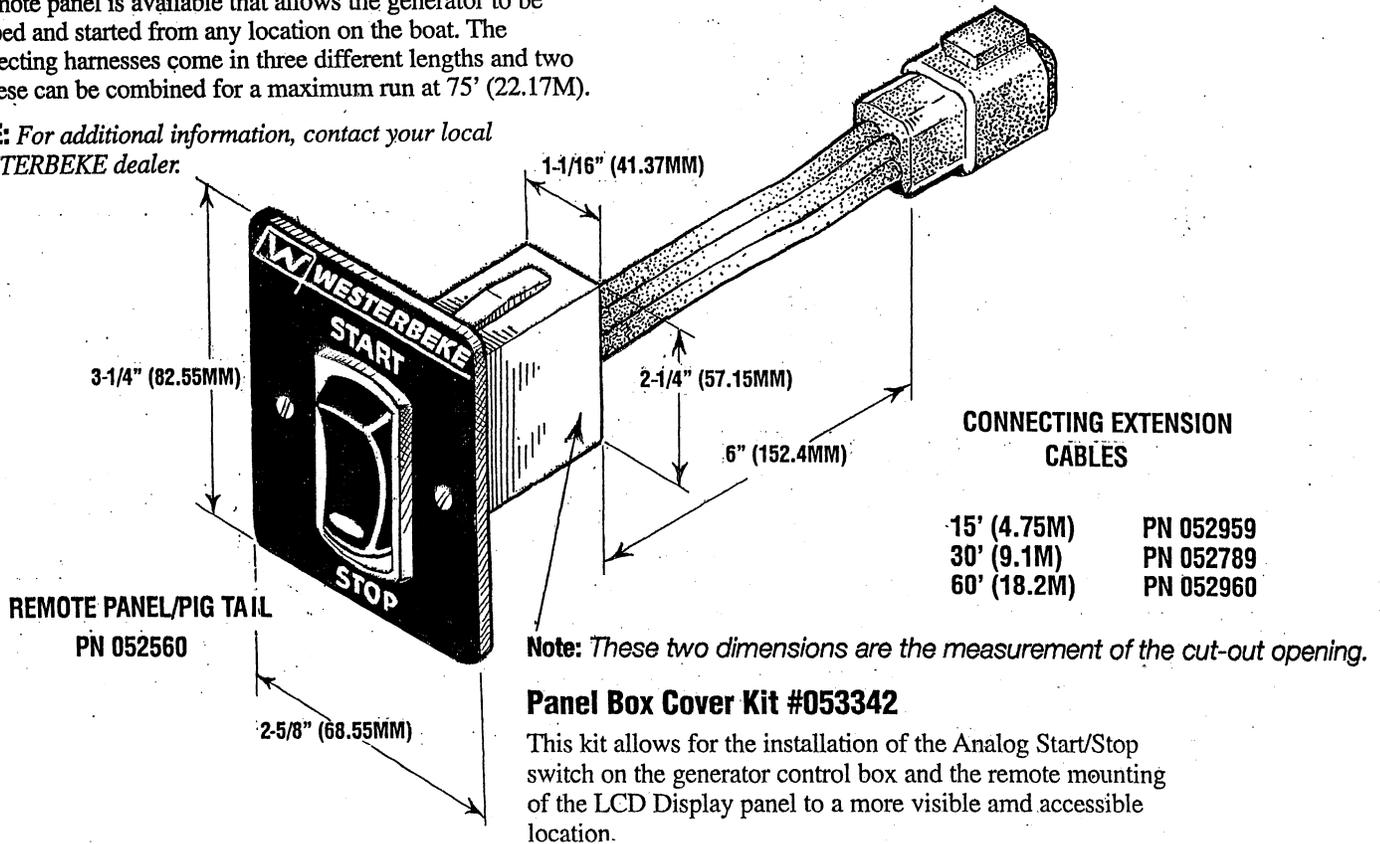

LCD DISPLAY EXTENSION CABLES NMEA MICRO-C

| PART NUMBER | LENGTH |
|-------------|------------------------|
| 053025 | 1/2 METER - 1.6 FEET |
| 053026 | 1 METER - 3.2 FEET |
| 053027 | 2 METER - 6.5 FEET |
| 053028 | 3 METER - 9.8 FEET |
| 053029 | 4 METER - 13.1 FEET |
| 053030 | 5 METER - 16.4 FEET |
| 053031 | 6 METER - 19.6 FEET |
| 053032 | 7 METER - 22.9 FEET |
| 053033 | 8 METER - 26.2 FEET |
| 053034 | 9 METER - 29.5 FEET |
| 053035 | 10 METER - 32.8 FEET |
| 053061 | 12.2 METER - 40.0 FEET |

REMOTE OIL FILTER (OPTIONAL)

PN:040078 REMOTE OIL FILTER SET

INSTALLATION


This popular accessory is used to relocate the engine's oil filter from the engine to a more convenient location such as an engine room bulkhead.

NOTE: Refer to *ENGINE OIL CHANGE* in this manual for instructions on removing the oil filter.

To install, simply remove the engine oil filter and thread on WESTERBEKE's remote oil filter kit as shown. Always install this kit with the oil filter facing down as illustrated. Contact your WESTERBEKE dealer for more information.

NOTE: Westerbeke is not responsible for engine failure due to incorrect installation of the Remote Oil Filter.

CAUTION: It is vital to install the oil lines correctly. If the oil flows in the reverse direction, the bypass valve in the filter assembly will prevent the oil from reaching the engine causing an internal engine failure. If there is no oil pressure reading, shutdown immediately and check the hose connections.

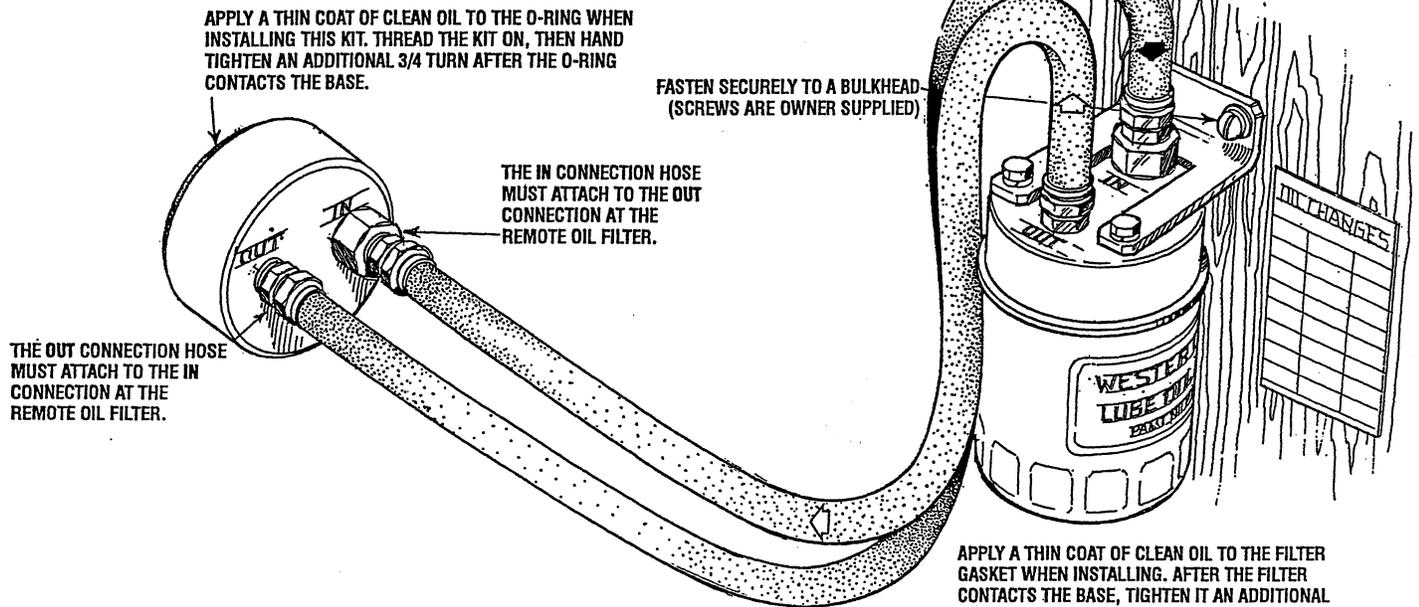

STANDARD AND METRIC CONVERSION DATA

LENGTH-DISTANCE

Inches (in) x 25.4 = Millimeters (mm) x .0394 = Inches

Feet (ft) x .305 = Meters (m) x 3.281 = Feet

Miles x 1.609 = Kilometers (km) x .0621 = Miles

DISTANCE EQUIVALENTS

1 Degree of Latitude = 60 Nm = 111.120 km

1 Minute of Latitude = 1 Nm = 1.852 km

VOLUME

Cubic Inches (in³) x 16.387 = Cubic Centimeters x .061 = in³

Imperial Pints (IMP pt) x .568 = Liters (L) x 1.76 = IMP pt

Imperial Quarts (IMP qt) x 1.137 = Liters (L) x .88 = IMP qt

Imperial Gallons (IMP gal) x 4.546 = Liters (L) x .22 = IMP gal

Imperial Quarts (IMP qt) x 1.201 = US Quarts (US qt) x .833 = IMP qt

Imperial Gallons (IMP gal) x 1.201 = US Gallons (US gal) x .833 = IMP gal

Fluid Ounces x 29.573 = Milliliters x .034 = Ounces

US Pints (US pt) x .473 = Liters(L) x 2.113 = Pints

US Quarts (US qt) x .946 = Liters (L) x 1.057 = Quarts

US Gallons (US gal) x 3.785 = Liters (L) x .264 = Gallons

MASS-WEIGHT

Ounces (oz) x 28.35 = Grams (g) x .035 = Ounces

Pounds (lb) x .454 = Kilograms (kg) x 2.205 = Pounds

PRESSURE

Pounds Per Sq In (psi) x 6.895 = Kilopascals (kPa) x .145 = psi

Inches of Mercury (Hg) x .4912 = psi x 2.036 = Hg

Inches of Mercury (Hg) x 3.377 = Kilopascals (kPa) x .2961 = Hg

Inches of Water (H₂O) x .07355 = Inches of Mercury x 13.783 = H₂O

Inches of Water (H₂O) x .03613 = psi x 27.684 = H₂O

Inches of Water (H₂O) x .248 = Kilopascals (kPa) x 4.026 = H₂O

TORQUE

Pounds-Force Inches (in-lb) x .113 = Newton Meters (Nm) x 8.85 = in-lb

Pounds-Force Feet (ft-lb) x 1.356 = Newton Meters (Nm) x .738 = ft-lb

VELOCITY

Miles Per Hour (MPH) x 1.609 = Kilometers Per Hour (KPH) x .621 = MPH

POWER

Horsepower (Hp) x .745 = Kilowatts (Kw) x 1.34 = MPH

FUEL CONSUMPTION

Miles Per Hour IMP (MPG) x .354 = Kilometers Per Liter (Km/L)

Kilometers Per Liter (Km/L) x 2.352 = IMP MPG

Miles Per Gallons US (MPG) x .425 = Kilometers Per Liter (Km/L)

Kilometers Per Liter (Km/L) x 2.352 = US MPG

TEMPERATURE

Degree Fahrenheit (°F) = (°C X 1.8) + 32

Degree Celsius (°C) = (°F - 32) x .56

LIQUID WEIGHTS

Diesel Oil = 1 US gallon = 7.13 lbs

Fresh Water = 1 US gallon = 8.33 lbs

Gasoline = 1 US gallon = 6.1 lbs


Salt Water = 1 US gallon = 8.56 lbs

SUGGESTED SPARE PARTS


CONTACT YOUR WESTERBEKE DEALER FOR SUGGESTIONS AND ADDITIONAL INFORMATION

WESTERBEKE RECOMMENDS CARRYING ENOUGH ENGINE OIL (YOUR BRAND) FOR AN OIL CHANGE AND A GALLON OF PREMIXED COOLANT.


THERMOSTAT KIT

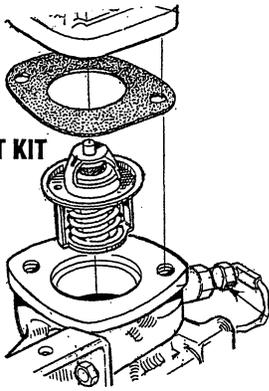


ZINC ANODE

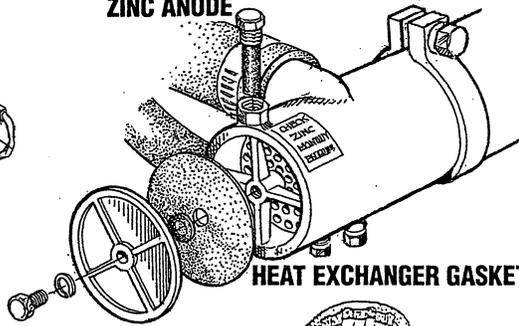

IMPELLER KIT

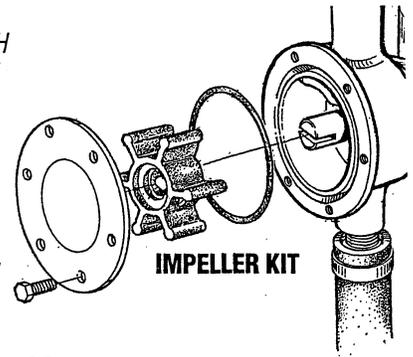


HEAT EXCHANGER GASKET

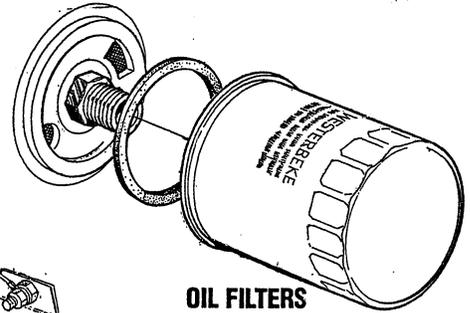


OIL FILTERS


FUEL FILTER ELEMENT

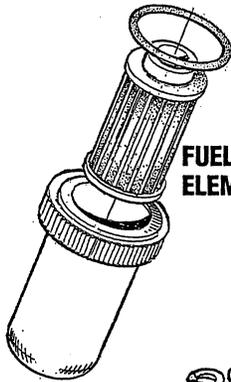

SPARE DRIVE BELTS

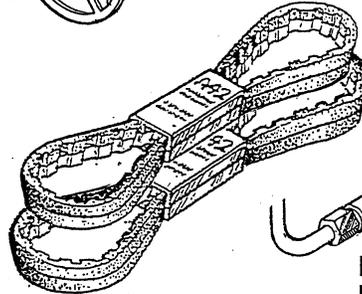


FUEL LIFT PUMP

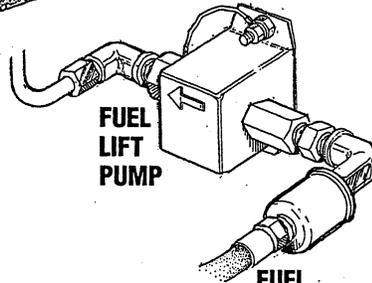


FUEL INLET FILTER


FUEL SYSTEM HARDWARE KIT

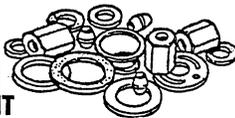

IN-LINE FUEL/WATER FILTER CARTRIDGE (PRIMARY)

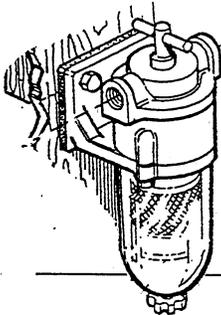


GLOW PLUG

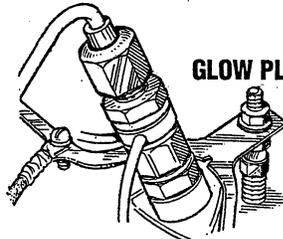

INJECTOR

MOLDED HOSE KIT IN A CANVAS CARRYING BAG

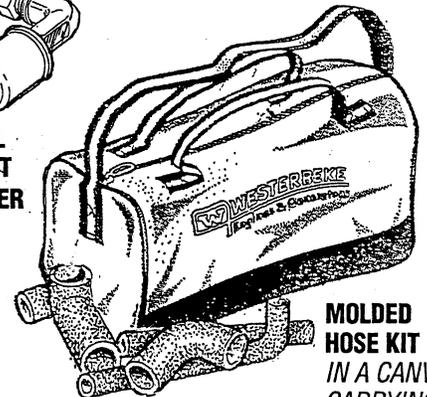

SPARE PARTS KITS


WESTERBEKE also offers two Spare Parts Kits, each packaged in a rugged hinged toolbox.

Kit "A" includes the basic spares.

Kit "B" is for more extensive off-shore cruising.

KIT A

- ZINC ANODES
- DRIVE BELTS
- OIL FILTER
- FUEL FILTER
- HEAT EXCHANGER GASKET
- IMPELLER KIT
- FUEL SYSTEM HARDWARE KIT
- FUEL PUMP INLET FILTER

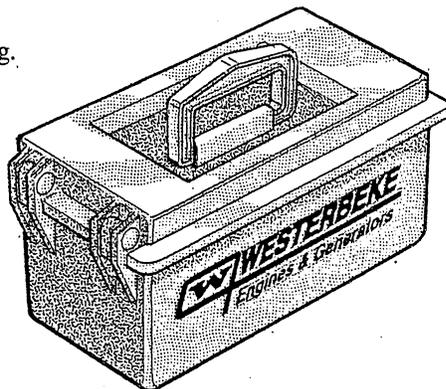

KIT B

- ZINC ANODES
- DRIVE BELTS
- OIL FILTER
- FUEL FILTER
- HEAT EXCHANGER GASKET
- IMPELLER KIT
- INJECTOR
- OVERHAUL GASKET KIT
- GLOW PLUG
- FUEL SYSTEM HARDWARE KIT
- FUEL PUMP INLET FILTER

WESTERBEKE
Engines & Generators



1206-4/2015